

AFMS F-CLMF

Airplane Flight Manual Supplement

- Radio KRT2

- ACL Anti-collision light

- Flarm

- XC Vario



KRT2

VHF Communication Transceiver

Standard, Landscape, Portrait



- Part No 285942 = KRT2-S (Standard)
- Part No 285945 = KRT2-L (Mini Landscape)
- Part No 286048 = KRT2-P (Mini Portrait)
- Part No 285946 = KRT2-RC (Remote Control)

Operation- and Installation Manual



Record of Revisions

Revision	Date	Chapter(s)	Topic
0100	24.03.2017	all	Initial Release
0101	16.01.2018	6.3, 7.1	FCC supplements, chap. 7.1 (periodic maintenance) amended

Table 1: Record of Revisions



Service Bulletins (SB)

Service Bulletins must be inserted in the manual and added to this table.

No SB	No Rev.	Release date	Date added	Name

Table 2: Service Bulletins



Table of Contents

Record of Revisions	2
Service Bulletins (SB)	3
1. GENERAL	7
1.1 Symbols	7
1.2 Acronyms	7
1.3 Customer Service	8
1.4 KRT2 Transceiver properties	8
2. Installation limitation	9
2.1 Installation	9
2.2 Aircraft Radio	9
2.3 Quantitative safety objective identification	9
2.4 Deviations	9
3. CONTROL general	10
3.1 Control elements overview	10
3.2 Display	14
3.3 Menu levels	15
3.4 Self-test error reports	15
4. OPERATION	16
4.1 General	16
4.2 ON / OFF switching	16
4.3 Frequency selection	17
4.3.1 Direct frequency selection	17
4.3.2 Frequency selection from favourites list	18
4.3.3 Storing and editing favourites	18
4.4 AUD – Audio menu	20
4.4.1 VOL – Volume	20
4.4.2 SQ – Squelch	20
4.4.3 VOX – Intercom voice trigger level setting	21
4.4.4 Manual Intercom	21
4.4.5 TXm – PTT switch selection	21
4.4.6 INT – Intercom volume	22
4.4.7 EXT – External audio input volume	22
4.4.8 DIM – Display brightness	22
4.4.9 BAT – Battery test	23
4.4.10 SIT – Side tone	23
4.4.11 MIC – Setup	23
4.4.12 Menu lock	25
4.5 DUAL watch	26
4.6 Transmitter Operation	27
4.6.1 Two PTT configuration	28
4.6.2 Self-Test monitor	28
4.6.3 Optical side tone	28
4.7 Resetting to factory settings	29
4.8 SET UP - Menu	29
4.8.1 ERASE – erasing of favourites list	30
4.8.2 Channel spacing	30
5. Remote Control	31
6. Installation	32
6.1 Installation hints	32
6.2 Telecommunication data	32



6.3	FCC related issues	33
6.3.1	Radiofrequency radiation exposure Information:	33
6.3.2	Note:.....	33
6.3.3	Compliance.....	33
6.3.4	Modifications.....	33
6.4	Scope of delivery	34
6.5	Unpacking and inspecting the equipment	34
6.6	Mounting	34
6.7	Electrical connections	34
6.7.1	Microphone connection.....	35
6.7.2	Speaker & open microphone:	36
6.7.3	Earphone connection.....	36
6.7.4	External audio input.....	36
6.7.5	Speaker connection	36
6.8	Final audio setup	37
6.8.1	For glider flights	37
6.8.2	For motor gliders dual seaters	37
6.8.3	For motor planes	37
6.9	Wiring	38
6.9.1	Wire Gauges.....	38
6.9.2	Connector Pin-Configuration.....	38
6.9.3	General hint.....	39
6.9.4	Wiring diagrams.....	40
6.9.5	Wiring for dynamic microphones.....	46
6.9.6	Connection support ST1 mating connector	46
6.10	Antenna.....	47
6.10.1	Antenna selection	47
6.10.2	Installation recommendation	47
6.11	Microphone general.....	48
6.12	Post-Installation Check.....	48
6.13	Starting Up	49
6.14	Accessories	49
6.15	Drawings	49
6.15.1	Dimensions.....	49
6.15.2	Installation directions	51
7.	Maintenance	52
7.1	Periodic Maintenance	52
7.2	Repair.....	52
7.3	Cleaning	52
8.	ANNEX.....	53
8.1	Frequency / channel - schedule.....	53
8.2	Technical Data	54

List of Figures

Figure 1: KRT2-S Front View	10
Figure 2: KRT2-P front view	11
Figure 3: KRT2-L front view	12
Figure 4: KRT2 active & standby frequencies	26
Figure 5: KRT2 TX & RX operations	27
Figure 6: Headsets.....	35
Figure 7: Connector pinout.....	38
Figure 8: Remote control pinout.....	38



Figure 9: KRT2 connection support layout 1	46
Figure 10: KRT2 connection support layout 2	47
Figure 11: KRT2-S Dimensions.....	49
Figure 12: KRT2-P, KRT2-L dimensions	50
Figure 13: KRT2-RC remote control dimensions	50
Figure 14: KRT2-S panel cutout.....	51
Figure 15: KRT2-P, KRT2-L panel cutout.....	51




List of Tables

Table 1: Record of Revisions	2
Table 2: Service Bulletins.....	3
Table 3: Acronyms	7
Table 4: KRT2 Controls.....	13
Table 5: KRT2 Display	14
Table 6: KRT2 Menu Levels.....	15
Table 7: KRT2 Built In Tests (BIT)	15
Table 8: KRT2 Menu Lock	25
Table 9: Telecommunication data	32
Table 10: Scope of delivery.....	34
Table 11: Frequencies	53
Table 12: Technical Data General.....	54
Table 13: Technical Data Transmitter	55
Table 14: Technical Data Receiver	55

1. GENERAL

This manual contains information about the physical, mechanical and electrical properties as well as a description for the operation and installation of the VHF airborne transceiver KRT2.

1.1 Symbols

	<p>WARNING Non-compliance may cause personnel injury due to radiation or fire.</p>
	<p>CAUTION Non-compliance may cause damage or incorrect operation of the transceiver.</p>
	<p>INFORMATION</p>

1.2 Acronyms

Abbreviation	Description	Definition
BAT	Battery (Electrical)	Check DC source
DIM	Dimming	Display brightness setting
EXT	Exterior / External	External Audio input level setting
INT	Intercom level	Intercom volume level setting
PTT	Push-To-Talk	Transmitter activation
RC	Remote control	KRT2-RC remote control for KRT2
SQ	Squelch	Squelch setting
VOX	Voice operated intercom	Voice level setting for intercom activation

Table 3: Acronyms

1.3 Customer Service

In order to process returned units most expeditiously, please use the email support.krt@tq-avionics.com on the website www.tq-avionics.com



Suggestions which will improve this manual are very much appreciated at: info@tq-avionics.com.



Information concerning software updates is available under support.krt@tq-avionics.com.

1.4 KRT2 Transceiver properties

- VHF airborne transceiver
- Frequency range 117.975 to 137.000 MHz
- Channel spacing 8,33 / 25 kHz (2278 channels)
- Fast channel selection
- 2 separate microphone inputs (standard or dynamic)
- Audio-input for other audio devices
- Installation: Standard panel cut-out (57 mm)
- Integrated Intercom
- 100 user definable frequencies with up to 8 character/spaces identifiers



Continuous transmissions will be turned off after 2 minutes.
(Stuck microphone function)



2. Installation limitation

The conditions and tests required for (E)TSO approval of this article are minimum performance standards. It is the responsibility of those installing this article either on or within a specific type or class of aircraft to determine that the aircraft installation conditions are within the (E)TSO standards. (E)TSO articles must have separate approval for installation in aircraft.

2.1 Installation

For installation hints, data, electrical connections and mounting instructions please see section 6 “[Installation](#)”.

2.2 Aircraft Radio

The KRT2 was designed as a closed unit for installation in a cockpit environment of the general aviation with the following limitations:

Installation must be in accordance with the applicable EASA or FAA requirements.

The classification of the software approval is suitable for aircraft type.

The failure classification identified in accordance with FAA AC 23.1309-1D is:

MINOR

The Software level is:

LEVEL D

2.3 Quantitative safety objective identification

In accordance with EASA regulations, the goal is a safety objective for the VHF COM radio in the KRT-2 VHF Communication Transceiver System of $1 \times 10E-4$ per flight hour for Class I airplanes and $1 \times 10E-5$ per flight hour for Class II Airplanes.

2.4 Deviations

None

3. CONTROL general

3.1 Control elements overview

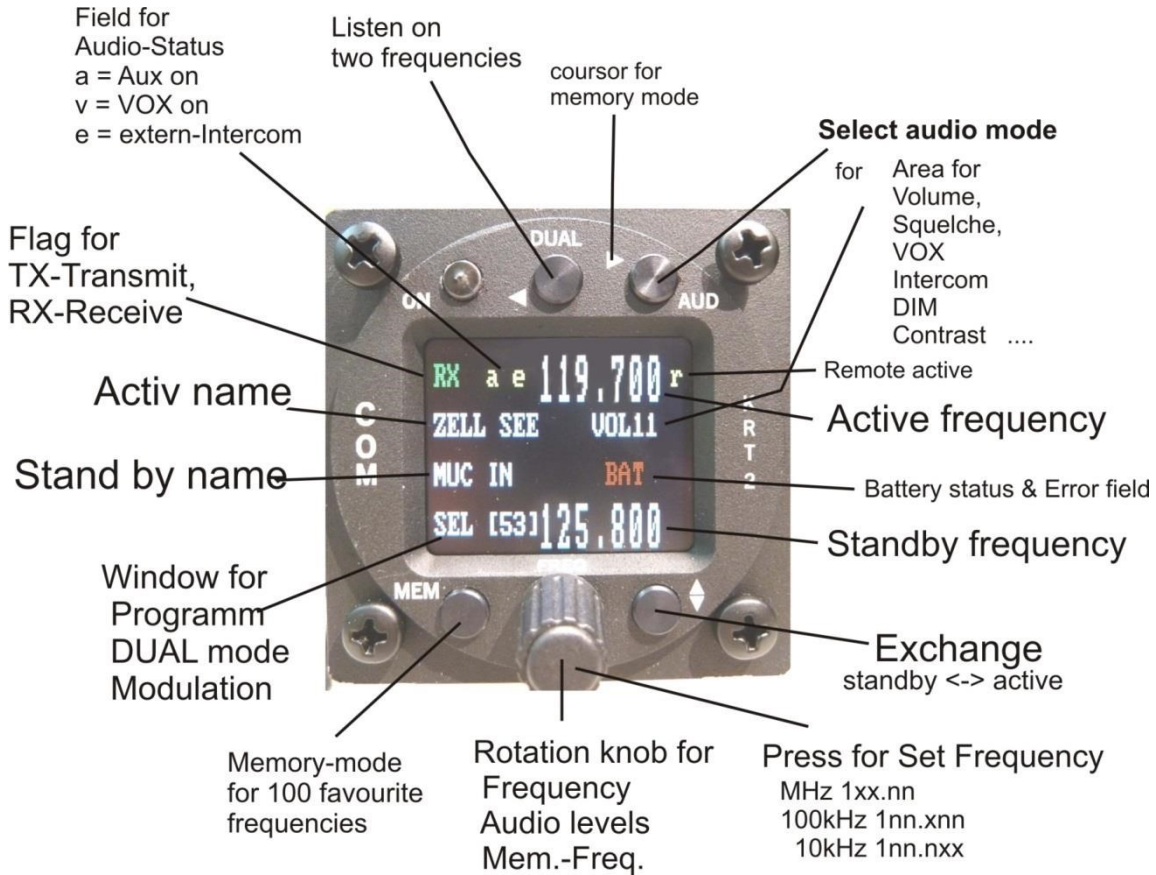


Figure 1: KRT2-S Front View

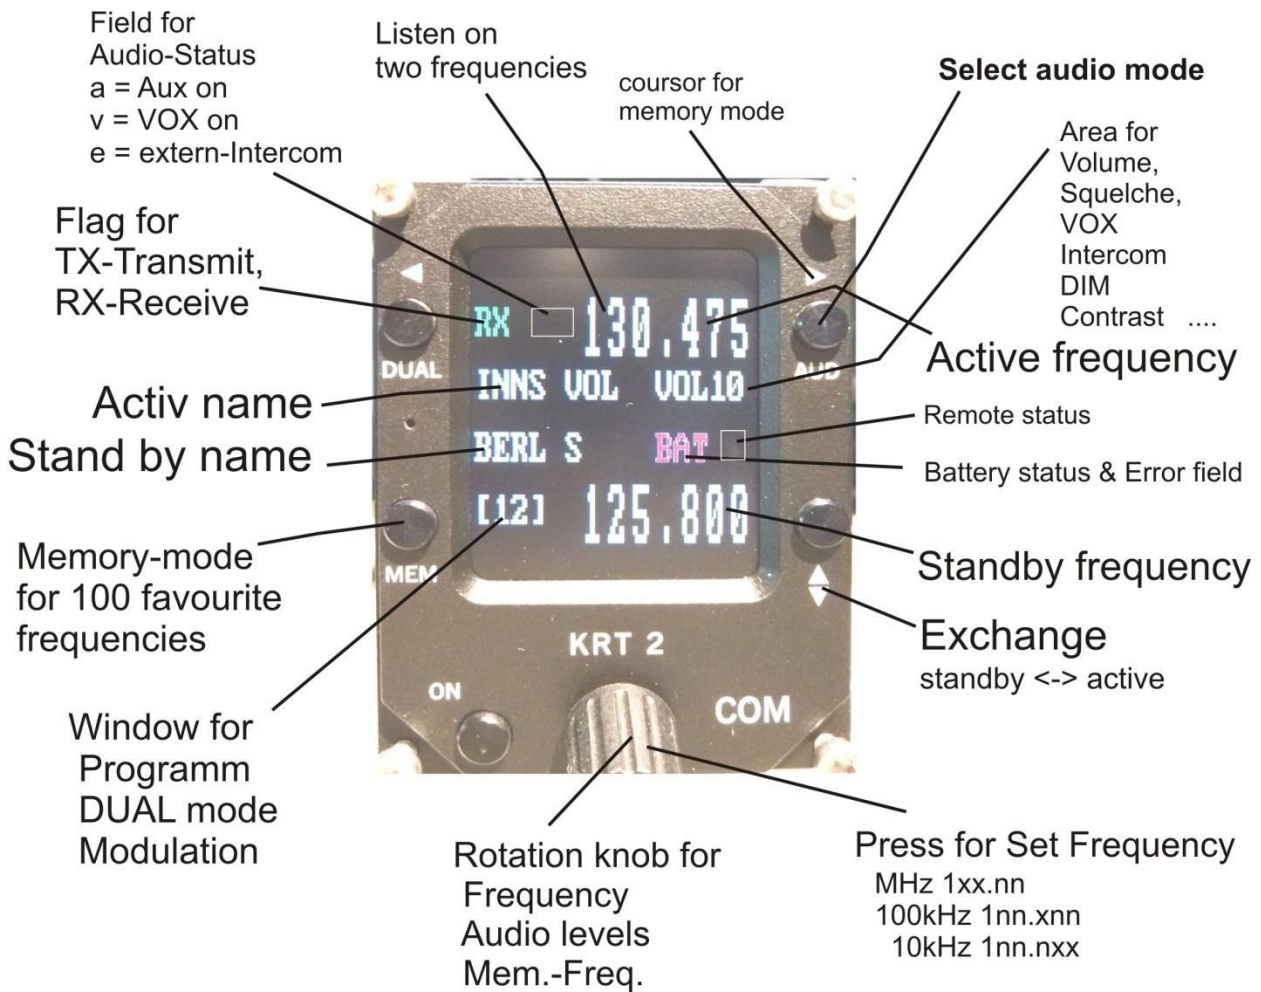


Figure 2: KRT2-P front view

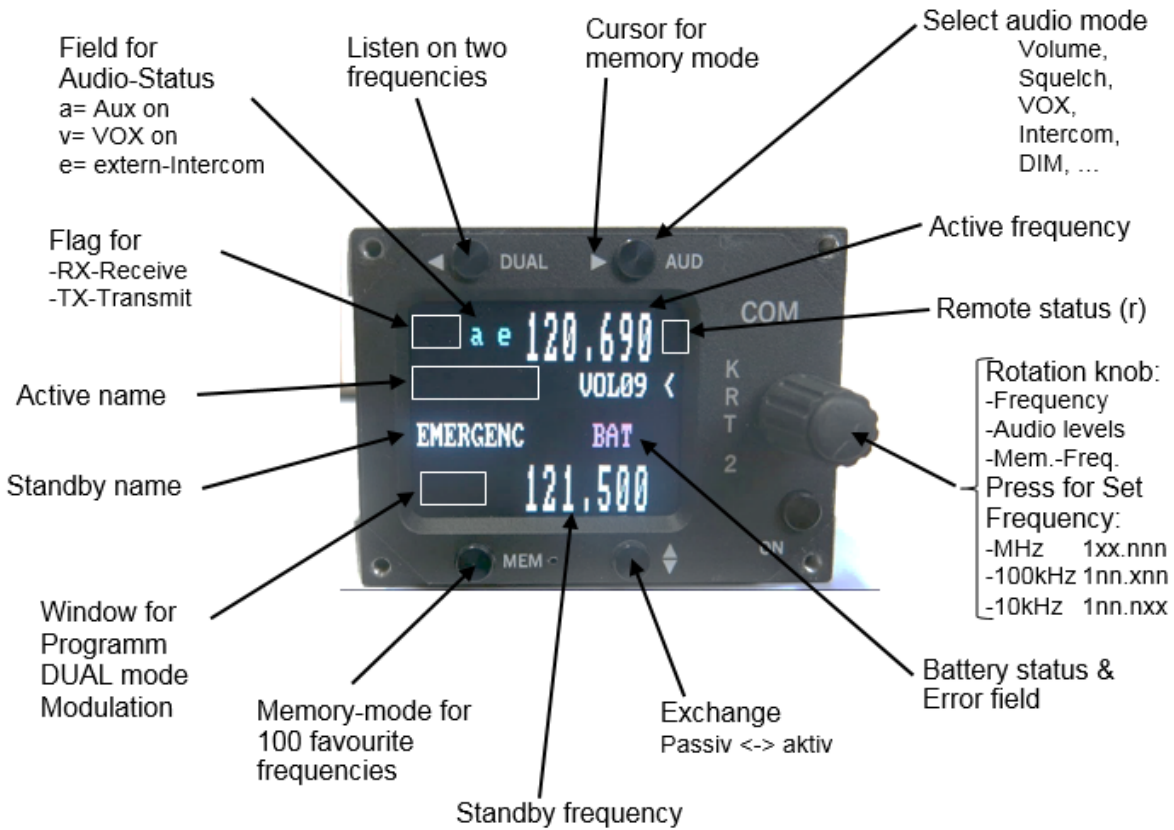


Figure 3: KRT2-L front view

All functions and performances of the normal size unit (57mm round) and the Portrait format (Mini) are identical.

The only differences are the text areas on the display Compare Figure 2: KRT2 Front view and Figure 3: KRT2 Mini Front view for more details.







Button	Function	Usage
	ON / OFF	Self-locking switch
	DUAL WATCH	<ol style="list-style-type: none"> Scanning between the Active and Standby frequencies Positioning cursor to the left when programming the station identifier
	AUDIO SELECT	<ol style="list-style-type: none"> Stepping through the audio menus VOL SQ VOX TX INT EXT DIM CON SIT and MIC Positioning cursor to the right when programming the station identifier
	FAVORITES	<ol style="list-style-type: none"> Frequency and identifier selection from the favourites list Programming of favourites (frequency and identifier)
	EXCHANGE	Exchange of the Active and Standby frequencies
	TURNING KNOB	<p>Pressing for Selection of the frequency range to: MHz, 100kHz, 10kHz</p> <p>Toggles between frequency and identifier when programming the favourites</p> <p>Sets all variable values in any menu</p> <ul style="list-style-type: none"> Volume setting of headsets and speakers MHz/kHz selection of the standby frequency in 3 different ranges Favourite selection Alpha character selection when programming favourites Change of microphone settings

Table 4: KRT2 Controls



3.2 Display

Indication	Meaning	Remark
RX	Reception	RX is displayed during reception (squelch opened)
TX	Transmission	Transmitter operates normally
Te	Transmitter was turned off automatically after 2 min continuous operation	
119.700	Frequency	
ZELL SEE	Frequency station identifier	Displayed when frequency and identifier are stored in the favourite list
MUC IN	Standby frequency station identifier	Displayed when frequency and identifier are stored in the favourite list
VOL	Receiver volume level (default after a certain time delay)	When AUD is pressed the corresponding Audio Menu item and setting is displayed
DUAL	DUAL function is activated	DUAL function is deactivated by DUAL, FREQ or MEM
[03] (MEM)	Favourite list index (0-99)	When frequency and identifier are stored at this index ex:[03] they are displayed
125.100 upper	Active frequency	Displayed in large fonts.
125.800 lower	Standby/DUAL - frequency	Displayed in large fonts.
<	The pointer indicates what the turning knob will change VOL SQ VOX.....etc. Standby frequency	Arrow is positioned according to the button pressed (AUD or FREQ)
BAT	Supply voltage is low <10,5V	Low or defective battery / generator.
A-match	Antenna error	Bad antenna match
a v e	Status of certain Audio menu functions	a = AUX. Input active v = VOX active e = external Intercom switch active

Table 5: KRT2 Display



3.3 Menu levels

Displayed	Signification	Remark
VOL	Volume	Default
SQ	Squelch	
VOX	Voice operated	Voice operated intercom
DIM	Display brightness	
BAT(tst)	DC source check	
INT	Intercom - Volume	
EXT	Volume of external devices	
TX(m)**	PTT button selection	Left/Right/Both
SIT	Side tone	During transmitter operation
MIC	Setup-Menu for Microphones	Service-Menu without radio operation.

Table 6: KRT2 Menu Levels

3.4 Self-test error reports

Display	Meaning	Remark
Er_PLL	Internal error, no transmission	Return the transceiver for maintenance
Er_ADC	Internal error, operation limited	Return the transceiver for maintenance
Er_FPA	Internal error; unit not usable	Return the transceiver for maintenance
Er_I2C	Internal error; unit not usable	Return the transceiver for maintenance
Er_D10	Internal error; reception corrupt	Return the transceiver for maintenance
Error_3V3	Internal error; unit not usable	Return the transceiver for maintenance
Key_Block	Internal error; unit not usable	Return the transceiver for maintenance

Table 7: KRT2 Built In Tests (BIT)



4. OPERATION

4.1 General

In the normal operating mode in which the turning knob always is connected to the volume (VOL). The normal operating mode can be left by pressing the AUD, FREQ or MEMORY button.

When not in the normal mode and there is no pilot action for more than 10 seconds the unit returns to the normal mode.

4.2 ON / OFF switching

ON / OFF switching is done by pushing the self-locking switch.

After power up the following display will be displayed:



Device-name
KRT2

Software Version e.g. V8.6

(Example)

The unit starts in the normal operating mode using and displaying the data last used.

4.3 Frequency selection

There are two different frequency selection methods:

- Direct Input
- Selection from the favourite list (index 0-99)

4.3.1 Direct frequency selection



The Standby-Frequency is set with the turning knob in 3 different ranges. The selected range is highlighted and can be changed with the **FREQ** button. Frequency ranges are:

1xx.nnn

1nn.xnn

1nn.nxx

Press the **FREQ** button once or several times until the desired frequency range is highlighted. The unselected digits are displayed as dotted digits.




When the pointer is not next to the Standby Frequency window, it will be repositioned with the first pressing of the **FREQ** button.




Exchanges the Active and Standby frequencies.

When the Exchange button is not pressed, the Standby frequency display will return to its normal appearance after 20 seconds.

4.3.2 Frequency selection from favourites list

By pressing  and operating the turning knob a specific favourite list position can be accessed [xx] (xx = index 0 ... 99). When frequency and station identifier have been defined, they will be displayed in the Standby and station identifier windows.


The favourite identifiers list can be sorted in alphabetic order (see 4.3.3 Storing and Editing Favourites).

To exit this menu, press the  key.

The selection procedure can be terminated with either the AUD or FREQ buttons. Without pressing any of these buttons the unit will return to its normal operating mode after about 15 seconds.

4.3.3 Storing and editing favourites

Any displayed Standby Frequency can be associated with an identifier and both can be stored as favourites in the favourite list. The frequency and identifier of a favourite can be edited.

First press the  button and go to the desired favourite list position to be edited using the turning knob (index [00 ...99]).

Press the MEMORY button a second time and „-EDIT-„ will show up in the program window.



In the identifier window a blinking cursor will show up under the extreme left character.

The turning knob selects the desired character. The AUD button positions the cursor one character to the right. The DUAL button positions the cursor one character to the left and simultaneously erases this character.

The station identifier can consist of a maximum of 8 characters/spaces.


To change frequency just press the FREQ button and follow the normal direct input procedure to edit the frequency, see “4.3.1 Direct Frequency Selection”.

To quit the frequency input press the MEMORY button again in order to go to the station identifier win-


down for editing the identifier if required. Using the buttons FREQ and MEMORY it is possible at any time to toggle between identifier and frequency inputs.

Keep in mind the watch dog timer which will terminate the input mode after 15 sec.

Termination and Save

To save the entered identifier, press the  key as the cursor is on the station name, "SAVE" will appear and the system will go back to the favourite selection.

A **sorting process** can be activated by pressing the "MEM" button again from the EDIT-mode.

"SORT?" will be displayed for 20 seconds and it should be activated with  or skipped with "MEM".



When activated all 99 favourites will be sorted in alphabetical order and the process can take several minutes.

During the sorting procedure "RUN nn" is displayed in the program window, with nn being the running index.

After a 6 seconds time out or by ending the sort, the transceiver resumes its normal operating mode.


When the "MEM" button is pressed at the time "RUN nn" is displayed, the sorting procedure is terminated. The favourite list is then partially sorted and the transceiver resumes its normal operating mode.

Example:

1. Button MEM -> SEL [23] = Select location
2. Button MEM -> -EDIT- = Input of name
 - Rotation knob to select the characters
 - For cursor use (AUD) (DUAL)
 - Frequency setting -> press rotating button
 - Use button MEM to go back to -EDIT-
3. Button  -> shortly SAVE -> back to 1.) (do nothing = cancelling)
4. Button MEM -> question for "SORT?" Yes = , No = MEM or do nothing.

If the function is abandoned before completion, it will be exited after a 6 seconds time out with no activity. The data will not be saved.

4.4 AUD – Audio menu

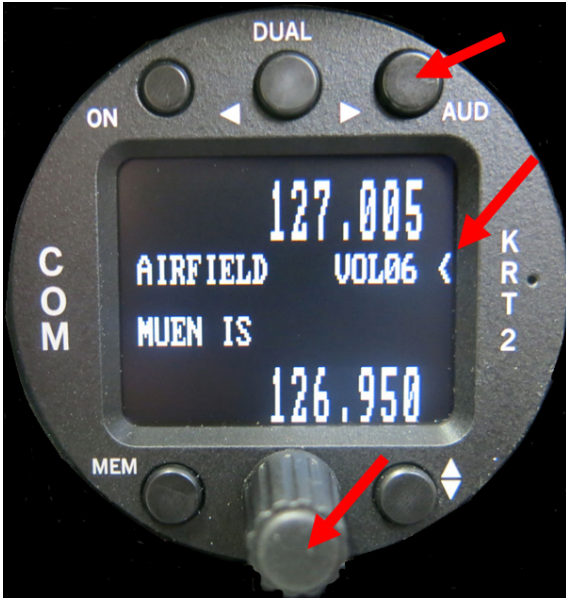

Any action in the Audio Menu requires the pointer (<) to be next to the Audio menu window (see picture). When the pointer is next to the Standby frequency window, the pointer can be repositioned by pressing the AUD button once.

VOLnn is the Audio menu default display. No action on any control for more than 10 seconds will result in the VOLnn being displayed.

Audio Menu items can be accessed in the following order by repeatedly pressing the AUD button.

VOL (default), SQ, VOX, TXm**, INT, EXT, DIM, BATtst, SIT, MIC

4.4.1 VOL – Volume

Turning the turning knob changes the receiver volume.

VOLnn Range: 01 – 20



The VOL setting only concerns the receiver and not the intercom system. Intercom volume values are set in the INT audio menu.

4.4.2 SQ – Squelch

Pressing the AUD button once enables the turning knob to change the squelch level values.

SQnn Value range: 01 – 10

The Squelch setting is depending on several factors.

For engine driven airplanes an initial setting of 3-5 is recommended. For gliders a setting of 2 is recommended. The lower the Squelch level value the higher is the input sensitivity. A high sensitivity setting is susceptible to noise from other sources like ignition strobe-lights etc.



Standard SQ-level is 3..5. Higher setting will suppress weaker input signals. 01 = Squelch off, 02 = for long range. Squelch does not influence the intercom system.



4.4.3 VOX – Intercom voice trigger level setting

Pressing the AUD button twice enables the turning knob to change the voice level which triggers the intercom.

The intercom voice trigger level must be set to a value which prevents normal cockpit noise from being heard in the earphones. The intercom system should only be activated when talking at a normal voice level into the microphone.

The higher the trigger level the louder the voice must be in order to trigger the intercom system. VOX on condition is indicated by flag “v”.

VOXnn Range: 01 – 10



The larger the value, the louder one must speak in order to activate the Intercom connection.
VOX on condition is indicated by flag “v”.
For installation with loudspeakers set VOX to 10 to switch it off.

4.4.4 Manual Intercom

With cockpit loud background noise or with uncompensated microphones the Intercom can be controlled manually by using an external switch. Therefore the VOX system must be activated permanently by selecting VOX: 01.

To turn off the Intercom the talk switch (default closed) must be opened, which will be indicated by “e”.

Deactivation of the intercom is done with an opened external microphone button (Ground connection to pin 12), this is indicated with an “e” on the display.

This mode only works with a deactivated external audio input (see “4.4.7 EXT – External Audio Input Volume”).

In gliders the VOX has to be set to 10 in order to disable the speaker control.

4.4.5 TXm – PTT switch selection

Pressing the AUD button three times enables the turning knob to enable certain PTT switches.

On transmission the microphone which is related to the PTT-L/R will be enabled. The equivalent indication is TX (TXm**), TX1 (TXm*-) TX2 (TXm-*).

On transmission the PTT-L/R related microphone will be the only one activated.

TXm** *- Left / -* Right / ** Both

4.4.6 INT – Intercom volume

Pressing the AUD button four times enables the turning knob to set the intercom volume.

INTnn Range: 1 – 9

4.4.7 EXT – External audio input volume

Pressing the AUD button five times enables the turning knob to set the external audio input volume. External audio inputs can be audio alarms, voice alarms, Vario, etc. The required level is 200mVpp (6Vpp max).

Activation occurs for settings >00 and will be indicated by “a”.


- 00 = turning off,
- 01 = lowest gain without threshold
- 09 = highest gain with interference suppression threshold.

EXTnn Range: 0 - 9

4.4.8 DIM – Display brightness

Pressing the AUD button six times enables the turning knob to set the display brightness.

DIMnn Range: 01 – 16

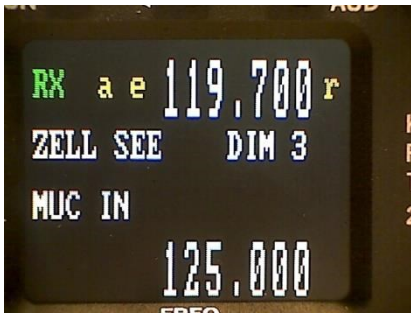

The display consumption at 12V is between 10mA und 70mA. In addition the battery voltage in Volts is indicated.

4.4.9 BAT – Battery test

Pressing the AUD button seven times enables the turning knob to display the battery voltage.



4.4.10 SIT – Side tone

Pressing the AUD button eight times enables the turning knob to set the side tone volume (for gliders has to be set to 01).

SITnn Range: 1 – 9

4.4.11 MIC – Setup

This mode is for microphone setup and test only without using the PTT. It is a service mode and it is not designed for normal operation.

Each of the two microphone input channels can be configured individually, which enables different microphone types to be used.

A maximum of two microphones of same type may be connected to each microphone input channel (see chapter 6.6.1 Microphone-Connection).

The MIC – Setup is the last item of the Audio menu and can be accessed by pressing the AUD button nine times.



By pressing the DUAL button repeatedly L, R and AUTO can be selected (Left "L" in the example).

L: Left = Left microphone.

R: Right = Right microphone.

AUT: Auto mode.



Menus L and R:

By means of the turning knob the displayed microphone input channel amplifier gain (MIC-level 01 = low gain, 09 = high gain) can be selected individually. The microphone signal level is dynamically displayed with a bar and a numeric value.

The initial MIC-level should be 0,5; the engine should be running, use a headset or earphone and speak at a normal voice level to fine-tune the MIC-level. Whenever a new MIC level is selected, the dynamic bar indicator should then be at about 50%.

Special hint:

During MIC-Setup activation, the speaker state will be taken into account (SQU on/off), if the state is active an acoustic feet-back may be heard.

The range of the MIC-level for standard microphones is 1 to 9.

MIC levels 10 and 11 are special settings for low microphone levels like dynamic micro-phones often used in gliders.

- Level 10 is used for non-amplified Electret microphones with an 8 volt supply voltage.
- Level 11 is for dynamic microphones only.

For high gain selection (> 9) the use of side tone can lead to a feedback at transmission. In that case the side tone should be set to SIT=01.

The new values will be stored upon exiting the microphone setup menu. AUTO must be selected in order to activate the AUTO menu, else use L or R to activate the Left and & Right microphone menu.

Menu Auto

In the AUTO mode only the left microphone impedance is measured. When a dynamic microphone is recognized, the left channel is switch to 11, the right channel is unaffected. When returning to the standard configuration, the original L and R values are restored.



A simultaneous operation on Electret and Dynamic microphones is not possible (there is just one DC source for both ports). For dynamic mode this source must be turned off automatically.



The display of microphone type (lower right side) is done upon activation of the microphone menu. When an Electret microphone is recognized, the values used are the one that were saved upon leaving the menu.




The MIC submenu is terminated by pressing the AUD button.

Additional indications

Additional indications for test purposes:

- RxS : RF receiver input level (from Automatic Gain Control)
- Ext : External audio input voltage
- Mic : d (dynamic) or s (standard)

The microphone type is displayed when the microphone menu is entered.

This Symbol  appears on right side of STBY Frequency in AUTO-mode if the dynamic microphone has been recognized and activated after transmission. In that case the intercom voice triggering level VOX is set to 10 (switched off).

To reactivate the intercom after a microphone change, a short press of the PTT is required.

4.4.12 Menu lock

For school operation the menus area TXm to MIC-setup can be locked.

To lock or unlock the button combination AUD & FREQ has to be pressed simultaneously for > 2 seconds.

In lock condition there will be displayed an “L” at the right end of the third line. To store those condition the setting of SQnn should be changed before turning off.

VOL	SQ	VOX	TXm	INT	EXT	DIM	CON	SIT	MIC
Available			Locked and not available						

Table 8: KRT2 Menu Lock


4.5 DUAL watch

Because the communication transceiver KRT2 contains only one receiver, DUAL watch is achieved by alternating between the Active and Standby frequencies.

The DUAL button activates and deactivates the dual watch function. Deactivation also can take place by pressing either the **FREQ** or **MEMORY** buttons.

The frequencies to be watched should be selected prior to the DUAL watch selection.

The frequencies to be used must be selected before using dual watch and the squelch level **SQ** must be set to 02 or more in order to eliminate noise. Scanning Frequencies is only possible when differentiating between radio noise and radio transmissions.

	<p>There must be radio noise suppression in order to recognize reception. The squelch level SQ must be set to 02 or higher.</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------

When DUAL watch is activated, "DUAL" is displayed on the lowest line. The pointer next to the DUAL display indicates the frequency on which there is reception.

The Active frequency always has priority and the receiver remains on the active frequency as long as there is reception on this frequency.

When there is no reception on both the Active frequency and the Standby frequency the receiver scans both frequencies 5 times per second.

When reception is detected on the Active frequency the reception on the standby frequency is interrupted until the end of the reception.

When a reception is detected on the Standby frequency the receiver stays on the Standby frequency, however it switches to the Active frequency every 2 seconds for a duration of 0.3 seconds. If a signal is detected on the active frequency the reception will be switch to that frequency.

The pointer next to the DUAL display indicates on which frequency there is reception.



Figure 4: KRT2 active & standby frequencies

Standby and Active frequencies can be exchanged when in the DUAL mode. The transmitter operates on the Active frequency only.

Summary:

- Select the Standby frequency to be monitored in addition to the active frequency.
- With the AUD button and turning knob set SQnn to 2 or higher.
- With the DUAL button activate the DUAL watch function.
- When there is no reception on both the Active frequency and the Standby frequency the receiver scans both frequencies.
- When scanning the Active frequency always has priority.
- Deactivate the DUAL watch function with the DUAL, FREQ or MEMORY buttons.

4.6 Transmitter Operation

The unit transmits on the active frequency (upper line) as long as a PTT (press to talk) switch is pressed.

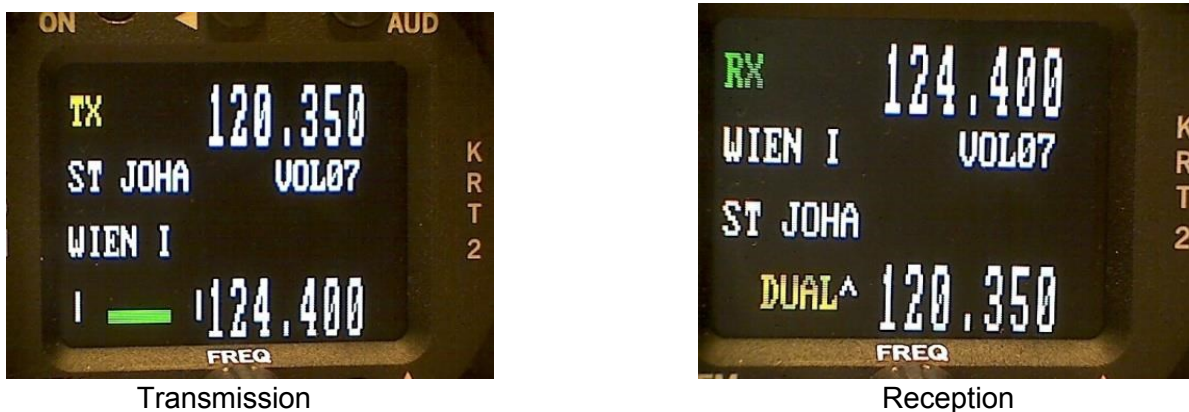


Figure 5: KRT2 TX & RX operations

“TX” indicates normal transmitter operation.
 “RX” indicates a receiver operation.

In the lower left corner of the display the carrier modulation is dynamically displayed. It corresponds to the side tone which is not available on gliders when no earphones are in use.

In order to avoid the blocking off of the frequency by unintentional long transmissions (stuck microphone) the transmitter is switched off after two minutes and the display changes from „TX“ to „Te“. To resume transmission the PPT switch first must be released and then be pressed again.

While transmitting the external audio input will be turned off automatically and the microphone input, selected during the pre-setting in the TXm-menu, will be selected.

The differential speaker output will be turned off to prevent an audio feedback to the microphone. For the same reason; the speaker is turned off when the intercom (VOX) is active.

The output for the headset will carry the side tone.



4.6.1 Two PTT configuration

There are two different PTT assigned for each of the left and right side microphones. This enables the deactivation of the unused one preventing additional noise and unintentional talking on transmission.

In case there is just one PTT and multiple headsets in use both the PTT-L and PTT-R must be tied together, see chapter “4.4.5 TXm – PTT Switch Selection”.

4.6.2 Self-Test monitor

Software diagnostics operate continuously in the background in order to test the system.

The field for battery status & error (see Control Elements Overview) is used to display warnings and in case of hardware failure, different error reports will be displayed here.

The warnings are:

BAT Low battery voltage (becomes active < 10,5V)

At transmission

A-match Bad antenna match or defective antenna.

Also while transmitting the TX-flag (left top) will change to:

Te if transmission time has exceeded (> 2 minutes).

All other reports starting with Er_.... Indicating a major hardware failure and consequently the radio has to be returned to the factory.

4.6.3 Optical side tone

Especially when used in gliders, where headsets are generally not worn and thus no side tone is heard, it is very helpful to see if the microphone is operating properly.

At left lower side, there is a modulation indicator that depicts the voice level. When there is no modulation it becomes a small dot approximately in the centre.

Also if it lays far off centre, it indicates that there is bad antenna matching.



4.7 Resetting to factory settings

Returning to the factory settings can only be initiated during power-up.

To do this, during power-up the MEM and DUAL buttons must be pressed simultaneously and the display will show "SET DEFAULTS". When the buttons are released the resetting to the factory settings takes place. When resetting is completed "DONE" is displayed.

4.8 SET UP - Menu


During power-up the MEM button must be pressed.

The message "protect mode" is displayed, just wait until it changes.

There are two functions available within the Set-up menu:

- ERASE – Erasing of the favorites (frequency and identifier)
- Channel Spacing – 25kHz / 8,33kHz


Programming of the Set-up is done with the lower 3 buttons next to the symbols (Exit, S, E). Their function is described on the display.

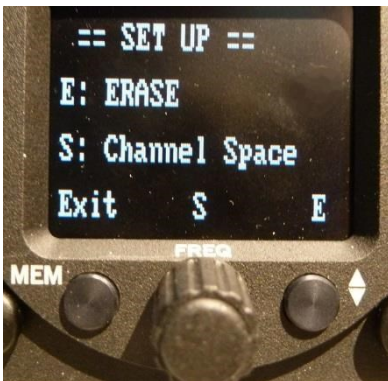


To exit the SET-UP menu, use the MEM button. The unit remains powered and the normal operating mode is resumed.

4.8.1 ERASE – erasing of favourites list

When in the SET UP – Menu select the “ERASE” sub-menu with the buttons next to the symbols (Exit, Y).

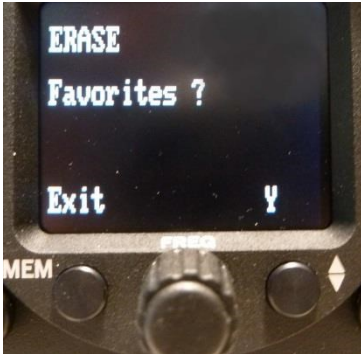

Erasing the favourites (frequency and identifier) starts after the  button has been pressed again. This procedure may last a few minutes during which time the message “ERASING” is displayed. All INFO frequencies and identifiers that were stored on delivery are lost and all favourite index positions (01 to 99) are available to the user.

4.8.2 Channel spacing

When in the SET UP – Menu pressing the FREQ (S) button will change the KRT2 into the Channel Space submenu.



The desired channel spacing then can be selected and the (X) then indicates the actual channel spacing.



5. Remote Control

Tandem-seat airplanes can be equipped with the KRT2RC Remote Control Unit. The remote control unit is connected to RS232 serial interface and enables selection of the most common settings like frequency, volume, squelch, VOX, display contrast and brightness. In addition the unit has an independent memory for the favourites (frequency and identifier).

Transmission error messages are displayed in the error window in the third line:

- R_Time = Time-out transmission error
- R_ChkS = Checksum error
- R_Cmd = Unknown command
- R_Char = Data error
- R_Freq = Wrong Frequency

The error message disappears when a valid command or a new frequency has been input, or after 5 seconds.

Remote control unit errors do not interfere with the KRT2 transceiver operation.

Data transmission between the transceiver KRT2 and the remote control unit (KRT2-RC) is checked once a minute. An "r" in the upper right corner is displayed when there is no malfunction.

The KRT2-RC can also operate the KRT2 in a fully stand-alone mode such and allow the KRT2 to be installed anywhere in the aircraft, and be operated remotely by the KRT2C. This feature will be useful in tandem aircraft, or aircrafts with very little space behind the instrument panel.

ACL

K-DUO

Operation :

Switch ON = flash active

Switch OFF = flash not active

Emergency operation :

In the event of a malfunction or failure, the system must be switched off immediately and must stay off for the remaining flight time. Never switch on the system again inflight, after or while persisting errors.



Caution, high intensity optical radiation!



Handling on ground: do not look directly into the light!



Avoid direct contact with water!



OPERATING MANUAL FLARM COLLISION WARNING UNIT

Status


Software Version 5.00 (March 01, 2011)

This is a translation of the German manual.

© 2003-2011 FLARM Technology GmbH
Baar-Switzerland
www.flarm.com
info@flarm.com

1. Welcome to the FLARM user community

Thank you for purchasing FLARM, a modern low-cost collision-warning unit for sailplanes and light aircraft. The main task for FLARM is to support the pilot, while he scans the airspace ahead with his own eyes. FLARM is simple to use and does not distract the pilot from the main business in hand.

 Sport flying is an activity that is associated with considerable risks for crew, passengers, third parties and other objects. **In order to make full and safe use of FLARM, it is absolutely essential to be fully aware of the risks, operating conditions, restrictions and limitations associated with the use of FLARM, ensure a proper installation and do regular software updates. This includes familiarity with and observance of this Operating Manual and the Installation Manual.** Additional configuration information can be found in the 'Data Port Specifications' document, e.g. how to suppress additional data at the serial port what might be required in international championships.

We welcome user feedback and reports, suggestions for improvements, and pictures that will help us make further improvements to FLARM. Feedback reports should give a detailed description of the situation, quoting the Hardware and Software versions used, plus the flight data records in IGC format with short time recording intervals.

The latest version of this handbook and other related documents can be found at the Website www.flarm.com. This Website also has answers to Frequently Asked Questions.

This Website also carries announcements when new software versions or functions become available. If you enter your name on the mailing list, you will automatically receive notification of changes as and when they happen: https://lists.flarm.com/mailman/listinfo/user-list_flarm.com

To use existing devices in March 2011 or later, it is required to update the software to version 4.00 or higher. Use the free PC installation software available at www.flarm.com. You need a PC with Windows 98 / ME / 2000 / XP with a serial port or a suited USB-serial converter plus a data-power cable like the one used for most IGC flight recorders. This cable connects the PC to FLARM and supplies FLARM with power. Ensure you have configured the correct PC COM-port, only use the Power/Data-port on FLARM (not the Extension-port) and know the printed device serial number. After completion of the software update, use the same PC software to load the most recent obstacle file to FLARM; this file is available on www.flarm.com as well. Then use the PC software to configure the flight recording functionality accordingly. In case of questions, contact your FLARM dealer.

 Software-Versions 5.x must not be used after **March 01, 2015**. Before this date, you must update the device in order to use it in the air.

2. How it works

FLARM receives position and movement information from an internal 16 channel GPS receiver with an external antenna. A pressure sensor¹ further enhances the accuracy of position measurements. The predicted flight path is calculated by FLARM and the information - including a unique identifier - transmitted by radio as low-power digital burst signals at one-second intervals. Provided they are within receiving range, the signals are almost at the same time received by further aircraft also equipped with FLARM. The incoming signal is compared with the flight path predicted by calculation for the second aircraft. At the same time, FLARM compares the predicted flight path with known data on obstacles, including electric power lines, radio masts and cable cars.

If FLARM determines the risk of dangerous proximity to one or more aircraft or obstacles, the unit gives the pilot warning of the greatest danger at that moment. The warning is given by a whistle sound (beep) and bright light emitting diodes (LED). The display also gives indication of the threat level, plus the horizontal and vertical¹ bearing to the threat. During circling flight different methods of calculation are employed to those used during straight flight.

The GPS and collision information received from other aircraft can also be made available for third party equipment (e.g. external display, speech synthesizer, PDA) via a serial data output. Such equipment is available from a number of manufacturers.

¹ Requires Hardware Version 2 or higher. However, the vertical bearing on the serial data output is also available to third-party equipment on Hardware Version 1.

The operating range is very dependent upon the antenna installation in the aircraft. The normal range is about 2 km. In individual cases the range may be up to 5 km, which can be valuable for fast sailplanes with a speed of up to 250 kt, providing the pilots in both aircraft with a warning enabling visual identification and reaction to the potential hazard. The effective range can easily be verified with an online tool². Warnings are given in order of the time remaining before a potential collision, not the geometrical distance. The first warning level for another aircraft or an obstacle is delivered when less than 18 seconds remain to the possible collision; the second warning level is delivered when less than 13 seconds remains; the third level when less than 8 seconds remains.

The warnings continue as long as FLARM calculates a threat of collision. The warning level may decline or be cancelled, depending upon the prediction. The warnings are selective; they are only issued if the calculation reveals a high probability of collision in the near future. The alarm sensitivity can be configured with the PC.

In addition, FLARM operates as an IGC-file compatible flight recorder including the G-record. Flight logs can be read out either via the SD-card or via the data port and a suitable cable. The SD card does not need to be carried on during the flight. FLARM is optionally also available as diamond-level IGC-*approved* Flight Recorder, optionally with Engine Noise Level sensor (ENL).

With the standard April 2008 obstacle databank there is memory for more than 50 hrs of flight recording at a 4s interval. Use the free PC-software to download flights to your PC and to properly configure your device for flight recording. Flight recording automatically starts when the aircraft is moving and ends when the unit is switched off. Switching off the device during the flight for a longer period results in separate flight record files. Allow at least 2 minutes (if the interval is 4s, our recommended value) after landing before you switch off the device else you lose the last part of the flight. Allow more time after landing if the interval is higher. When the memory is full, the oldest data is overwritten. Always download your flight data before you update the obstacle databank or the software.

FLARM applies for the radio communication between the units a proprietary patent- and copyright-protected protocol. It is not public, but FLARM Technology offers a license contract where it is accessible in the form of a compatible core design ready for integration into 3rd party systems. These systems are officially declared as FLARM-compatible. Any non-licensed use, dissemination, copying, implementation or reverse engineering of the FLARM radio communication protocol, the FLARM hardware and software or parts of it is forbidden by law and will be prosecuted. FLARM is a registered trademark and can not be used without license.



3. General Advice on Operation

This Manual must be carried on board the aircraft. When permanently installed in an aircraft, the 'AFM Supplement' must also be carried in the aircraft.

In flight the pilot must have direct sight of and immediate access to a switch or circuit breaker that disconnects FLARM from the aircraft electrical power supply, without affecting other essential aircraft systems. This might be necessary if the pilot suspects that FLARM may be interfering with another on-board system, the suspected presence of smoke, the smell of smoke, or flying in a country where the use of FLARM is not permitted.

FLARM must not be operated at night or with night vision systems.

FLARM will not operate without adequate GPS signal strength. Correct antenna installation has a great effect on the transmission/receiving range.

FLARM is not able to measure its own RF-receiver sensitivity. When the pilot detects that other aircraft are received only when very close or not at all and when the RF-antenna's positioning is clearly not the cause of it, the device must be checked by the manufacturer.

² www.flarm.com/support/analyze


Installation and operation must be on the basis of non-interference with and no hazard to the existing suite of other certified equipment necessary for safe flying operation, or installed to comply with official requirements. Installation and operation must comply with official regulations and requirements. It is recommended that the FLARM, GPS and radio antennae are all installed as far away as practicable - but at least 25 cm from - susceptible aircraft systems such as GPS antennae and the magnetic compass.



The unit must be protected from solid particles or liquids, should not be exposed in use to temperatures below -10°C or above $+60^{\circ}\text{C}$, or stored at temperatures -20°C or above $+70^{\circ}\text{C}$, because this may cause irreparable damage. On the ground, the unit should be protected from exposure to long periods of direct sunlight, because it is likely to be overheated. Also avoid static discharges to the radio antenna.

 

Details on correct installation will be found in the Installation Manual.

4. Operating Modes

FLARM operates in two modes, *Nearest* and *Collision*. The change from one mode to the other is effected by a two-second push on a button followed by a brief visual confirmation from the unit. After the change has been signalled, the current mode selected is not displayed. When switched on, the unit is in *Nearest* mode.

 The warnings given are identical in both modes, and generally relate to an immediate threat to which the pilot should make an immediate and appropriate reaction. The assumption has been made that following a warning it will take up to 12.5 seconds from the time that the other aircraft is seen, until a change in flight path has removed the threat³.

When operating in the *Nearest* mode, the unit also reports the presence of other aircraft operating in the vicinity, even though calculations indicate that they do not represent a threat. The information displayed is limited to a configurable radius (default is three kilometres) and a vertical separation of 500 m. When no aircraft was displayed so far but one is received now, this is signalled with a click-sound. Only one single aircraft is indicated, with Hardware Version 3 or later in green. The optical signal is static (no flashing); the threat intensity is not indicated and there is no sound warning. As soon as FLARM detects the risk of a collision it automatically switches to *Collision* mode, followed by automatic reversion to *Nearest*. The choice of mode is presented, such that immediately after pressing the key, the display presents a diverging pattern (Hardware Version 1 and 2: ; version 3: ).


When operating in the *Warning* mode a red LED lights up only if the calculation predicts a threat. Warnings are always shown by flashing LEDs, the threat level being shown by the number of LEDs illuminated, by the frequency of flashes, and the simultaneous sound signal (beep). Selection of this mode is indicated by a upwards converging pattern (Hardware Version 1 and 2: ; Version 3: ) immediately after pressing the selector key.

In both modes the pilot can **suppress the display and the acoustic warning**: after a double push FLARM will suppress all visual and acoustic signals relating to traffic, obstacles or other threats. The act of selecting suppression is followed by a descending tone. A further double-push reinstates the *Collision* mode at once and is followed by a rising tone. While warnings are suppressed, FLARM nevertheless continues to transmit signals for reception by other aircraft.

³ These times were published in 1983 FAA Advisory Circular 90-48-C and were based on military data. They relate to fast jet pilots with no on-board warning systems for other traffic and hazards. The assumption was made that only one aircraft takes avoiding action. Of the 12.5 seconds, five seconds were to recognise the threat of collision and four seconds were required to decide upon avoiding action. No information is available as to whether these times are applicable to light aircraft, sailplanes or helicopters, when using a warning system.


5. Front Panel

The dark grey front panel of Hardware Versions 1 and 2 has a push-button, four green Status-LEDs, ten red collision warning LEDs and four red LEDs for vertical¹ position indication.

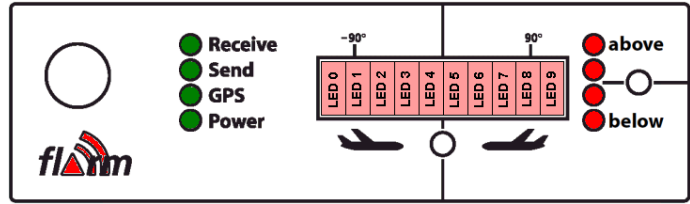

Push-button 4 green LED (Status) 10 red LED (horizontal) 4 red LED (vertical¹)

The front panel of Hardware Version 3 has a push-button, four green Status-LED, twelve bicolour LED for horizontal and four bicolour LED for vertical position indication. Depending on the threat caused by other aircraft or obstacles the LED show up red or green. Also included is a microSD-reader which can be used for updates, downloads and configurations. microSD cards are not included, but widely available in electronic and mobile phone shops.

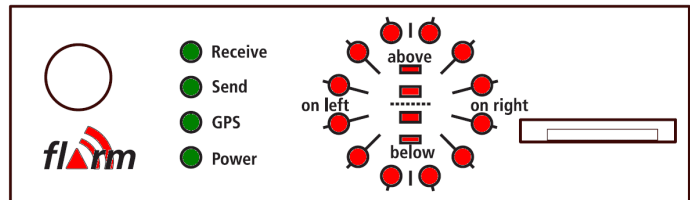

Push-button 4 green LED (Status) 12 LED (horizontal) 4 LED (vertical) all bicolour microSD reader

6. Start-Up

FLARM is always switched on if the unit is connected to an adequate power supply.

Immediately after it has been switched on there follows a one-second long beep while a start-up pattern might be shown on the LED, followed by a binary presentation of the Hardware-Version installed during the system self-test. The self-test mode lasts around 8 seconds, depending upon the size of the obstacle data bank.

0x01 Hardware Version 1 (only red)



0x02 Hardware Version 2 (only red)

 


This is followed by another one-second beep, followed by a binary presentation of the Software-Version:

- Hardware Versions 1 and 2: LED0 to LED3 represent the major versions, LED4 to LED9 the minor versions. Everything is shown in red.

If the Software Version is not indicated and the beep sound is not emitted, the unit is not ready for operation.

Software Version 1.xx (operational only to April 2005)



Software Version 2.xx (operational only to Feb 2006)



Software Version 3.xx (operational only to March 2008)



Software Version 4.xx (operational only to Feb 2011)



Software Version 5.xx (till March 01, 2015)



Then FLARM shifts to normal operation and waits until it has acquired an adequate GPS position fix. When switching on, this procedure can take *several minutes*. Without a proper GPS position fix, the unit is not ready for operation. Before departure the pilot must ensure that at least the Power-, GPS- and Send-LED are all continuously on. This state must be preserved during the whole flight to ensure correct operation.

7. Fault Finding

If a fault should occur during start-up self-test or subsequent operation, then all four green status LEDs will flash in unison for 30 seconds, while the red collision LEDs will give a binary indication of the most serious fault. The fault display can be stopped before 30 seconds has elapsed by pushing the button.

For safety reasons FLARM will not start up if there is a fault. FLARM may not be used if a fault has been reported or indicated. Limited operation is possible if there is an indication of a problem with the obstacle data bank or data recorder.



0x11	Fault: Software out of date (needs GPS reception)	No operation	
0x12	Fault: Software integrity violation (only IGC-units on F5)	No operation	
0x21	Fault: Low Voltage	No operation	
0x31	Fault: Internal GPS communication	No operation	
0x32	Fault: Faulty GPS configuration	No operation	
0x41	Fault: Internal radio communication	No operation	
0x51	Fault: General internal communication	No operation	
0x61	Fault: Flash memory	No operation	
0x71	Fault: Pressure sensor	No operation	
0xF1	Fault: Other fault	No operation	
0x81	Indication: No obstacle data bank	Operation possible	
0x91	Indication: Flight recording not possible	Operation possible	
0x93	Indication: ENL recording not possible (only IGC-units on F5)	Operation possible	
0xA1	Indication: Error with SD-card configuration file	Operation possible	

The communications faults itemised above indicate if internal modules within FLARM are not communicating correctly with each other. For reasons associated with the system, reduced radio range cannot be detected by a single unit alone.



Software-Versions 5.x must not be used after March 01, 2015. Before this date, you must update the device in order to use it in the air. An update with the same functionality can be downloaded free of charge. Users will be able to load the software with the aid of a suitable power supply/data cable (not supplied). This operation requires the user to have the unit Serial Number to hand. Software validity has to be time-limited to ensure that all FLARM units are mutually compatible and that updates include the latest obstacle data.

8. Status-Display

The green Status Display LEDs operate as follows; normal operating mode is underlined:

- **Receive:** Lights up when a signal is detected from another aircraft less than the configured range (default is 3 km) away, with a height separation of less than 500 m; otherwise the LED is dark. If the warning is temporarily suppressed (see below) but signals are still received from other aircraft, then the LED flashes.
- **Send:** Lights constantly during operation and indicates that the on-board FLARM is transmitting. Transmission requires GPS reception.
- **GPS:** Lights constantly during operation (with very brief interruptions once per second). If the LED is constantly dark and flashes briefly once per second, then there is no GPS reception. When switching on this condition can take several minutes.
- **Power:** Lights constantly during operation. If the LED flashes, then the power supply has dropped below 8 V. FLARM will not operate below 8 V DC.

The 'Receive' and 'Send' LEDs give no indication of FLARM's transceiver range.

9. Push Button⁴

The push button can be used to select the following functions:

- **Brief Push** (<0.8 s) changes the volume from <loud> to <medium> to <quiet> to <silent> (and <loud> again). A short sound is emitted at the new volume selected. The default setting is <loud>.
- **Longer Push** (2 s) changes mode between <Nearest> and <Collision> when airborne. Visual confirmation. Default setting <Nearest>.
- **Longer Push (5 - 8 s, only on the ground)** activates the receiver self-test: Two seconds after the button is released, FLARM will show how many other FLARM are received with reduced sensitivity (50% of the normal range). It will then emit a long beep and light one vertical LED for every 10 and a short beep and one horizontal LED for every single received aircraft (e.g. 14 received FLARM is: "beeeep bep bep bep", with one vertical and 4 horizontal LED's). After the self-test, FLARM switches back to normal operations. Note that for other units to be displayed these must be running.
- **Double Push** suppresses optical and acoustic warnings for five minutes. Suppression is followed by declining melody, normal setting followed by a rising melody. A double push terminates the suppressed operation at once.
- **Long Push** (>8 s): Re-boot. This procedure is recommended if a fault is apparent. No confirmatory sound signal.
- **Very long push** (>20 s) brings FLARM back to the factory settings. The very long push deletes all configurations that have been loaded by the user. No confirmatory sound signal.

⁴ Activate the external display update by pushing the button four times in rapid succession. For details see the Installation Manual.


10. Aircraft Anti-Collision Warnings

An illuminated red LED indicates the approximate bearing to an aircraft currently posing the biggest threat of collision. The bearing is *relative to the track*. This indication is inaccurate if there is a strong wind, if the aircraft is in a sideways yaw, or if ground speed is very low (e.g. when a helicopter is in the hover). The display is refreshed every second.

The unit emits an audio warning (beep) tone at the same time as the flashing red optical warning. The time between the warning and possible collision is brief, just a few seconds. Warnings of fixed obstacles are given slightly earlier.

Horizontal bearing indicated on Hardware Versions 1 and 2

Each red LED is allocated to a sector of sky around the aircraft horizontal plane in a side view. The aircraft centreline is indicated by a white line above and below the mid point (between LED4 and LED5). A short white line is located above LED1 and LED8, marking 90° left and right.

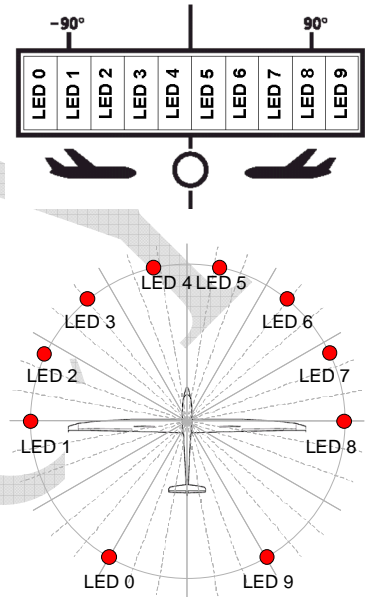

- LED 0 ~210° quadrant rear left
- LED 1 270° hard left 9 o'clock
- LED 2 296° left 10 o'clock
- LED 3 321° left 10-11 o'clock
- LED 4 347° front left 11-12 o'clock
- LED 5 13° front right 12-1 o'clock
- LED 6 39° right 1-2 o'clock
- LED 7 64° right 2 o'clock
- LED 8 90° hard right 3 o'clock
- LED 9 ~150° quadrant rear right

Horizontal bearing indicated on Hardware Version 3 and later

The twelve bicolour LED show a compass rose, i.e. the birds view on the traffic situation. 'Top' is track-up according the own aircraft. Each LED covers an equal-sized horizontal sector of 30°.

Danger from the front or side

If the threat of collision with another aircraft is from the front or side, but not from the rear, then the threat level will be flagged up by the display. If the threat is moderate (less than 18 seconds to possible collision), a single LED lights up; in the case of a medium threat (less than 13 seconds) then two diodes light up; if the threat is imminent (less than 8 seconds) three LEDs. The threat is at the centre of the illuminated block. The flash and beep frequency increases with the threat.

 

Moderate threat from ca. 3 o'clock
(less than 18 seconds to calculated collision)

Slow flash at 2Hz



Moderate threat from 1 to 2 o'clock
(less than 18 seconds)

Slow flash at 2Hz

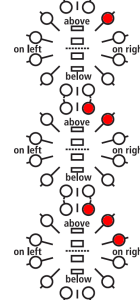


Medium threat from 1 o'clock
(less than 13 seconds)

Medium flash at 4Hz




Immediate threat from 1 to 2 o'clock
(less than 8 seconds)

 Rapid flash at 6Hz




Danger from the rear

If the threat is from behind, then the threat level on Hardware Version 1 and 2 is given only by the frequency of LED flashes, not the number of LEDs activated.

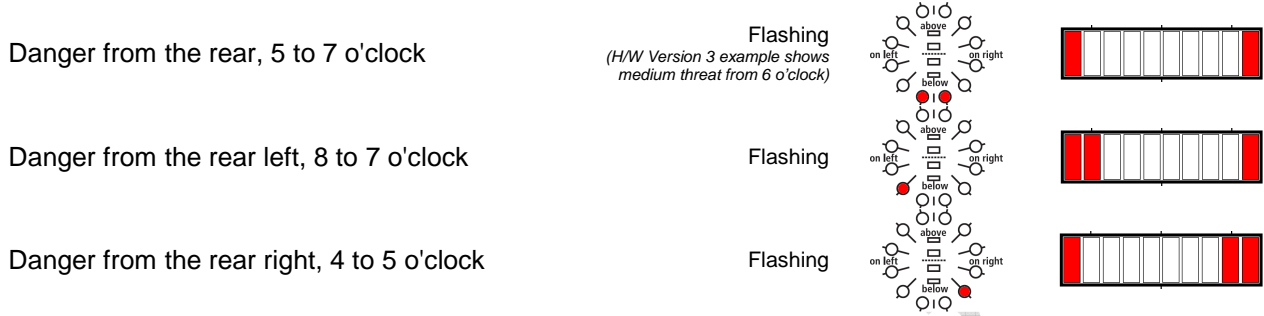


Vertical indication

The vertical bearing is indicated by a vertical¹ line of four red LEDs and show the bearing relative to a horizontal plane. This is independent of the aircraft's climb angle. The uppermost or lowest LEDs illuminate when the bearing exceeds 14°. The LED flash frequency is identical and synchronous with that of the horizontal display.

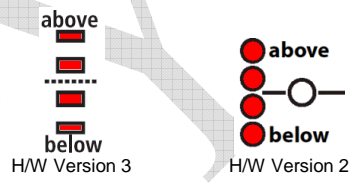

Traffic indication (only in Nearest-mode)

In Nearest-mode the closest aircraft is shown as long as no warning is necessary. Traffic indications don't flash, there is no sound and the distance is not shown. Hardware Version 3 and higher show traffic indications in green.

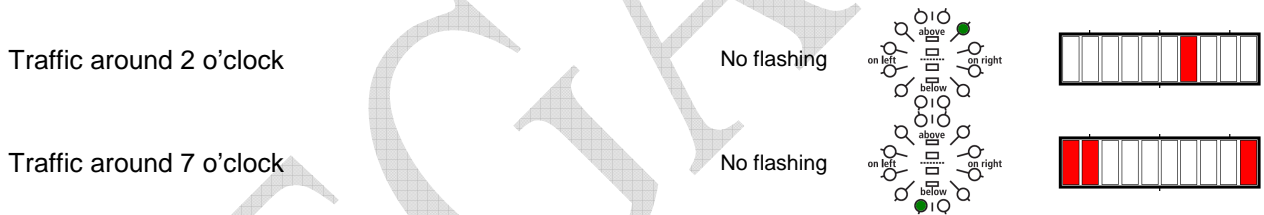

11. Obstacle Warnings

The standard obstacle data bank (as of Feb 2011) has about 35,000 coordinates locating about 11,000 Alpine obstacles⁵. This data bank is loaded by FLARM at manufacture; subsequently the user may upload but not alter up-dated information via a PC. Special data banks, corrections and amendments can be reported to us.


The FLARM display flashes when there is warning of obstacles. The warning always relates to obstacles straight in-line with the current flight heading. In other words there is no horizontal or vertical bearing given to the obstacle. The threat level depends upon the time remaining to impact; the flash and beep frequency increases with reducing distance from the obstacle. The display is refreshed every second.

A warning is given if an aircraft flies under a cable or power line.

An acoustic warning (beep) is given at the same time as the flashing fixed obstacle warning. The time between warning and possible collision is brief, just a few seconds. However, warnings are given of fixed obstacles earlier than those for other aircraft.


Hardware Versions 1 and 2 show obstacles as follows:

- Moderate threat
(less than 18 seconds to calculated collision)
- Medium threat
(less than 13 seconds)
- Immediate threat
(less than 8 seconds)

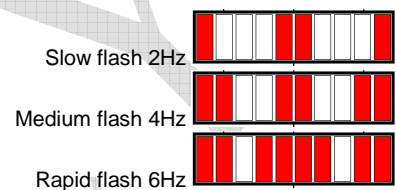

Hardware Versions 3 and later show obstacles as follows:

 A toggling pair of two LED's is shown, with the toggle frequency depending on the threat.



⁵ For details on the data sources and status, consult the 'Obstacle Data Format Specifications' manual.

Neither FLARM Technology nor these organisations accept any responsibility for the accuracy, completeness or up-to-date status of the data or any direct or indirect damage resulting from using such data. Official data sources only collect data which have been reported by those who own, construct or operate constructions which represent an obstacle, and do not check these reports.

12. Operating Limitations



FLARM is designed and built as a non-essential 'situation awareness only' unit to only support the pilot, and cannot always provide reliable warnings. In particular, FLARM does not give any guidance on avoiding action. Under no circumstances should a pilot or crewmember adopt different tactics or deviate from the normal principles of safe airmanship. Even with FLARM installed, you remain responsible for flying the aircraft and ensure the safety of passengers and other traffic. The use of FLARM is solely at the discretion of the commander and his delegated crew member. Operation must be preceded by thorough familiarisation by the commander or his delegated crew member with the Operating Manual.

FLARM will only give warnings of other aircraft that are likewise equipped with a compatible unit. FLARM does *not* communicate with Mode A/C/S transponders and is not detected by ACAS/TCAS/TPAS or Air Traffic Control. Likewise FLARM does not communicate with FIS-B, TIS-B or ADS-B.

Compatible FLARM units must be within range in order to provide a warning. The range is very much determined by the type, installation and position of the radio antennae, plus the relative positions of the two aircraft. Under *optimum* conditions the internal antennae can give a head-on range of up to 5 km; normally, range is about 2 km, which is adequate for light aircraft and sailplanes. The radio signals can only be received by *line of sight*. There is no FLARM signal between two aircraft on opposite sides of the same mountain.

FLARM has to know its *current* position in order to operate. For this reason, FLARM will only operate in the presence of good quality three-dimensional GPS reception. GPS reception is greatly influenced by the installation and position of the antenna, and aircraft attitude; furthermore, it requires that the US-american GPS-system is fully operational. This is particularly true during turns, when flying close to mountain slopes and in areas known for poor reception. If the installation is poor the GPS signal quality may be reduced. In particular, there can be rapid degradation of height calculations. FLARM resumes operation as soon as the GPS reception quality is adequate.

Movements calculated by the GPS relate to a fixed system of *terrestrial* coordinates. In strong wind there may be a substantial difference between aircraft heading and track, leading to a distortion of the threat bearing. If the wind speed is one third of True Airspeed (TAS) and the yaw-free aircraft Heading is 90° out of wind, then the threat indication displayed has an error of about 18°. If the wind is very strong, the Track can deviate up to 180° from Heading. Under such circumstances and when circling, the calculation and warnings given are unusable.

When close up, when two aircraft are at the same or similar height, or GPS reception is poor, the vertical bearing indication is imprecise and fluctuates.

FLARM calculates the predicted flight path of the aircraft to which it is fitted for less than the next 20 seconds. This prediction is based on immediate past data, current position- and movement data, plus a movement prediction model that is *optimised for the respective user*. This forecast is associated with a number of uncertainties that increase with an extension of the forecast time. There is no guarantee that an aircraft will actually follow the predicted flight path. For this reason, the warning issued will not be accurate in all cases. In sport flying flight path predictions of more than 30 seconds are *unusable*. This is particularly true for sailplanes and hang gliders. For this reason, the radio range is generally adequate.

Warnings are given at very short notice, i.e. the warning is given within a time frame of from a few seconds to 18 seconds, depending upon the closest predicted proximity, as calculated. The threat intensity (pitch of the warning tone, LED block width, flash interval) flags up the threat (collision time point), but not the geometric distance. FLARM only issues a warning if the calculation forecasts a *considerable* threat. For this reason, it is usual - depending upon the mode selected - that no warning is given about the presence of other aircraft, in spite of the fact that signals have been correctly received.

When a number of moving threats or fixed objects are within range, then FLARM gives warning only of the most dangerous in accordance with the threat calculation algorithm. The pilot is unable to confirm receipt of this warning, nor is he able to call for presentation of further threats. In spite of the warning issued for one other aircraft or fixed objects, it is quite possible that there are several further aircraft or fixed objects that represent a greater threat than that which has been signalled. When the unit simultaneously detects a threat from moving and fixed obstacles, then the warning issued relates to the earliest likely collision.

FLARM indicates the rough position of the aircraft or obstacle that currently represents the biggest threat, in accordance with the algorithmic calculation; FLARM Hardware Version 2 (and onwards) also displays a vertical bearing. In the case of fixed obstacles, the unit does not signal a bearing. FLARM does not indicate where the closest proximity may occur, nor does it signal avoiding action. Whether and how avoiding action is taken is solely a matter for the pilot, who must base his decision on his own observation of the airspace. In taking his decision, he must comply with the Rules of The Air and ensure that no additional hazard is caused by his action. Depending upon the phase of the flight, FLARM uses different forecasting methods, movement models and warning calculations, to provide the pilot with the best possible support without causing a distraction. For example, when a sailplane is circling, the system sensitivity is reduced. These models and processes are optimised, but are nevertheless a compromise. As seen by the pilot these models are the source of 'false alarms'; i.e. FLARM would give warnings of 'threats' that would not subjectively be regarded as a real danger. It is quite possible that FLARM will not give warning of the highest threat, or will give any warning at all.

Obstacle warnings (e.g. cables, antenna masts, cable cars, avalanche dynamite wires, power lines) are dependent on the information having been stored *correctly* in the internal data bank. The unit cannot give warning of any fixed object that has either been incorrectly stored, or not stored at all. No data bank is complete, up-to-date and correct. Obstacle information stored has usually been simplified; for example, FLARM assumes that a power wire is slung absolutely straight between two fixed points with no sag. Likewise, data for power lines and cable cars does not include all intermediate masts. In addition, FLARM data does not include terrain data and no such warnings are possible.

FLARM radio communications take place in a license-free band in which there is general freedom to transmit and receive. This means that the band is also available to a number of other uncoordinated users. FLARM has no exclusive right to the use of this band and there is no guarantee that FLARM will not be subject to interference by third parties.

There are national differences in frequency allocation and operating conditions between countries. The aircraft commander and user are solely responsible for ensuring that their use of FLARM conforms with local regulations. No radio licence is required for FLARM in Switzerland, Germany and France.

The radio transmission protocol employed places *no limit* on the number of units that may be operated within a given range. However, an increasing number of units within range is associated with a reduction in the probability that a single coded signal will be received ('graceful degradation'). The probability is small that subsequent signals will not be received from the same transmitter. FLARM is designed to receive and process signals from up to 50 aircraft within range. A high number of FLARM units within range has no effect on range.

The transmitter has ***no effect*** on what the receiver in the other aircraft does with the data. It is possible that this data may be captured and stored by other aircraft, or by ground stations, or used for other purposes. This opens up a range of possibilities, some of which may be in the pilot's own interest, (e.g. automated generation of an sailplane launch logging system, aircraft tracking, last position recovery), while others may not be (e.g. detecting tailing of other aircraft, airspace infringements, failure to take avoiding action prior to a collision). When FLARM makes a transmission, the signal also bears a unique identification code that can trace to the pilot or aircraft registration. The user can - even though this is not recommended - configure the unit so that identification is generated randomly and alters at one-minute intervals, making a back-trace difficult.

Operation of FLARM is limited to non-commercial day VFR flights. FLARM may not be used for navigational purposes or aerobatics.

At present FLARM has not been certified or tested in line with the usual aviation procedures (e.g. DO-160E). The FLARM software development is *roughly* in-line with Level E of DO-178B; i.e. a partial or total failure of FLARM will have no effect upon the safe operation of the aircraft, nor does it increase crew workload.

Operation of FLARM is forbidden in the USA or Canada or in aircraft registered in the USA or Canada.

The association FLARM Technology, FLARM Technology GmbH, its associates, owners, staff, management, development team, suppliers, manufacturers and data suppliers accept no responsibility for any damage or claims that may arise from use of FLARM.

English XCVario user manual

XCVario 57mm and 80mm
Series 2020-2023

Software Version: 23.0911



Manual edition 2.57

info@xcvario.de

Other versions of earlier software statuses at:
<https://github.com/iltis42/XCVario/tree/master/handbook>

Table of Content

1. Description.....	9
2. Features.....	11
3. Overview.....	12
4. Operation.....	13
5. Device Management.....	14
5.1. Software Update.....	14
5.2. Debug/Reset.....	14
5.3. Backup/Restore.....	14
6. Airliner-Style Display.....	15
6.1. Variometer.....	15
6.2. Mean Climb.....	15
6.3. Speed to Fly.....	16
6.4. Altimeter.....	16
6.5. Flaps recommendation.....	16
6.6. Battery Indicator.....	16
6.7. Temperature.....	17
6.8. MC-Wert.....	17
6.9. Wireless Symbol.....	17
6.10. CAN Symbol.....	17
7. Pointer Display.....	18
8. FLARM.....	20
9. Configurations and Router.....	21
9.1. XCVario, Wireless Navi and FLARM.....	22
9.2. XCVario, wired Navi (Kobo, OpenVario, IPX, etc) and FLARM.....	23
9.3. Two XCVario, two Wireless Navis and FLARM.....	24
9.3.1. Front device.....	24
9.3.2. Secondary device.....	24
9.4. Two XCVario, two wired Navis (OV, Kobo, XCTouchNav, etc) and FLARM.....	25
9.4.1. Front device.....	25
9.4.2. Secondary device.....	25
9.5. Two XCVario wireless, two wireless Navis and FLARM.....	26
9.5.1. Front device.....	26
9.5.2. Secondary device.....	26
10. Setup.....	27
10.1. MC.....	27
10.2. Audio Volume.....	27
10.3. QNH Setup.....	27
10.4. Ballast.....	27
10.5. Bugs.....	28
10.6. Airfield Elevation.....	28
10.7. Vario and Speed 2 Fly.....	29
10.7.1. Range.....	29
10.7.2. Log-Scale.....	29
10.7.3. Mode.....	29
10.7.4. Netto Mode.....	29
10.7.5. Polar Sink.....	30
10.7.6. Needle Color.....	30
10.7.7. Center Aid.....	30
10.7.8. Vario Damping.....	30

10.7.9. Averager.....	31
10.7.10. Mean Climb.....	31
Minimum climb.....	31
Duration.....	31
Cycle.....	31
Major Change.....	32
10.7.11. S2F Settings.....	32
Damping.....	32
Blockspeed.....	32
S2F Mode.....	32
S2F Switch.....	33
S2F AutoSpeed.....	33
S2F Flap Pos.....	34
S2F AHRs Deg.....	34
Hysteresis.....	34
Arrow Color.....	34
10.7.12. Electronic Compensation.....	34
eCompesation.....	34
Adjustment.....	35
10.8. Audio.....	36
10.8.1. Default Volume.....	36
10.8.2. Max Volume.....	36
10.8.3. Cruise Audio.....	36
10.8.4. Tone Styles.....	36
CenterFreq.....	36
Octaves.....	36
Dual Tone.....	37
Dual Tone Pitch.....	37
Chopping.....	37
Chopping Style.....	37
10.8.5. Range.....	37
10.8.6. Deadbands.....	38
10.8.7. Audio Exponent.....	38
10.8.8. Amplifier Off.....	38
10.8.9. Audio in Setup.....	39
10.8.10. Equalizer.....	39
Equalizer.....	39
Frequency Response.....	39
10.8.11. Split Volume.....	40
10.9. Weight/Polar.....	41
10.9.1. Glider Type.....	41
10.9.2. Polar Adjust.....	41
[Wingload].....	41
[Speed 1].....	41
[Sink 1].....	41
[Speed 2].....	41
[Sink 2].....	41
[Speed 3].....	41
[Sink 3].....	41
10.9.3. Max Ballast.....	42
10.9.4. Wing Area.....	42
10.9.5. Empty Weight.....	42

10.9.6. Crew Weight.....	42
10.10. Options.....	43
10.10.1. Student Mode.....	43
10.10.2. Flap (WK) Indicator.....	43
Flap Indicator.....	43
Max positive Flap.....	44
Max negative Flap.....	44
Takeoff Flap.....	44
Flap Speeds Setup.....	44
Speed +3 to +2.....	44
Speed +2 to +1.....	44
Speed +1 to 0.....	44
Speed 0 to -1.....	44
Speed -1 to -2.....	44
Speed -2 to -3.....	44
Flap Position Labels.....	45
Flap Label +3:.....	45
L.....	45
Flap Label +2:.....	45
+2.....	45
Flap Label +1:.....	45
+1.....	45
Flap Label 0:.....	45
+0.....	45
Flap Label -1:.....	45
-0.....	45
Flap Label -2:.....	45
-2.....	45
Flap Label -3:.....	45
-S.....	45
Flap Sensor.....	45
Sensor Calibration.....	46
10.10.3. Units.....	47
Altimeter.....	47
Airspeed.....	47
Vario.....	47
Temperature.....	47
QNH.....	47
Distance.....	47
10.10.4. [Airspeed Mode].....	48
10.10.5. Auto Transition.....	49
10.10.6. Transition Altitude.....	49
10.10.7. FLARM.....	50
Alarm Level.....	50
Alarm Volume.....	50
FLARM Simulation.....	50
10.10.8. Compass/Wind.....	51
Compass.....	51
Sensor Option.....	51
Sensor Calibration.....	52
Setup Declination.....	53
Auto-Deviation.....	53

Setup Deviations.....	53
Show Deviations.....	54
Reset Deviations.....	54
Setup NMEA.....	54
Magnetic Heading.....	54
True Heading.....	54
Damping.....	55
I2C Clock.....	56
Show Settings.....	56
Wind Calculation.....	57
Display.....	58
Arrow Ref.....	58
Straight Wind.....	58
Filters.....	58
Airspeed Lowpass.....	58
Deviation Lowpass.....	58
GPS Lowpass.....	59
Averager.....	59
Limits.....	59
Deviation Limit.....	59
Sideslip Limit.....	59
Course Limit.....	59
AS Delta Limit.....	60
Straight Wind Status.....	60
Circling Wind.....	60
Circling Wind Status.....	60
Max Angle Delta.....	61
Averager.....	61
Wind Logging.....	61
10.10.9. Wireless.....	62
Wireless.....	62
Bluetooth.....	62
Wireless LAN.....	62
Wireless Client.....	62
Bluetooth LE.....	62
WL Routing.....	62
XCVario.....	63
S1-RS232.....	63
S2-RS232.....	63
CAN-bus.....	63
WiFi Power.....	63
Lock Master.....	63
Monitor.....	64
Monitor Mode.....	65
Custom ID.....	65
10.10.10. G-Load Display.....	66
Activation Mode.....	66
Positive Threshold.....	66
Negative Threshold.....	66
Red positive Limit.....	66
Yellow positive Limit.....	66
Red negative Limit.....	67

Yellow negative Limit.....	67
Max Positive.....	67
Max Negative.....	67
Alarm Volume.....	67
G-Load reset.....	67
10.10.11. Horizon Display.....	67
10.11. System.....	68
10.11.1. Software Update.....	68
Software Vers.....	68
Software Update.....	68
10.11.2. Factory Reset.....	70
10.11.3. Battery Setup.....	70
Battery Low.....	70
Battery Red.....	70
Battery Yellow.....	70
Battery Full.....	70
Battery Display.....	70
10.11.4. Hardware Setup.....	71
DISPLAY Setup.....	71
HW Type.....	71
Style.....	71
Color Variant.....	71
Orientation.....	71
Needle Alignment.....	72
Rotary Setup.....	72
Direction.....	72
Increment.....	72
Rotation.....	72
Setup Activation.....	72
Screens.....	73
G-Meter.....	73
Horizon.....	73
Gear Warning.....	73
AHRS Setup.....	74
AHRS ID.....	74
AHRS Option.....	74
AHRS Autozero.....	74
AHRS License Key.....	75
AHRS Parameters.....	76
Gyro Max Trust.....	76
Gyro Min Trust.....	76
Gyro Dynamics.....	76
Gyro gating.....	76
Gyro calibration.....	76
AHRS defaults.....	76
AHRS RPYL Sentence.....	77
AHRS Temp Control.....	77
AS Sensor type.....	77
10.11.5. Factory Voltmeter Adj.....	78
10.11.6. Altimeter, Airspeed.....	78
Altimeter Source.....	78
AS Calibration.....	78

AutoZero AS Sensor.....	78
Alt. Quantization.....	79
Stall Warning.....	79
Stall Warning.....	79
Stall Speed.....	79
Maximum Speed.....	79
10.11.7. RS232 Interface S1.....	80
Baudrate.....	80
Serial Loops.....	80
S1 Routing.....	80
XCVario.....	81
Wireless.....	81
S2-RS232.....	81
CAN-bus.....	81
TX Inversion.....	81
RX Inversion.....	82
Twist RX/TX Pins.....	82
TX Line.....	83
10.11.8. RS232 Interface S2.....	84
Baudrate.....	84
S2 Routing.....	84
XCVario.....	84
Wireless.....	84
S1-RS232.....	84
CAN-bus.....	85
TX Inversion.....	85
RX Inversion.....	85
Twist RX/TX Pins.....	85
TX Line.....	85
10.11.9. CAN Interface.....	86
Datarate.....	86
CAN Routing.....	86
XCVario.....	86
Wireless.....	86
S1-RS232.....	86
S2-RS232.....	86
Mode.....	87
10.11.10. NMEA Protokoll.....	87
OpenVario.....	87
Borgelt.....	87
Cambridge.....	88
XCVario.....	89
Disable.....	89
11. XCSoar.....	90
11.1. XCSoar Configuration.....	90
11.1.1. Bluetooth.....	90
11.1.2. Wireless LAN.....	91
XCVario TCP Ports.....	91
11.1.3. Device driver.....	92
OpenVario.....	92
Borgelt.....	92
Cambridge.....	92

XCVario.....	92
XCVario commands:.....	93
12. Installation.....	94
12.1. Rear panel connections, 2020 series.....	94
12.2. Connections rear panel, series 21&22.....	95
12.3. Installation and drilling plan.....	96
12.3.1. Drawing of the front part.....	97
12.4. Micro USB.....	98
12.5. Audio Output.....	98
12.6. Electrical connections.....	99
12.6.1. RJ45 connector S1.....	99
Temperature sensor:.....	99
Speed to Fly switch:.....	100
FLARM.....	100
12.6.2. RJ45 connector S2.....	101
Flap sensor.....	102
12.6.3. Stefly OpenVario.....	103
12.6.4. KRT2 / ATR 833 Radio.....	105
The pin assignments and connections on the ATR833 are as follows:.....	105
12.6.5. Temperature sensor.....	106
12.6.6. Power Supply.....	106
12.6.7. Vario / Speed to Fly Switch.....	106
12.6.8. RS232 Interface.....	107
12.7. Comparison IGC- and FCC Standard.....	107
13. Technical specifications.....	109
14. Maintenance.....	110
15. Warranty Policy.....	110
16. Permit.....	111
17. Limitation of Liability.....	112
18. CE Declaration of Conformity.....	113
19. Appendix.....	114
19.1. Sink rate depending on the load factor.....	114

1. Description

The XCVario is a modern digital and smart variometer with wired serial and wireless interfaces to any navigation display or with applications such as XCSoar, LK8000 and more, as well as wired interfaces to a GPS source, a FLARM, an OpenVario or other devices. It has modern, high-resolution digital sensors for pressure, acceleration and temperature, an expansion tank as is usual with older systems is no longer required.

The XCVario is connected to the TE nozzle pressure, the static and the dynamic pressure, and compensated either conventionally via the TE nozzle or electronically. It has an audio function via its own built-in 2 watt speaker.

The forward-thinking Kalman filter offers a quick response to changes with good smoothing of the vario display, without the usual delay of a few seconds, which is known from simple damping. The Vario shows exactly what you feel. The Vario can also be adjusted according to personal preferences via the setup with many setting options.

From the 2021 series, the load factor (n) is taken into account when calculating the current sink value from the polar coefficient using an acceleration sensor, because the increased load factor requires more lift from the profile with the same aircraft mass (difference to higher ballast). This increases the drag coefficient and this leads to increased sink rates. In a standard class aircraft, for example, with a load factor of 2 g, this results in about twice the sink rate. This is not insignificant and is taken into account in the net vario, which significantly improves the net vario display, especially in the case of dynamic processes (pull up, push down) compared to conventional devices without the corresponding sensors.

Optionally, a FLARM or another source for NMEA (GPS) data can be connected to the XCVario, the Vario not only forwards this data to XCSoar, tasks can also be declared on an (IGC) FLARM with XCSoar, settings made and the flight can then be read out. Clubs can operate the device with its many options in the "Student Mode", which allows users to only modify the 5 most important settings such as QNH, MC, etc.

The standard installed and freely available software of the XCVario (<https://github.com/iltis42/XCVario>) offers many features. In addition to a vario display, speed with MacCready setting, there is a precise altimeter, a wind indicator, a charge level indicator for the battery, a temperature indicator and more. The flap display, which can be switched on as an option, can display the flap position using an external sensor and provides information on the optimal flap position depending on the wing loading, the speed and the load factor. Thanks to a growing library of more than 100 polars for a wide variety of glider types, the vario can be adapted to almost any glider. Since the software is publicly available on github, developers can clone the software and further develop their own features and ideas, and also deliver them.

In addition to the independent function, the Vario can exchange data with the software running there via the wireless interface either via Bluetooth or wireless LAN (WLAN, WiFi), or via the RS232 (-TTL) interface, depending on which interface the device used has. The wireless standards ensure secure and stable transmission and have the advantage that there is no need for hardware-related and sometimes complex cabling with the navigation device.

Thanks to the high resolution of the digital, temperature-compensated and factory-calibrated pressure sensors, even the smallest height differences of just 8 cm are detected. Properties such as accuracy, reliability and long-term stability are therefore given. The sensor for the dynamic pressure or speed or IAS enables an absolute accuracy of better than 1%, at 100 km/h the deviation is a maximum of 1 km/h.

The outside temperature can be measured with the digital temperature sensor in the ventilation area to 0.5° Celsius with a resolution of 0.1° Celsius, and is included in the calculation of the TAS (True Airspeed) as an atmospheric parameter for determining the air density.

The exact flight speed, as well as the temperature and TE vario values, can be used to calculate precise values for the target flight. The precise altimeter without hysteresis allows final approach altitudes to be calculated appropriately in XCSoar, because the wind calculation in XCSoar and now also in the XCVario itself works reliably and precisely together with a GPS source.

It is very easy to operate and is done using the rotary (rotary knob) with Push&Turn (press and turn), next to it there is a button to switch it on.

The system, which is manufactured in large numbers, is an excellent replacement for old vario systems with many additional modern features.

2. Features

- Airliner-style bar display or retro-style pointer display
- TE variometer with optimized Kalman filter, adjustable range and damping
- Barometric altimeter with QNH setting or QNH autotune (airfield altitude as default)
- Speed display (IAS or TAS) with speed command (S2F)
- Adjustable wing loading and MacCready value
- Built-in speaker with volume control, power 1.2 watts
- Sound individually configurable (height, chopping, dual tone, deadband)
- Flaps display with optimal position according to ballast, airspeed and the load factor
- Extensive polar library with over 100 common polars
- Polar can be modified later
- Digital compass with external magnetic sensor (21 series)
- Wind calculation in circular flight and with compass also straight flight (TAWK method, in development)
- MacCready, ballast and bugs setting option
- stall warning
- Outside temperature display with external sensor
- Battery charge status display, voltages configurable
- Wireless Bluetooth V4.2 (classic BT) or standard WLAN access point for external devices
- 2x RS232 TTL interfaces, S1 with standard cable in IGC standard, S2 socket in IGC standard
- High accuracy barometric altimeter
- Sunlight readable, bright and high-contrast 2.4 inch IPS display with 57 mm diagonal
- Switch input for vario/set speed changeover (switch or button adjustable)
- Simple setup menu using rotary switch with push and turn function
- Light and small device for standard 57 mm instrument cut-outs, housing depth only 35 mm
- Elegant and robust CNC milled mat black anodized aluminum housing (shielding, low EMI)
- Software update via WiFi 'Over The Air' (OTA) when installed for new features
- Analog input for flap display
- As an alternative to the flap display, landing gear warning via the same input
- Full FLARM Bridge for task declaration in IGC Flarm, flight download and FLARM setup

From the 2021 series, the following 3 new hardware features will be added:

- Second serial RS232 TTL interface S2, IGC standard assignment and DTE and DCE support (RX/TX pins exchangeable via software)
- Audio power now 2 watts, better sound at high volumes
- Input e.g. for a flap sensor or an undercarriage warning
- Optional feature: Attitude and Heading Reference System (AHRS): 6-axis direction and attitude sensor with 3-axis gyroscope and 3-axis accelerometer

From series 2022:

- In addition, a CAN bus interface on S2 for connecting a second two seater device, a CAN magnet sensor (from October 2022), as well as future extensions.


From series 2023: (planned October 2023)

- Temperature control for the AHRS chip for improved long-term stability

3. Overview

The following overview shows the embedding of the XCVario in the cockpit environment.

The standard case and most common case is the connection of an Android device with XCSoar to the wireless interface with Bluetooth, as well as a FLARM with the appropriate cable to interface S1. For this purpose, the interface S1 is connected to the wireless interface. This is the delivery state of the settings. With the WiFi standard on the wireless interface, it is also possible with devices from the 2021 series to control another device, e.g. a radio device on the S2 interface. More on this in the XCSoar Setup chapter.

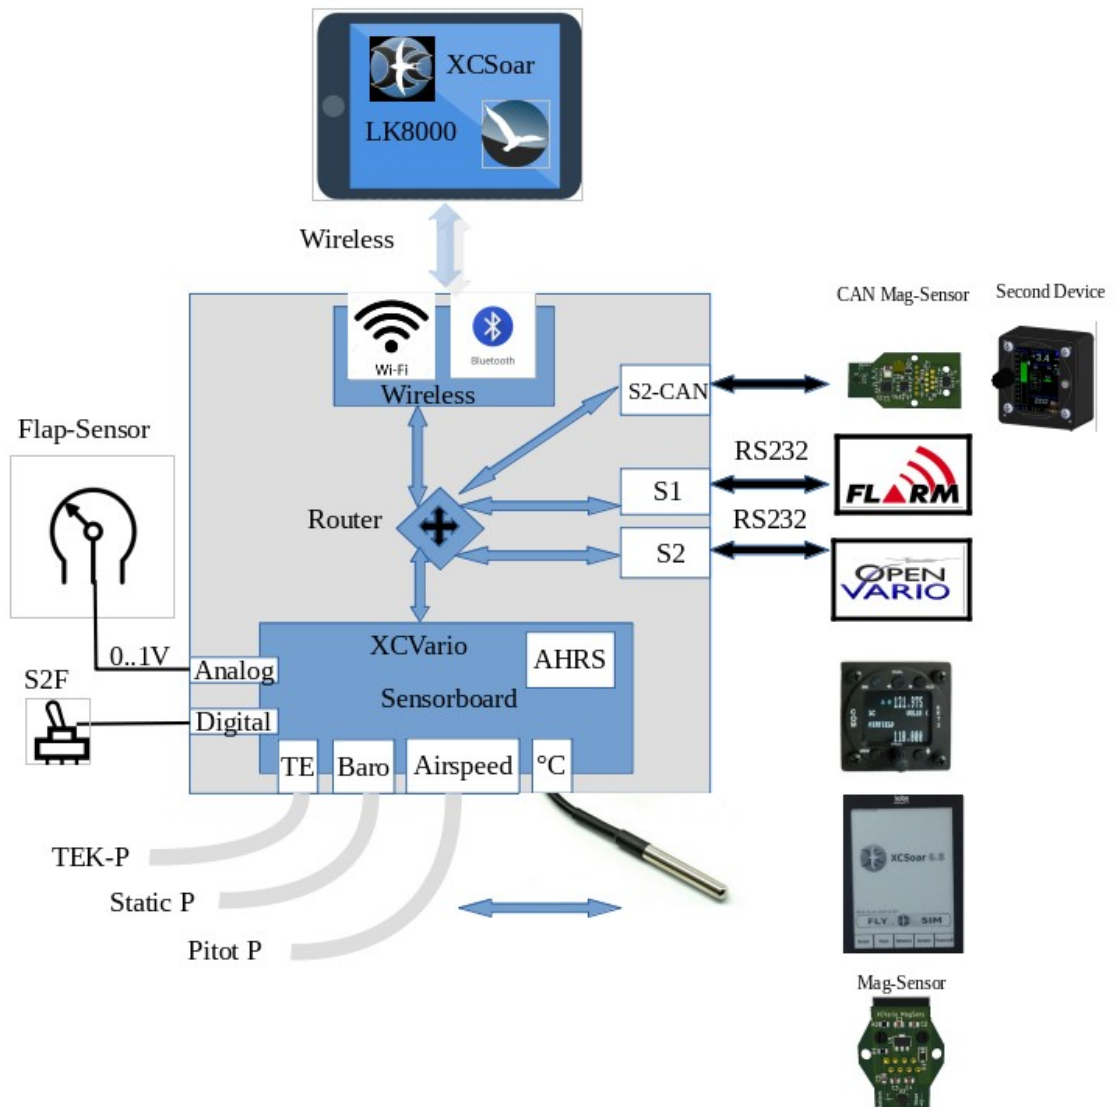

4. Operation

The operation of the XCVario is very simple and intuitive, and takes place via a rotary knob (rotary) with button function (push and turn), an optional additional switch or button (configurable) for Vario or speed command mode, and via the on-off switch. The following description applies to the default setting, the function of the rotary can be set, more on this in the chapter on setup.

After switching on on the ground, the QNH must first be set on the rotary knob, or confirmed if the elevation (height of the airfield) is configured. After pressing the rotary knob, the display and the data transmission of the device go into operation. Turning it to the left decreases the volume, while turning it to the right increases it.

During operation, the menu for the parameters such as MC value, ballast, polar and more is started after pressing a button (push).

A simple push takes you to the top point of the setup [`<<Setup`], which offers a return from the setup without turning, i.e. scrolling in the menu. Another push without scrolling switches back and forth between setup and normal operation. In the setup menu there is a help text for almost all functions so that the correct settings can be found quickly even with little practice.

By turning the rotary to the right, corresponding to "scroll down", or to the left for "scroll up", the individual sub-items are selected in the setup.

Most of the items in the setup menu return to the top item of the previous level, allowing multiple settings to be made without exiting the menu entirely.

The setup menu is nested, you can descend further into the individual items by pressing a button (push), the top item returns to the previous menu.

All setting values can be decreased by turning to the left and increased by turning to the right.


If you want to save the value, you can acknowledge this with a simple push, the saving is confirmed and you return from the dialog.

Dialogs for parameters that are usually set separately, such as the MC value, return directly to the vario display. This saves you having to press another button to exit the setup.

The XCVario can also be remotely controlled via software commands, supported is rotary operation such as short or long press to change the screen, for example, or to go to the setup, scrolling (up/down) for the menu navigation, as well as some shortcuts for changes in volume or MacCready value.

5. Device Management

An important feature is the XCVario management via the WiFi access point of the device. After activating the "ESP32 OTA" WiFi, e.g. by pressing a button when switching on immediately when the line with the software version appears, the adjacent management page can be called up via a WiFi-enabled device via the page <https://192.168.4.1>. Below that you can find the software update, under Debug/Reset a factory reset (see the separate chapter under "Setup"), a possible core file for debugging purposes, and under Backup/Restore a backup file of the configuration on the mobile phone, tablet or laptop and import it back to the device.

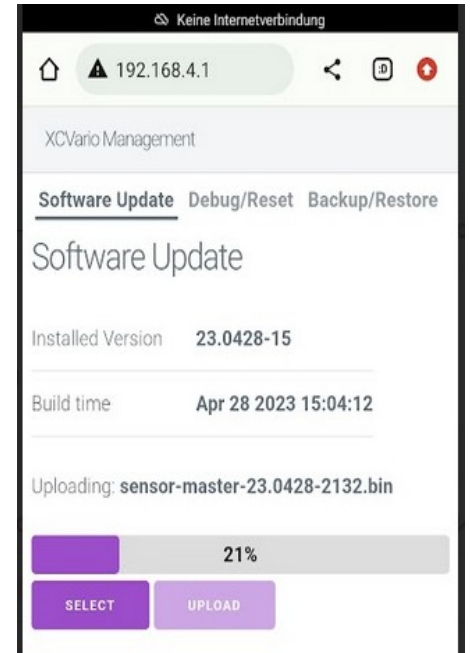

5.1. Software Update

Under the Software Update tab, the installed software version is displayed, as well as other details such as the exact time when the package was built. Using [SELECT], the file with the new software can be selected on the smartphone and then uploaded via [UPLOAD].

5.2. Debug/Reset

The operation is self-explanatory, after pressing the [FACTORY RESET] button, the execution must be confirmed in another dialog, the device is then reset to the factory settings. This means that all settings are lost unless there is a backup of the configuration (next point).

The [DOWNLOAD CORE DUMP] button provides a file that can be sent to the manufacturer for troubleshooting if the device shows malfunctions during operation, e.g. with new features that are still running in alpha mode, i.e. in test mode. The core file is only created if the system encounters a fatal error and the software restarts, and is deleted after uploading to the XCVario.

5.3. Backup/Restore

Here, too, the operation is self-explanatory, [BACKUP] writes all settings that deviate from the default, including the calibration of the compass, or a deviation table in a file which can be stored on the mobile phone, tablet or PC.

On the other hand, [RESTORE] loads the configuration from the file back into the device, which is very helpful, for example, when replacing a device or upgrading to a newer model or after a factory reset has been carried out. Basically, no factory reset is carried out during the restore, i.e. other settings that are not in the backup file are initially retained. If you only want to see these settings from the backup file, then a factory reset must be carried out beforehand. This means that, in addition to a clean restoration of an earlier status, there is also the possibility of a "merge" of the existing configuration with the status from the backup.

6. Airliner-Style Display

The display consists of several components for vario, speed, speed command and altitude. In addition, the MC value, the outside temperature, the battery voltage, the status of the Bluetooth connection and optionally the recommendation for the flaps are displayed. The display is in the form of colored animated bars and has been optimized to accommodate a lot of information in a way that is easy to read. In addition to digital values for the target flight, it also offers a graphic display of the airspeed.

6.1. Variometer






On the left is the most important display, the variometer. Climb values are displayed with a green bar upwards, and with a red bar downwards. The white arrow moves with the climb value.

The value averaged over N seconds is displayed digitally to the right (N adjustable).

In the default setting, the polar inherent sink rate is shown as a blue bar downwards in the variometer display as a function of the speed. In completely calm air, a blue bar is shown downwards from 50 km/h dynamic pressure, which corresponds to the polar sink rate at the current speed and load.

If there is additional sink, the red bar below the blue bar expands the display to the current sink value. When climbing, the blue bar is overwritten with a green bar corresponding to the rising of the surrounding air mass from below. The length of the red or green bar corresponds to the net variometer value, at the end of the bar you can read the gross variometer value, the actual rise/fall compared to the ground.

The various variometer displays are shown in the sketches below. On the left with the option for polar sink activated, next to it the classic display on the right without showing the polar sink, i.e. without information about the net climb values. An inherent sink rate of approx. -1 m/s is assumed here in all five cases.

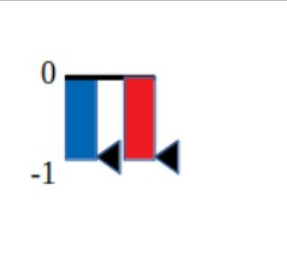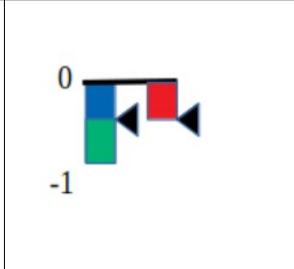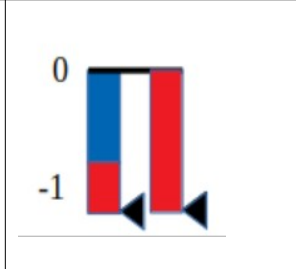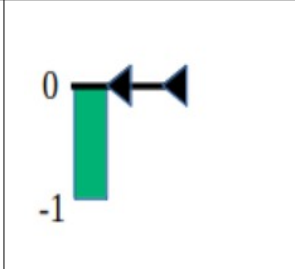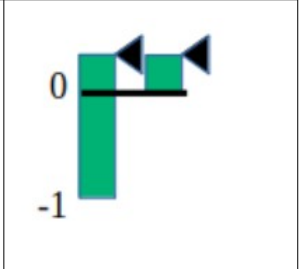Nettosteigen 0 m/s, Eigensinken 1m/s	Nettosteigen 0.5 m/s, Eigensinken 1m/s	Nettosteigen -0.5 m/s, Eigensinken 1m/s	Nettosteigen 1m/s, Eigensinken 1 m/s	Nettosteigen 0.5 m/s, Eigensinken 1 m/s
				

6.2. Mean Climb

The mean climb is represented as a colored symbol in the form of a small route within the variometer scale and moves up accordingly. Climb values that are too low and that you do not want to include in the core climb can be hidden in the Vario dialog. The medium rise serves to provide the best possible suggestion for the MacCready value.



The icon changes color to green if the average climb has improved by more than 0.2 m/s since the last measurement and to red if the climb has decreased by 0.2 m/s. If

this improves significantly, more precisely by more than 20%, the upper part of the route extends into an arrow as shown on the right. In the opposite case, with a clear deterioration lengthens the lower part of the then red symbol

shown. The graphic below shows the symbol in the "Retro" display mode (pointer display). If the climb is constant, the icon is displayed in blue color.

6.3. Speed to Fly

The speed display is in the middle of the display. In this small box, the current speed is displayed in the form of a moving scale, the small white arrow in the middle of the box points to the current speed value. There is also a digital display of the current IAS value above this box. To the right, the exact value of the speed to fly (S2F Speed2Fly) also digital.

Below the S2F value is the actual speed command in the usual way. It shows down in red color for push or faster, and up in green color for pull or slower. The length of the arrow is measured with the speed to fly difference, from about 45 km/h difference the tip of the arrow is cut off, the arrow gets wider and wider with increasing deviation. If the deviation is more than 10 km/h, the exact value of the deviation is displayed below or above the command arrow.

6.4. Altimeter

The current altitude and the associated QNH or QFE value (with the standard setting) are displayed below the speed command display. Altitude can be displayed in meters, feet or flight level (FL).



 
6.5. Flaps recommendation

On the right edge below the small profile is the flap display, which gives a recommendation for the position to be locked in flap aircraft. Five different positions can be shown in the form of a moving scale: -2, -1, 0, +1, +2. The small profile moves the flap (WK) shown in red analogous to the recommendation. The associated optimal speeds according to the polar can be adjusted in the setup depending on the model. The display must be activated in the setup under /Flap (WK) Indicator/Flap Indicator Option/ [Enable]. In addition to displaying the best setting, the WK sensor from the 2021 series can also display the current WK position graphically in the form of a small lever. If the lever position deviates from the optimum flap position by more than one notch, the flap lever flashes red.



6.6. Battery Indicator

The battery indicator shows the charge status of the battery in the form of a symbol in different colors. The exact value in percent is also displayed. When the battery is running low, the color changes from green to yellow, then red. In addition, the symbol flashes in red. The corresponding voltages are preset for a lead-acid battery and can be modified in the setup.




6.7. Temperature

The temperature at the top of the display, or at the top left in the Retro Style display, shows the value of the outside temperature in °C. If there is no sensor or if the sensor is defective, the value shows "---". The unit °C or F is also displayed and changes color in the event of temperature deviations in the regulation of the AHRS chip from hardware revision -23. See AHRS Setup for details.



6.8. MC-Wert

The MC value shows the current MacCready value. The MC value is the top value in the setup menu and can be easily accessed and modified by selecting it and pressing the button. The value is recorded with the same unit as the variometer is set.

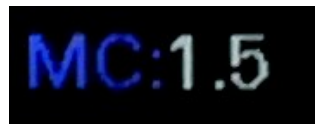

6.9. Wireless Symbol

Depending on the activated standard, the wireless symbol shows either a Bluetooth or a WiFi symbol. An existing connection to the wireless device and the XCSoar application is indicated in blue if data is being exchanged. If there is no longer a connection or no more data is being exchanged (device deactivated in XCSoar), the symbol is displayed in gray.



An additional function is monitoring the connection to FLARM. If PFL* NMEA datasets are received from there, the dot is displayed in green in the case of WiFi and the "tooth" in the case of Bluetooth connection.

6.10. CAN Symbol

Below the wireless symbol there is a symbol for the CAN link, which appears when the CAN interface is activated and indicates a connection with a second variometer or a CAN magnet sensor with green.

7. Pointer Display

From the software versions November 2020 there is also a pointer display in "retro" style as usual from round instruments. The angle of pointers is perceived better in the corner of the eye than digits or bar displays. This form of display is now also available on In addition, there is a wind display with an airplane symbol and a wind arrow relative to the longitudinal axis of the airplane, as well as a digital display of the wind below the flight speed, which can also show the heading if the compass is equipped.

the XCVario, and further features were added in the course of 2021.

The mode can be selected in "Setup->Hardware Setup->DISPLAY Setup->Display Style" with the setting "Retro".

In this setting, almost all elements from the previous "Airliner" style can be found again, in favor of an optimal variometer display, the graphic display of the airspeed was omitted here.

In the middle of the display you will find the integrated climb in the unit specified above. To the right of this, as before, can be activated in the setup (as shown here), the recommendation for the optimal flap setting according to the current airspeed. The display is larger and shows the entire range, in the future there will be two more possible positions for up to three positive or negative flap positions.

There are three different display modes, gross, net (net) and relative net or super net (s-net). In gross mode, polar sink rate is represented by the blue line down the scale, and lengthens as sink rate increases. Similarly, for climb, there is a green arc up the scale to the pointer tip, which indicates the aircraft's actual climb. The blue arc, on the other hand, is independent of the pointer. The length of the blue arc plus the green arc corresponds to the net climb, which is the vertical movement of the air mass around the aircraft. The vario can be displayed linear or logarithmic as shown here.

In the net mode, optimal for cruising, the polar inherent sink is directly included in the pointer position, in addition, in the super-net mode, the polar inherent sink in circling flight is taken into account. So the needle points in advance to the value that you would have as effective (gross) climb if you cranked at the point, regardless of the speed. Switching between gross/net can be coupled with the speed to fly/circling mode (cruise-net). Further details can be found in the description under "Vario Mode" in the setup.

Above and below the mean climb is the display of the speed command. Green bars are shown at the top and red bars are shown at the bottom. Each bar means 10 km/h. On the right side of the display, 4 bars show, for example, 40 km/h flying slower. The MC value at the bottom left is slightly larger than in airliner mode and is therefore easier to read.

Of course, the vario range between 1 m/s and 30 m/s can also be selected as desired, as can the units of vario, airspeed or altitude in addition to the metric system in knots, feet or FL = flight level. The display between circling flight and speed command has changed here, the circling flight is shown above, in fast flight an arrow pointing downwards is shown instead of the circle, which symbolizes the glide path.



The altimeter can be displayed in full resolution or quantized to 10 meters as shown here in the form of a sliding scale.

The temperature display has found its place in the top left corner, bluetooth has not changed and the battery display has remained in its rightmost place at the top and bottom.

The average climb is also visualized, as in the airliner mode, by means of a rhombus within the scale, the rhombus changes color and shape depending on the trend, the average climb improves and the color changes to green, and if the average climb deteriorates, it shows the color red . For details, see the previous chapter for medium climbing.

In addition, there is a wind display with an airplane symbol and a wind arrow relative to the longitudinal axis of the airplane, as well as a digital display of the wind below the flight speed, which can also show the heading if the compass is equipped.

8. FLARM

Every FLARM, whether classic, power or RedBox FLARM with RJ45 connection can be connected to the XCVario with standard cables. The cable available in the shop has the power option, with which the FLARM is also supplied via this cable. This saves additional wiring for the supply of the FLARM from the vehicle electrical system. Other FLARMS with RJ12 connector or Sub-D connector can also be connected with a modified cable.



If the FLARM is plugged in, the NMEA data from the GPS and barometric probe (if the FLARM is available) are sent to XCSoar with the FLARM cable as standard. With the bidirectional FLARM cable (see chapter Electrical connection /FLARM), tasks can also be written to an IGC-Flarm and settings of the FLARM can be made. See the description of XCSoar.

A flight download can also be carried out with the recorded flights in FLARM. To do this, the FLARM must be created as a separate device with the "FLARM" driver in XCSoar and activated for the download (Config/NMEA Connection/FLARM./Activate). During activation of the FLARM driver, other drivers such as OpenVario, which use the same Bluetooth connection, must be deactivated (Config/NMEA connection/OpenVario./Deactivate). The flight download can then be tapped in the FLARM device, a list of flights is first transmitted, from which the desired flight is then selected. The flight download via the serial interface can take a few minutes, depending on the length of the flight, since the data rate of the serial interface at the standard 19,200 baud only allows around 2 kilobytes per second. Higher data rates for faster downloading are possible, see the chapter on setting the baud rate of the serial RS232 interface. If XCSoar is connected via WiFi instead of Bluetooth, the FLARM can also be created as a separate device in XCSoar with the "FLARM" driver. It is then no longer necessary to create (or change) the device driver for the flight download or to switch to the Vario Setup menu. The flight download via the WiFi interface is possible with a WiFi device, which is connected via the Flarm port for the purpose. Other devices connected to the XCVario must be switched off during the download.

In the current software versions, there is also a simple FLARM screen to warn of an imminent collision with another aircraft, which graphically visualizes the distance, direction and height offset of the approach. Depending on the alarm level, an acoustic warning signal with an adjustable volume is also used to draw attention to the danger.


9. Configurations and Router

An important functionality of the XCVario is the integrated router function, which makes it possible to connect the data of the device and data from external devices between the various interfaces of the device. This results in a multitude of possibilities for using the XCVario and thus almost any extensions and possible uses are covered. An overview of this follows, further setups are conceivable and can be derived from the combinations shown.

It is generally recommended to switch off connections that are not required, as they unnecessarily occupy resources such as CPU and RAM, especially if there is no destination at the other end, the data accumulates, cannot be delivered and must be discarded. With a minimum setting for the routing, the full performance for the Vario operation of the device is available. The routing of data that is sent to the XCVario from outside via any interface is always activated, i.e. the XCVario always reacts to FLARM and GPS data, commands, etc. without having to program a routing for this. For the XCVario data itself, i.e. the outward direction, the routing must be set accordingly for the interface. The XCVario data is also automatically routed to the CAN bus in the CAN mode master.

Configurations that require the CAN bus can therefore only be used from the current hardware series XCVario-22. The configuration of the router is always bidirectional, i.e. both the forward direction and the reverse direction of the data streams are always connected.

Any of these ports can only ever be connected to one target bidirectionally. To setup the routing, see the “Routing” description in the setup chapter for the corresponding ports. The reverse direction is automatically configured, for example if we enable S1-RS232 as a target in the wireless interface routing settings, then at the S1-RS232 interface, the Wireless is enabled as well. The adjustment therefore only needs to be made at one end but is visible at both ends, means the routing setting appears in two places, and can be changed from either place, but it is the same setting.

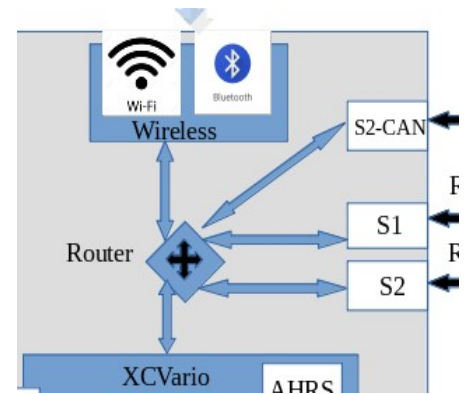

9.1. XCVario, Wireless Navi and FLARM

The most common application in the single seater is the following. This setting also corresponds to the delivery status, a wireless navigation device and a Flarm with IGC standard connection therefore run via plug and play without having to make any further settings. In this configuration, the XCVario data must be routed to wireless (WL), and the data on S1 which come from FLARM are also of interest on wireless, so that a GPS fix on the navigation system and also the traffic of other aircraft can also be included FLARM can be displayed, so these two switches are set to "Enable". The interface S2 and the CAN bus are not required for this. For more information, e.g. where to find the routing dialogs in the setup menu, please refer to the Setup chapter.



Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Disable	XCVario	Disable
S1-RS232	Enable	Wireless	Enable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Disable	S1-RS232	Disable	S1-RS232	Disable
CAN-bus	Disable	CAN-bus	Disable	CAN-bus	Disable	S2-RS232	Disable

9.2. XCVario, wired Navi (Kobo, OpenVario, IPX, etc) and FLARM


For this configuration with a wired navigation device, XCVario and the data from FLARM to S1 must be routed to S2 (S1: S2-RS232 = Enable, or S2: S1-RS232 = Enable). The settings are made in the routing of S1 and S2, all other ports are not required in principle, but it can make sense to leave the wireless settings on XCVario and S1 enabled, so that a second device can be connected wireless if necessary, e.g. in the event of a power shortage for the permanently installed device, or in the event of a failure. It is also possible to read out the IGC file wireless with a mobile phone after the flight. The device wired to S2 can remain in the cockpit, a memory card or a USB stick for data transfer is then not required.



Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Enable	XCVario	Disable
S1-RS232	Enable	Wireless	Disable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Enable	S1-RS232	Enable	S1-RS232	Disable
CAN-bus	Disable	CAN-bus	Disable	CAN-bus	Disable	S2-RS232	Disable

9.3. Two XCVario, two Wireless Navis and FLARM

For two-seaters and two wireless navigation systems, the following configuration is available, in which the main device is connected to the FLARM at S1 in the front, and the second display for the rear seat is connected via the CAN bus Data from the XCVario itself is transmitted to the second display via the CAN bus. Only the front device has to be hosed. This is the simplest configuration for two-seaters and only requires a 1:1 patch cable between the S2 interfaces of the front and rear units.

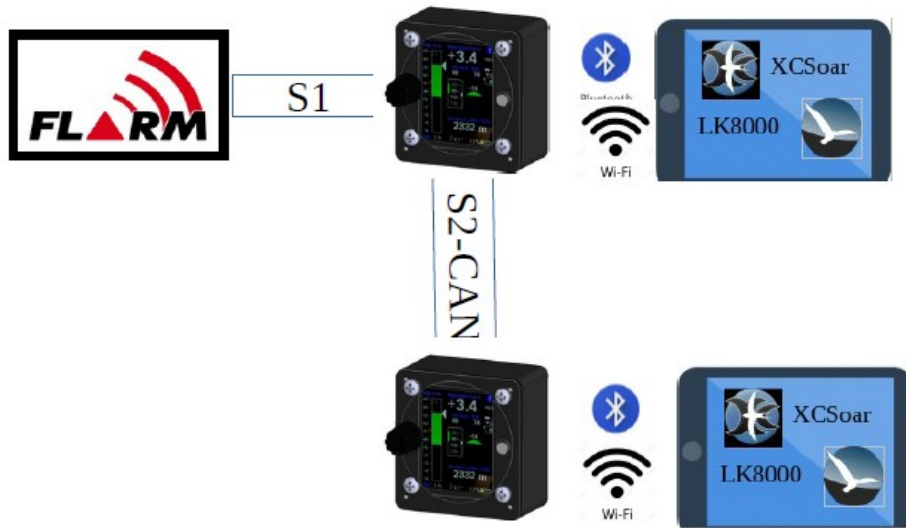

9.3.1. Front device


Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Disable	XCVario	Enable
S1-RS232	Enable	Wireless	Disable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Enable	S1-RS232	Disable	S1-RS232	Enable
CAN-bus	Disable	S1-CAN	Enable	CAN-bus	Disable	S2-RS232	Disable

9.3.2. Secondary device

Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Disable	XCVario	Enable
S1-RS232	Disable	Wireless	Disable	Wireless	Disable	Wireless	Enable
S2-RS232	Disable	S2-RS232	Disable	S1-RS232	Disable	S1-RS232	Disable
CAN-bus	Disable	S1-CAN	Disable	CAN-bus	Disable	S2-RS232	Disable

9.4. Two XCVario, two wired Navis (OV, Kobo, XCTouchNav, etc) and FLARM

For two-seaters with two wired navigation systems, the picture is similar to the last configuration, the front navigation system can be connected to S2, the rear navigation system to S1 or S2. With a connection via S1 on the second device, the IGC-compatible Flarm port of the standard cable set is ideal if the device also has serial ports according to the IGC standard, or a connection to S2 with a 1:1 patch cable. In this case, the same routing settings "CAN" and "XCVario" as shown for S1 are to be made on the second device instead on S2. When connecting to S2 in the rear cockpit, use one of the extenders as shown in the front unit.

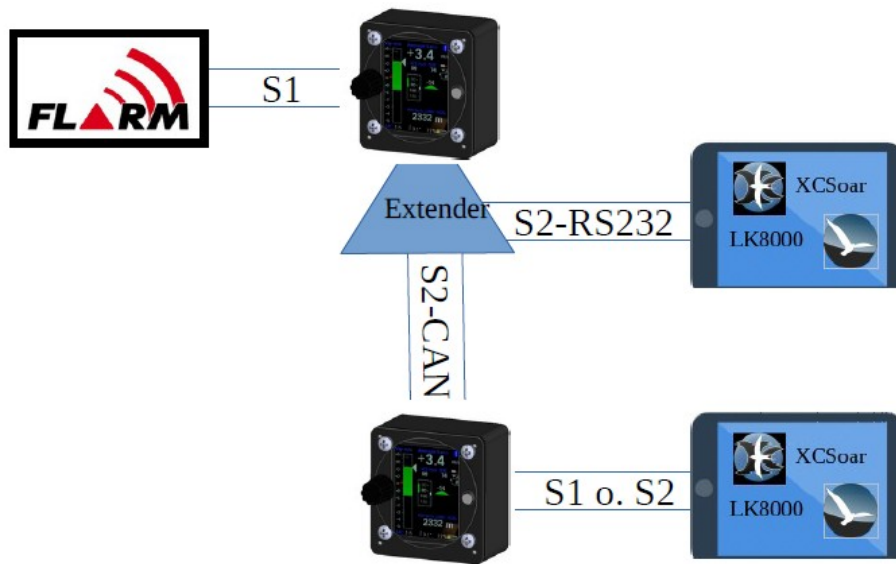

9.4.1. Front device


Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Enable	XCVario	Enable
S1-RS232	Enable	Wireless	Disable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Enable	S1-RS232	Enable	S1-RS232	Enable
CAN-bus	Disable	S1-CAN	Enable	CAN-bus	Disable	S2-RS232	Disable

9.4.2. Secondary device

Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Enable	XCVario	Disable	XCVario	Enable
S1-RS232	Enable	Wireless	Disable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Disable	S1-RS232	Disable	S1-RS232	Enable
CAN-bus	Disable	S1-CAN	Enable	CAN-bus	Disable	S2-RS232	Disable

9.5. Two XCVario wireless, two wireless Navis and FLARM

This configuration does not require any cabling between the front and rear devices. Both the navigation system and the two XCVarios can be coupled via WiFi. In Options / Wireless, the front device must be set as the wireless master and the rear device as the wireless client. Since Bluetooth and WLAN are only possible as alternatives, only the WLAN connection is possible, further details on this can be found in the Settings / Wireless chapter. The default for the routing can be used here. Only the setting for S1 on the first device is relevant, as well as the WL routing on both devices.

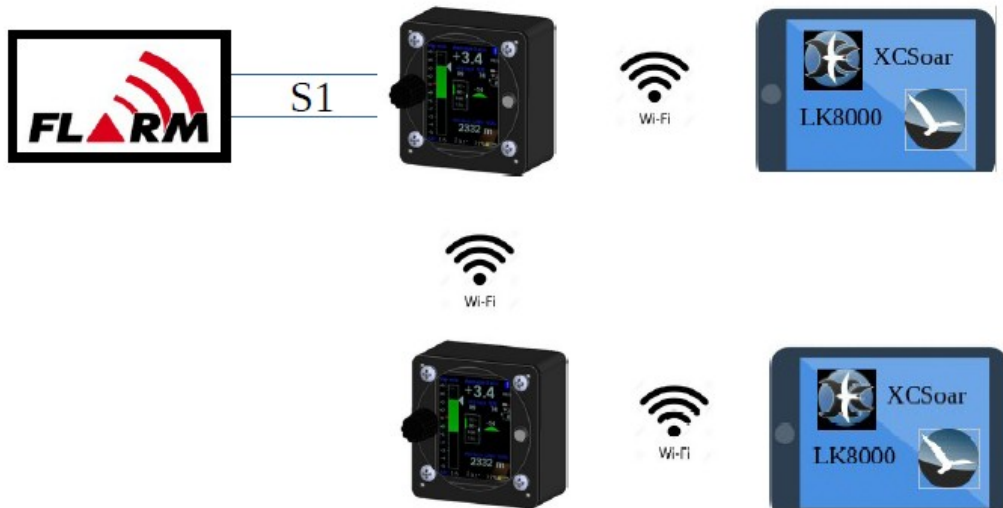

9.5.1. Front device


Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Disable	XCVario	Disable
S1-RS232	Enable	Wireless	Enable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Disable	S1-RS232	Disable	S1-RS232	Disable
CAN-bus	Disable	S1-CAN	Disable	CAN-bus	Disable	S2-RS232	Disable

9.5.2. Secondary device

Wireless (WL) Routing		S1-Routing		S2-Routing		CAN Routing	
Port	Setting	Port	Setting	Port	Setting	Port	Setting
XCVario	Enable	XCVario	Disable	XCVario	Disable	XCVario	Disable
S1-RS232	Enable	Wireless	Disable	Wireless	Disable	Wireless	Disable
S2-RS232	Disable	S2-RS232	Disable	S1-RS232	Disable	S1-RS232	Disable
CAN-bus	Disable	S1-CAN	Disable	CAN-bus	Disable	S2-RS232	Disable

10. Setup

Many parameters can be set in detail in the setup menu. The most important parameters are in the main menu.

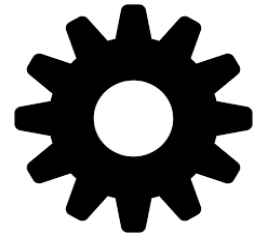

10.1.MC

0.5 m/s


Here the MacCready value (MC) can be set from 0 in 0.1 m/s steps to 9.9 m/s. After confirming with a short press, the Vario is immediately back in normal operation.

10.2.Audio Volume

20%

This item is used for volume control within the setup menu. In the default setting, however, the volume can be controlled with the rotary switch outside of the setup menu and is not normally necessary at this point.


The behavior of the rotary switch outside of the setup menu can be adjusted under Setup/System/Rotary Default/, and e.g. affect the MacCready value instead of the volume. In this case, the volume can be changed in the setup at this point.

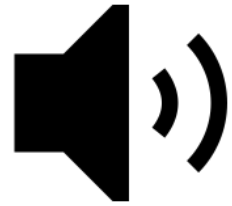

10.3.QNH Setup

1013.25 hPa

200 m

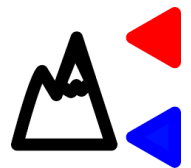

Dialog for setting the QNH value. On the ground, set the value so that the altimeter display also shows the airfield elevation, or to the QNH value of the nearest ATC.

10.4.Ballast

80 liters

39.00 kg/m²



The water ballast can be set in the ballast dialog. In addition, the wing loading resulting from the additional ballast is displayed. 1 liter of water normally corresponds to 1 kg of ballast.

Example: A glider with a wing area of 10 m² has a setup weight of 260 kg, the pilot weighs 80 kg, 100 liters of water (100 kg) are in the tank. The take-off weight is 440kg, corresponding to the wing loading $440\text{kg}/10\text{m}^2 = 44 \text{ kg/m}^2$.

10.5.Bugs

0 %



Degradation of the polars by insects can be adjusted via the parameter Bugs (insects). Here, the coefficients of the polar parabola a_0 , a_1 , and a_2 are worsened according to the percentage. The polar can thus be deteriorated in percentage terms. Whereby the absolute, the linear, as well as the quadratic coefficient are degraded, which equates to a greater degradation at higher speeds. The procedure is identical to the polar degradation procedure used in XCSoar, and is the common procedure for accounting for insects in glider polars.

Maximum degradation is 50% in accordance with XCSoar. Values like 10-20% are realistic for modern profiles. However, older profiles that are more sensitive to rain and mosquitoes, e.g. with LS3, Kestrel or Nimbus 2, can largely exhaust the value range with very heavy soiling.

10.6.Airfield Elevation


-1 m

If the value for the airfield elevation is recorded here, the QNH is automatically adjusted to the given airfield elevation after switching on. In the QNH dialogue, the QNH then only has to be confirmed. If you land on another airfield with a different altitude, use the local QNH when switching on, or adjust the airfield elevation to the new altitude if you want to use the auto setup for the QNH. The default setting here is -1 meter, so the feature is switched off and the last recorded QNH is used and must be adjusted conventionally.



10.7.Vario and Speed 2 Fly

The settings for the vario display and the speed to fly can be adjusted in the Vario dialog.

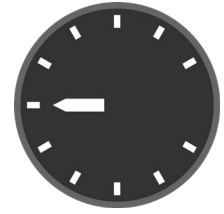

10.7.1. Range

5 m/s

The scale of the variometer is set with the range. A range from 1 m/s to 30 m/s can be selected for the min/max values. Default is 5 m/s.



10.7.2. Log-Scale

[Disable]

[Enable]

With the help of this option, the pointer display of the variometer can be shown with a logarithmic scale. The area around the zero point is stretched, and the areas towards the end of the scale are gathered. The mode has the advantage of being able to display a significantly larger measuring range without losing accuracy around the zero point.

Another decisive advantage: This means that relative changes can be better evaluated, which means an improvement in climb of 20% at 1 m/s, i.e. an increase of 0.2 m/s, corresponds to the same way on the scale as relative improvement by 20% at 5 m/s, equivalent to 1 m/s.



10.7.3. Mode

[Brutto]

[Netto]

[Cruise Netto]

With this setting you can choose whether the variometer works as a gross vario, i.e. without taking account of the polar sink rate, or as a net vario with the polar sink rate being calculated out.

The "Cruise-Netto" setting selects the net setting exactly when the vario is in speed-to-fly mode, otherwise the vario works as a gross variometer, which makes sense when circling, because for the MacCready setting the gross rate of altitude increase is always relevant.

Of course, the audio signal also follows the set mode. In the gross setting, the acoustics only report climbing when the surrounding air mass rises faster than the polar descent, i.e. the aircraft is actually climbing. In the net setting, the audio signal is coupled to the net climb, so as soon as the surrounding air mass rises, the acoustics also indicate climb. This makes sense, for example, to better recognize small changes in the surrounding air mass when flying fast ahead, since the sometimes higher sink rate in net mode is otherwise compensated.

10.7.4. Netto Mode

[Normal]

[Relative]

With this setting, the net mode can be further refined. In the [Normal] setting, only the polar descent is taken into account for the current speed, so the variometer display corresponds exactly to the rise or fall of the surrounding air mass. In the display, this setting for the normal net is signaled with "net" in the top status line.

For example, if you circled the net display at 2 m/s, you would have a slightly less effective (gross) climb than the pure net value due to the inherent sink rate when turning, e.g. an LS-4 with an inherent sink rate of 0.6 m/s when turning only 1.4 m/s.


In order to take this into account, the net mode setting [Relative], often also called "Super Net" (default), also takes into account the inherent sink rate when circling, specifically the inherent sink rate that occurs when circling with a 45% bank angle and the optimal speed of the case would be. So it shows the value that you would have in terms of gross rises if you circled at the point. The display of the vario would be 1.4 m/s in this case, and further reduces the workload in the cockpit, since one no longer has to calculate the value of the expected climb in order to assess whether circling is worth as displayed directly in Super-Net mode. This setting is signaled with "s-net" in the status line.

10.7.5. Polar Sink

[ENABLE]

[DISABLE]

By selecting [ENABLE] (default setting), the polar sink rate is displayed in relation to the speed in the gross mode of the variometer. With [DISABLE] the display can be switched off, the polar sink is then no longer displayed. The polar sink is shown in the airliner style as a blue bar, in the retro style as a blue arc starting from the zero point and pointing downwards.

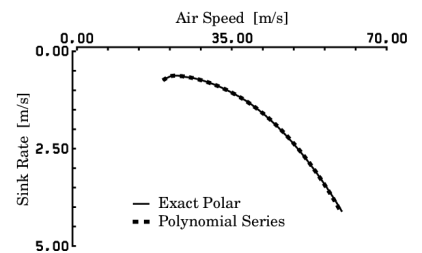

10.7.6. Needle Color

[White]

[Orange]

[Red]

Option for the color of the vario pointer. In the default setting, the Vario pointer is white [White], but can also be displayed in orange or red (Red).

10.7.7. Center Aid

[Disable]


[Enable]

With the option for the center aid, you can choose to show a center aid in the retro display. The default is [Disable], with [Enable] the centering aid is displayed. The feature is still new and has yet to be tested in flight. In the lower half of the scale, it shows green dots on a circular arc, which increase with the strength of the updraft relative to the flight direction (heading), and is intended to support the pilot in shifting the circle accordingly for better climbing. If there is no magnetic sensor, the course over ground from a possibly connected Flarm or GPS is used as a reference.



10.7.8. Vario Damping

3 sec

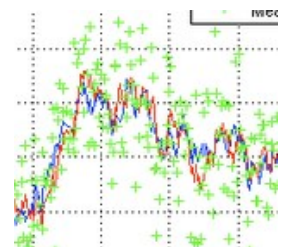

Damping controls the time constant for smoothing the variometer display. Normal thermals are inherently **turbulent**, which means that an undamped vario display provides the pilot with little information that can be evaluated. Time constants of a few seconds are common. Too much damping delays the display with simple low-pass filters. The optimized Kalman filtering, which takes physical conditions into account and thinks ahead, reacts quickly without appearing nervous. The default is 3 seconds. Values up to 6 seconds can be useful for an even smoother display.

10.7.9. Averager

20 sec

This damping controls the time constant for smoothing the digital average variometer display, top center of the display. The default is 20 seconds, so the digital display shows the average climb over the last 20 seconds. This is a fairly common value in many variometer systems, and gives the pilot an indication of the current strength of the thermal. Insufficient attenuation leads to poor legibility and offers hardly any useful information due to the nervousness of the display. The value can theoretically be increased to 60 seconds.

10.7.10. Mean Climb

Minimum climb

0.5 m/s

The Mean Climb min(imum) setting. For the calculation of the average climb, small climb values, which are present, for example, in straight flight at high speed, can be hidden. A modern recommendation (<http://aboutgliding.com/005-a-small-error-in-maccready-theory/>) In the following, only the core climb when circling should be used for the MC value, and not the climb values in straight flight or when centering. This value defines the minimum climb from which a climb value is still taken into account in the calculation of the mean climb. The default is 0.5 m/s.



Duration

According to the recommendations, the climb values of the last 3 thermals should also be taken into account as the average climb for the MC value. From the analysis of many flights you can see that a new updraft area is approached about every 15 minutes. This is taken into account with a default setting of 45 minutes for the "Mean Climb dur(ation)", i.e. only values from the last 45 minutes are taken into account. The value can be changed in minute increments.

Cycle

This setting determines how often the mean climb is calculated. The "Mean Climb cycl(e)" defines the period in which this occurs. The default is 60 seconds, the value can be tuned between 60 and 300 seconds. A circle with a 45% bank angle usually lasts about 20 seconds with a glider, 60 seconds corresponds to about 3 circles. This is a good value to gather enough data for the new Mean Climb indicator and to be able to clearly show the trend (shape/color of the diamond) accordingly. Shorter times lead to small values and tend to weaken the trend signaling.

Major Change

"Major Change" is the value for the change in average climb, which is graphically represented by a symbol change. If the value is exceeded, the shape of the route changes and the diamond lengthens up or down. The default is 0.5 m/s.

10.7.11. S2F Settings

Damping

5 sec

The S2F (Speed to Fly) can also be dampened within certain limits, the default is 5 seconds. Greater dampening smoothes but also delays the S2F display, so that after leaving the thermal, the speed to fly does not immediately increase in line with the sink. The value can be set in 0.1 second steps up to a maximum of 10 seconds. In modern aircraft with high wing loading and high cruise speeds of over 150 km/h, it makes little sense to react to short thermals. This would even be counterproductive, since unfavorably high load factors then occur due to inertia, which reduces the performance, which speaks for a damping of the S2F. When lined up, it makes sense to react with constant climbing or in a blue hole with constant falling, which is also very possible with a certain amount of damping. The value of 5 seconds can be tuned by the user.

Blockspeed

[ENABLE]

[DISABLE]

By setting the block speed [Enable], the rising or falling of the surrounding air mass (according to the value of the net vario) is suppressed. Only the load and the MacCready value are then included in the calculation of the optimal speed. The speed that the speed command then displays remains constant in the thermal, which follows the theory that pulling up with typical thermals lasting a few seconds does not necessarily make sense due to the inertia of the aircraft. This was proven years ago by numerical simulation at the Technical University of Munich, and it was shown that the MacCready speed for the upwind case only makes sense from a certain thermal duration of approx. 20-30 seconds (half the period of the phugoid or natural frequency, also called pump frequency) , or if you really want to crank. Some well-known pilots fly this style and achieve good average speeds with it.

S2F Mode

[Vario fix]

[Cruise fix]

[Switch]

[AutoSpeed]

[External]

[Flap]

[AHRS-Gyro]

The S2F 'Mode' specifies the procedure used to switch between circling and speed to fly. There are four options. The mode can either be fixed to Vario [Vario] or Speed to Set [Cruise]. The instrument then does not change modes, and remains fixed in either circling or speed command mode. In practice, when flying cross-country, these

two settings make little sense, at most the vario mode can make sense if you don't want to fly according to the speed to fly and always want to see a conventional vario display.

The speed command is always visible, so a speed command is also displayed in "Vario" mode, but this is the optimum circling speed with the current load for the minimum sink in a turn of approx. 45°. The resulting 1.4-fold load factor (+40%) is taken into account with a speed increase of ~20%.

There is also the option of using an external switch, e.g. a stick switch or tactile switch (more modern) on the I panel, better on the stick to change between vario and speed to fly. The switch must of course be operated, which increases the workload in the cockpit, but offers maximum flexibility. If you want to avoid this and if you want the switchover to take place automatically from a certain speed, select [AutoSpeed] (default setting). The speed to switch over can be set in the following menu item: "S2F AutoSpeed".

In [External] mode, the speed to fly setting is taken over by a second variometer, either coupled via Bluetooth or via the CAN bus from series 2022. The second device can be either the rear or the front variometer, depending on where you put the switches or want to wire the button. Select Switch (or Autospeed) on the device that should react to the switches. On the second device that you want to synchronize, the "External" mode.

Warning: The "Cruise from Master" mode has been replaced by this setting, so synchronization can now also be done from the client.

The [Flap] mode allows you to switch the speed command mode to circling mode via the optional flap sensor. The changeover takes place exactly when the flap exceeds the value of "S2F Flap Pos".

The [AHRS-Gyro] mode can be used on all devices except the 2020 series, and it automatically switches to circling flight mode if the rotation speed in degrees per second is greater than the "S2F AHRS Deg". The measured rotational speed is the value averaged over 20 seconds and provided with a hysteresis of 20%, it is only switched back when the value is 20% lower than the set value.


S2F Switch

[Switch]

[Push Button]

[Switch Inverted]

[Disable]

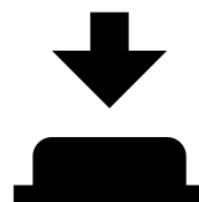

The type of speed command switch can be set, a switch [switch] is preset, but a button [push button] can also be selected, which changes the setting each time the button is pressed. This can make sense, for example, when using a Stefly stick input device equipped with buttons. The [Switch Inverted] option stands for a switch with the reverse function, i.e. the speed command mode is then selected when the switch is open instead of when the switch is closed. The switch can change mode at any time, even if set to [AutoSpeed], [Flap], or [AHRS-Gyro], unless set to [Disable].

S2F AutoSpeed

100 km/h

This is the speed in AutoSpeed mode at which the variometer changes from circling to speed command or cruise mode. The default is 100 km/h. With higher wing loading and modern gliders, the value can be set correspondingly higher.

S2F Flap Pos

1

This setting defines the flap position at which the S2F mode should be switched in the "S2F mode" [Flap]. By default, the flap position is set to +1.

S2F AHRS Deg

12 °

This sets the threshold for the rate of rotation in degrees per second at which the device switches to S2F mode in [AHRS-Gyro] mode. Small values switch to thermal mode early on when circling, while larger values switch with a delay due to averaging over approx. 20 seconds. A typical circle with a duration of 30 seconds has a rotation rate of $360/30 = 12^\circ$ degrees per second, which is the default.

Hysteresis

5 km/h

With the hysteresis, the automatic, controlled by the airspeed switching (AutoSpeed mode) to target flight can be calmed down. Without hysteresis, the mode may switch back and forth frequently at an airspeed around the set AutoSpeed. A hysteresis of 5 km/h (default setting) switches to speed to fly mode at 105 km/h and vice versa at 95 km/h back to vario mode.

Arrow Color

[White/White]

[Blue/Blue]

[Green/Red]



The color of the speed to fly arrow can be set individually under "Arrow Color". The first color is for the up arrow, the second color is for the down arrow. The last arrow is displayed in a different color if the range is exceeded. 3 arrows are displayed with the levels 10, 20 and 30 km/h. If the deviation is more than 30 km/h, the case of exceeding is given.

10.7.12. Electronic Compensation

With electronic compensation, you can optionally achieve total energy compensation for the Vario without a TE nozzle. The feature is still in the optimization phase, but already works in principle.

Good electronic compensation requires well-placed and functional static and dynamic pressure taps. Many factors play a role here, starting with the mass of the air trapped in the pressure lines, pressure changes along the fuselage and in the wing area, accelerations and more. It is therefore advised to generally use TE nozzle compensation, which works better in most cases. The parameters that play a role in good compensation can be found in the .pdf scan of the following paper, which Mr. Brötzel from ILEC compiled at the time:

<https://xcvario.de/wp-content/uploads/2021/11/GliderInducedErrorsinTotalEnergyVariometry.pdf>

eCompensation

[Enable]

[Disable]

This setting [Enable] selects the electronic compensation. The TE nozzle pressure is no longer relevant and in principle does not need to be connected. Default is Disable. If this setting is selected, only the pressure connected to ST, the static pressure, is used. This can make sense if no TE nozzle is available.

Adjustment

0.00 %

The compensation can be adjusted positively or negatively in 0.1% steps up to +/-50% using this percentage factor. This factor decreases or increases the theoretical kinetic energy, which is converted into height during hoisting ($V^2/2g$). In the case of under-compensation (vario shows increase when pulled up), the value should be increased until the display is correct. The same applies to overcompensation with negative values. It is also advisable to increase the preset damping of the Vario from 3 seconds to at least 5-6 seconds in order to minimize transient effects (short-term deviations). The rapidly converging Kalman filter then still reacts sufficiently quickly to changes.

10.8.Audio

The sound generator is an important part of improving safety in the cockpit, as it allows you to draw attention to other aircraft. The tone changes in pitch and interval between 100mS long pauses (or a second tone) with the vario or speed command indicator, and is emitted through the internal speaker on the rear of the housing.



10.8.1. Default Volume

10 %

In this setting, the volume that is used after switching on the device is configured. The default is 10% volume.



10.8.2. Max Volume

100 %

In this setting, the maximum possible volume of the device is configured. The default is 100% volume. If the loudspeaker used, e.g. with an external loudspeaker, shows distortion at the maximum volume, or if a limit is desirable, the value can be reduced here. For example, a setting of 50% reduces the volume by about 6 dB.

10.8.3. Cruise Audio

[Speed2Fly]

[Vario]

This setting is used to select which sound signal is generated in speed command mode. In the [Speed2Fly] speed command mode, a tone is generated which signals the deviation from the speed command. If the airspeed is too high, a progressively higher, optionally interrupted tone is generated, if the airspeed is too low, a lower tone. In the [Vario] setting, the audio signal remains in the vario setting and can, for example, signal net climbing if the vario is set in "Net Mode" or "Cruise Net Mode". For more information, see the "Vario Mode" setup.

10.8.4. Tone Styles

CenterFreq

500 Hz

Specifies the center frequency of the tone generator (sine) and can be modified in 10 Hz steps between 200 Hz and 2000 Hz. The default is 500 Hz.



Octaves

2.00 fold

This determines how many octaves the tone change extends between the lowest and the center frequency (Center Frequency) and the highest or lowest tone. The value can be changed in 0.1 steps between 1.5 times and 4.1 times. The default is 2x, which means that with a center frequency of 500Hz, the highest tone is 1000Hz and the lowest tone is 250Hz. Too high a value produces tones outside the optimal spectrum for the loudspeaker and human hearing.



Dual Tone

[Disable]

[Enable]

This setting is used to select whether a simple tone [single tone] with short interruptions is desired (di di di di) or whether the vario works in two-tone mode [dual tone] (di da di da). The default mode is with single tone and interruptions.



Dual Tone Pitch

This setting is only relevant in two-tone mode. It indicates the pitch, i.e. the pitch change of the second tone. The second tone is shifted up in pitch by this percentage. The default is 12%.



Chopping

[Disabled]

[Vario Only]

[S2F Only]

[Vario and S2F]

 
 
With audio in vario or speed to fly (S2F) mode, the sound can be selected at values above zero with short interruptions (100 mS), the frequency of which increases with the displayed vario or S2F value. This interruption (chopping) can be switched off [Disabled], or apply only to Vario [Vario only] or the speed command [S2F only]. A fourth option is a break for both modes [Vario and S2F], which is the default. The maximum interruption frequency when the scale is struck is exactly 10 Hz, the minimum frequency is 1 Hz. In between, the frequency increases linearly with the display value.

Chopping Style

[Soft]

[Hard]

If the sound is interrupted by chopping, a certain "click" sound is heard when switching on and off, this is due to the spontaneous square-wave power change which generates harmonics. In order to minimize this effect, the [Soft] setting slowly ramps up the power within a few milliseconds (fade-in) and slowly ramps it down again when switching off (fade-out). The setting is a matter of taste, the default is the soft mode, which is mostly perceived as more pleasant.



10.8.5. Range

[Fix 5 m/s]

[Fix 10 m/s]

[Variable (=N m/s)]

Fix or Variable ?

This determines whether the tone generator follows a fixed range setting [Fix 5 m/s] or [Fix 10 m/s] or follows the current variometer range setting [Variable (=N m/s)]. The range determines from which value the tone generator outputs the highest or lowest frequency and interval sequence. It can make sense to assign the range dynamically in the case of a weak climb. With a dynamic setting and a range of 2 m/s of the vario, 2 m/s then sound the same as 5 m/s with a fixed setting. The default is [Fix 5 m/s].

10.8.6. Deadbands

[Lower Vario]

- 0.30 m/s

[Upper Vario]

0.30 m/s

[Lower S2F]

- 10km/h

[Upper S2F]

+ 10km/h


The deadband is the area where the vario does not emit any sound (muted). There is the [Lower ..] for the negative value and the [Upper ..] for positive values. The default is +/-0.3 m/s for the deadband. The deadband helps to hide small climb values and to ensure silence on the ground without having to turn down the volume. The target travel (S2F) also has a deadband, preset are +/-10km/h only when the target travel difference from this value is exceeded is the muting canceled.



10.8.7. Audio Exponent

1.00

With this option, the relationship between the pitch and the Vario (or S2F) value can be optimally adapted to the circumstances. The default is 1.0, i.e. a linear relationship. Values greater than 1, e.g. 1.5 produce a magnifying glass effect around the zero point. This is more of a setting for flat land, when mainly small climb values are to be expected. Small vario values then lead to larger changes in the sound, the pilot is already alert with smaller climb values. Values smaller than 1, e.g. 0.5 dampen the audio signal for small climb values. This, on the other hand, draws attention to high climb rates. This can make sense in the mountains if very good climb rates are to be expected.

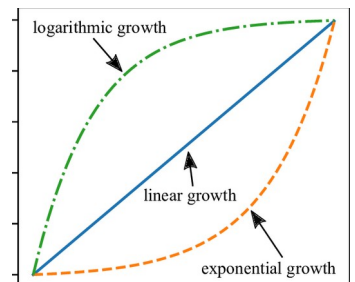


10.8.8. Amplifier Off

[Always On]

[Shutdown]

With this setting, the digital audio amplifier can either be switched off temporarily [Shutdown] or operated continuously [Always On] within the deadband (area in which no sound is emitted). Turning off the amplifier saves power (approx. 3-4 mA at 12V), and

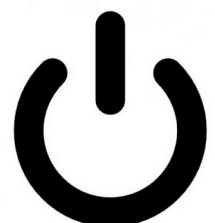

suppresses residual noise from the system, the vario does not make any noise, so [Shutdown] is the default. If you want to completely get rid of the very slight clicking noises when switching the amplifier on again (effectively suppressed by the digital technology), you can select the [Always On] setting. Depending on the environment, one or the other may make more sense. Normally, the factory setting is the optimal setting here.

10.8.9. Audio in Setup


- [Silent]
- [Stay On]

In the default setting, the sound remains on while you are making settings in the setup menu, with the setting [Silent] you can ensure silence during the setting work, the audio then remains switched off until the menu is exited again.

10.8.10. Equalizer

Equalizer

- [Disable]
- [Speaker 8 Ohms]
- [Speaker 4 Ohms]
- [Speaker External]

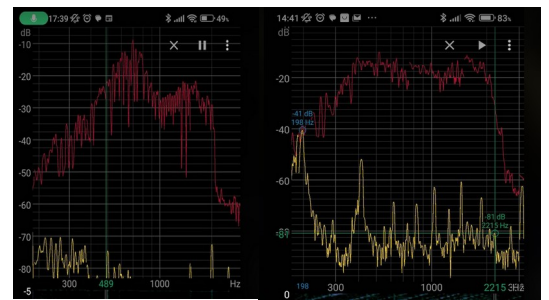


The audio equalizer ensures a uniform frequency response of the audio output, see image on the right (red curve). In the picture on the left you can see the frequency response of the speaker without the equalizer switched on according to [Disable]. The equalizer increases or decreases volume as a function of frequency, as shown here, to attenuate the speaker's resonant frequencies at 800 and 1600 Hz, as well as boost other areas to achieve an overall balanced frequency response over a wide frequency range (right image). The most commonly installed 8 ohm speaker is selected by default, some devices were delivered with a 4 ohm speaker, which differs slightly in the frequency response. If the setting of 8 ohms does not fit, or if an external loudspeaker is used, then switch to [Speaker 4 Ohms] or [Speaker External]. The correct setting has been found when approximately the same volume can be heard for all frequencies.

Frequency Response

30 %

Since the sensitivity of human hearing increases continuously by approx. 6 decibels per octave in the range from ~30 Hz to 4000 Hz, higher tones sound significantly louder than lower ones, or low frequencies can hardly be heard at a comfortable volume from high tones.

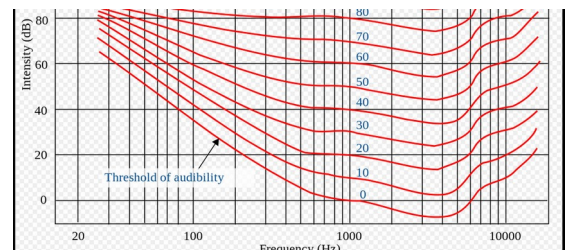

This setting takes this into account and reduces the volume per octave by the specified factor. A factor of 50% (amplitude) would correspond to an attenuation of exactly these 6 decibels, since the dynamics of the system are limited, 30% is preset, which represents a very good compromise. If higher frequencies are perceived less well, which is usually normal in the second half of a pilot's life, this value can be reduced to 0%.

10.8.11. Split Volume


[Disable]

[Enable]

With this feature, which adjusts the volume separately in Vario mode and in speed-to-fly mode, the volume can be adjusted to the different acoustics in the cockpit when circling and in fast flight. In older gliders flying at high speed, a higher volume is often necessary so that the sound can still be heard. The feature takes some getting used to and is switched off by default. With [Enable] it is activated.

10.9. Weight/Polar

In the loading/polar dialog, the right polar for the aircraft type is selected, masses can be adjusted and the polar that is set can be tuned manually.

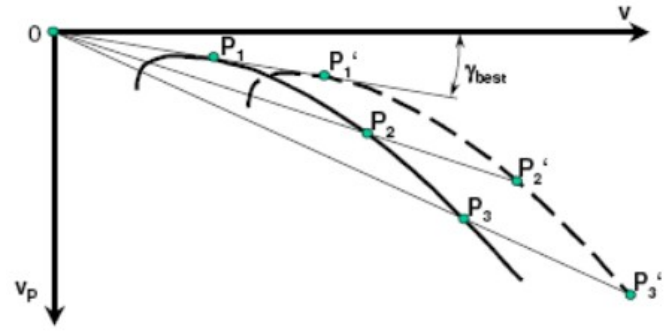

10.9.1. Glider Type

[User Polar]

[Antares 20E]

[ASK 21]

:

With this the polar for the corresponding type of aircraft can be set.

There is also a polar [User-Polar], e.g. for an aircraft type that is not contained in the library. the [User Polar] is selected by default and corresponds to the values for an LS4a. There is also an extensive and constantly growing library.

The current list of supported polars in the library can be found here:

<https://github.com/iltis42/XCVario/blob/master/main/Polars.cpp>

Attention: When updating from older software versions, the set polar must be checked after the update, the adoption of the setting may not be correct. With an upgrade from newer software versions from June 6, 2021, the problem is solved and the check is no longer necessary.

10.9.2. Polar Adjust

[Wingload]

34.4 kg/m²

[Speed 1]

80 km/h

[Sink 1]

- 0.66 m/s

[Speed 2]

125 km/h

[Sink 2]

- 0.97 m/s

[Speed 3]

175 km/h

[Sink 3]

- 2.24 m/s

Under PolarAdjust, the reference wing loading and the sink values for the individual speeds can be modified. The reference wing loading is the value at which the polar was flown and is usually given with the polar. If the current wing loading is higher even without ballast, then this must be set under "Fixed Ballast" see below. Normally, the reference wing loading should not be changed and must agree with the information from the polar. For this wing loading, the corresponding sink values [Sink 1,2,3] are to be set at three points according to the polars from the flight manual at the corresponding speeds [Speed 1,2,3]. The respective decrease is recorded as a negative value. Ideally, you should take the first speed around the lowest sink rate, then an average speed and a reasonable highest speed which is relevant for the cruise mode.

Modifications to the selected polars are reset by selecting a different aircraft type. Normally, only the aircraft type has to be set, an adjustment of the above parameters is not normally necessary, further aircraft types are promptly integrated into the library by XCVario on request, and are immediately available after a SW update.

10.9.3. Max Ballast

160.00 liters

The maximum possible water ballast can be modified here. This parameter is usually given by the aircraft type and comes from the polar library according to the manufacturer's information, but can vary due to modifications such as adding winglets or installing other water bags, and can be modified here accordingly.

10.9.4. Wing Area

10.5 m²

Here the wing area can be modified. These parameters are actually given by the aircraft type, but can vary due to modifications such as attachable wings or winglets, and can be modified here accordingly.

10.9.5. Empty Weight

265 kg

With "Empty Weight" or empty mass, the empty weight or empty mass can be set more precisely. Gliders tend to get heavier over time, not only because of the installation of instruments, the addition of winglets or repainting, but also the CFK or GFK itself draws water over time and becomes heavier as a result. In order to take this into account, the empty weight can be set to a higher value than that which was used as the basis for determining the gliding polars in the comparison flight. As a default, when selecting the polar, the empty mass is entered from the flight weight minus the pilot's weight. A higher empty mass thus improves gliding at higher speeds and, like normal water ballast, contributes to increasing the wing loading.

10.9.6. Crew Weight

80 kg

With the "Crew Weight" or pilot and passenger weight, the weight of the pilot, if necessary also of the passenger in two-seaters including parachute and luggage should be recorded. The default setting is 80 kg. A correct weight contributes to the correct determination of the wing loading and thus to a better agreement of the polars with practice, and provides more accurate values for the speed to fly and the net vario, as well as the other weights.

10.10. Options

10.10.1. Student Mode



[Disable]

[Enable]

With the "Student Mode", if "Enabled", only the settings necessary for the flight are shown in the setup menu, such as MacCready, Audio Volume, QNH Setup, Ballast, Bugs and Airfield Elevation. All other setting options are then hidden. The mode can be ended again by turning in the "Expert Password" 271 on the rotary switch and restarting. Then all setup options are displayed again.

The mode can make sense for clubs to prevent unintentional twisting of an important parameter in a training aircraft. By default, this mode is turned off.

10.10.2. Flap (WK) Indicator

The "Flap Indicator" shows the pilot the optimal setting of the flap depending on the wing loading and the speed in straight flight. The default setting for the flap indicator is switched off and can be switched on with [Enable]. The speeds from the flight manual for the wing loading of the polars entered should be recorded.



Flap Indicator

[Enable]

[Disable]

Here you can [Enable] or [Disable] the feature of the flap display. By default, the display is off. The optimal latching of the flap is indicated with the green triangle as shown above. The green triangle moves vertically according to the set speed ranges for the flap positions.

Max positive Flap

2

Two positive flap positions are preset. The number of positive flap positions can be selected here. Between 0 and 3 positive flap positions are available. According to this setting, these flap positions are visualized, as well as menu items for recording the speed ranges, and the values for calibration are recorded if the sensor is present.

Max negative Flap

-2

As above for the number of negative flap positions.

Takeoff Flap

1

Here you can set which flap position should be displayed when there is no dynamic pressure on the ground. Normally this is the position required for take off and is usually found in the flight manual. Depending on the load and the wind situation, the setting may require correction. In case of doubt, the flap position specified in the flight manual for the respective situation always applies.

Flap Speeds Setup

The optimal speed ranges are recorded under the following entries, shown here for three positive and three negative flap positions. Only those values are used which are given by the maximum positive and negative setting.

Speed +3 to +2

70.00 km/h

Speed +2 to +1

78.00 km/h

Speed +1 to 0

88.00 km/h

Speed 0 to -1

105.00 km/h

Speed -1 to -2

165 km/h

Speed -2 to -3

195 km/h

Flap Position Labels

Flap Label +3:

L

Flap Label +2:

+2

Flap Label +1:

+1

Flap Label 0:

+0

Flap Label -1:

-0

Flap Label -2:

-2

Flap Label -3:

-S

In order to enable the display to be adapted to the labeling of the flaps in the cockpit, a label can be selected here for each flap position, named in the software from -3 to +3.

Each position can be chosen from a range of digits from -9 to +20 and letters such as N,L and S. Additional letters or numbers can be added on request. The labels on the flap lever can represent positions or degrees for the inclination of the flap, this varies from manufacturer to manufacturer.

For reasons of space, the plus sign is only displayed for digits less than 10. Negative values are supported up to -9 (so far sufficient for all models considered) and are always output with a minus sign.

Flap Sensor

[Disable]

[Enable IO-2]

[Enable IO-34]

[Enable IO-26]

This option activates the flap sensor, which was on IO-2 or IO-26 in earlier hardware versions and on IO-34 in later series. The settings for IO-2 or IO-26 can only be used together with the Bluetooth connection. With a WiFi connection, the use of the IO-34 is necessary, this will be supported from the second series in 2021. The display is made using the rectangle, which symbolizes the flap lever. The color of the rectangle changes depending on the position of the flap lever. With a good setting, shelf less than half a flap position, is the color **green**, otherwise white. In the case of a more serious error, more than a complete notch, the symbol also flashes in color **red**.

Sensor Calibration

[Cancel]

[Start Calibration]

With the help of the flap sensor calibration, the flap sensor is measured for the latched flap positions. With [Start Calibration] the dialog begins, which prompts specified positions to snap. The dialog looks like this:

Set Flap +2

Sensor: 385

Saved


and thus prompts the flap position to be set to +2. The digitized sensor data in the range from 0..4095 are displayed in real time. If the flap is set correctly, the value is saved by pressing the push button and the next flap position is reached. At the end, the completion message "Saved" appears and the calibration is complete. The graphics for the flap display should then be checked. The flap positions must now match the selected flap position. If this does not fit, e.g. because a position was not locked correctly, the calibration can be repeated at any time. If there are further problems, the installation of the potentiometer should be checked with a multimeter, for example. It is recommended that the potentiometer is installed in such a way, for mechanics see the section on the flap sensor below, that positive flap positions result in smaller resistance or digital measured values and negative positions result in larger values, so that a uniform procedure is used to check, measure and Facilitating support also works the other way around.

The values are proportional to the resistance of the potentiometer. If a separate potentiometer is used, it must be supplied with a voltage of 1.2V on one side; the input has no internal pull-up. In the simplest case, a resistor to the vehicle electrical system is sufficient. A regulated voltage is better.

It is recommended to use the XCVario flap sensor (<https://xcvario.com/product/flap-sensor/>), which is now available and offered in the XCVario Shop, which works with a regulated reference voltage and an operational amplifier (voltage follower), and is therefore somewhat more precise works as a simple potentiometer, exhausts the full range and resolution of the AD converter, and delivers its voltage independent of vehicle electrical system fluctuations.

10.10.3. Units

For international use, the units for the variometer, the airspeed the altimeter, temperature, QNH and distance can be set as desired. The setting options are as below, the defaults are printed in bold.

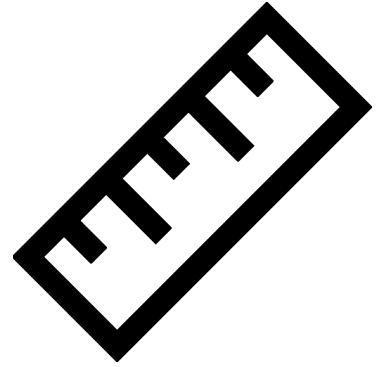

Altimeter

[Meter (m)]

[Foot (ft)]

[Flightlevel (FL)]

Airspeed

[Kilometers/hour (km/h)]

[Miles/hour (mph)]

[Knots (kt)]

Vario

[Meter/sec (m/s)]

[Feet/min x 100 (ft/min)]

[Knots (knots)]

Temperature

[Celcius]

[Fahrenheit]

[Kelvin]

QNH

[Hektopascal]

[InchMercury]

Distance

[Meter (m)]

[Feet (ft)]

10.10.4. [Airspeed Mode]


[IAS]

[TAS]

[CAS]

[Slip Angle]


In addition to IAS (Indicated AirSpeed), i.e. the displayed speed, which deviates slightly from the true value in terms of height, the TAS (True AirSpeed) and CAS (Calibrated Airspeed) is also available as an alternative. The TAS increases at higher altitudes and corresponds to the true speed and is comparable with the ground speed of the GPS without wind, which shows a higher value at higher altitudes. The "Slip Angle" setting shows instead of the speed an estimate of the slip angle in degrees determined from the acceleration values, roughly corresponding to the thread, which plays a role in the wind calculation in straight flight.

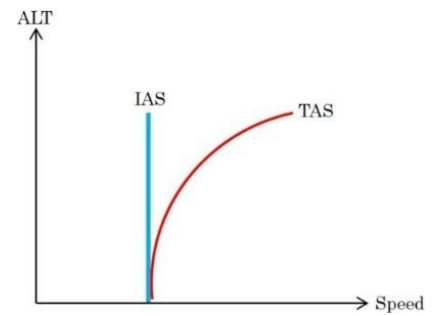

10.10.5. Auto Transition

[Disable]
[Enable]

With this setting, the altimeter can be automatically switched to QNH standard 1013.25 hPa from the "Transition Altitude".

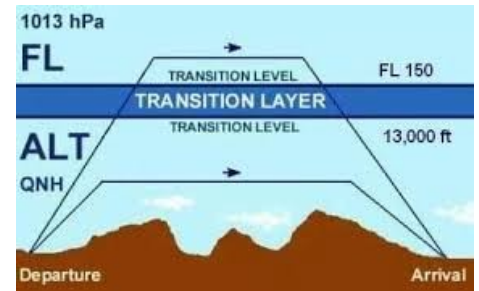

10.10.6. Transition Altitude

50.00 FL

With this setting, the country-specific "Transition Altitude" can be set as Flight Level (FL). This is only relevant if the automatic transition from the previous point is switched on (Enable). Below the transition altitude, the QFE setting applies to the altimeter, above that it switches to QNE according to the standard 1013.25 hPa.

10.10.7. FLARM

Alarm Level

[Disable]

[Level 1]

[Level 2]

[Level 3]



The variometer display is of secondary importance when a collision is imminent. When a FLARM is connected, the device can therefore be used to implement an acoustic and optical FLARM warning, similar to the common LED FLARM secondary display with a higher level of detail and additional information. The default is [Level 1], the FLARM warning is switched on at level 1 and informs you from the lowest alarm level "1" of the FLARM in the event of an impending collision in 13 to 18 seconds, level 2 would warn at 9-12 seconds, corresponding to level 3 only from the highest alert level, i.e. the immediate danger of a collision, between 0 and 8 seconds. Please refer to the description of the FLARM used for further details.


The warning is given on its own screen, which graphically in the form of a red triangle informs about the direction from which the danger is coming, both in the top view and in the horizontal view. An example of a Traffic Alert Alert level 1, the lowest alert level, see right. The danger comes from the front slightly to the left, shown here is a relative bearing of -10 degrees, so the red triangle shows the exact angle, analogously to the horizontal view. Furthermore, the type of warning and the alarm level is output by means of text, e.g. with "Traffic Alert 2". The direction of approach in the clockwise system, e.g. "2 o'clock", the relative distance and the relative altitude difference in the selected unit system.



Alarm Volume

[100 %]

The audible warning is designed as a constant and rapidly alternating two-tone tone to distinguish it from other tones and increases in frequency, tone sequence and volume according to the alarm level. In the highest alarm level 3, the warning tone is output with the level set here. At alarm level 2, the noise is reduced by around 6 decibels, at alarm level 1 by around 12 decibels. The default is 100%, the volume can be varied between 20% and 125%.

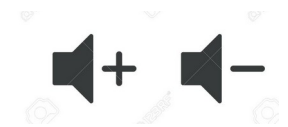

FLARM Simulation

[Disable]


[Start Sim]

The simulation of an approach by a second aircraft can be simulated under this menu item. The approach begins to the left below and moves to the right, with a further decrease in distance and height difference, past the bow. Different alarm levels of the FLARM are simulated optically and acoustically. The setup must be exited in order to be able to follow the situation on the screen.

10.10.8. Compass/Wind

Compass

The compass is an optional module for the S2 interface, a magnetic sensor of the latest design, which allows an accuracy of up to one degree deviation with an optimal installation position and calibration. The magnetic sensor measures the earth's magnetic field in 3D, i.e. in all 3 spatial directions, and has a tilt angle correction (tilt compensation). The sensor gets the inclination data from the AHRS module. For this it is necessary that the sensor calibration of the AHRS sensor is carried out once in its installation position, preferably in flight attitude. It is not necessary to activate the AHRS feature.

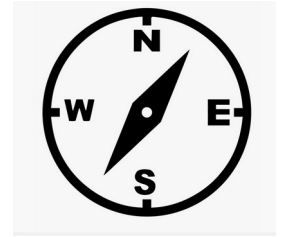

The magnetic sensor must be firmly connected to the aircraft in the correct position, the symbolism on the sensor shows an aircraft symbol with tail and wings, this must match the real aircraft and the lettering 'Top' must point upwards. There must not be any metal in the vicinity at the installation site, 20 better than 30 cm distance are minimum distances to deliver good results. The compass should not show more than 15°, better only 10° deviation (deviation) in any direction. A good position in a narrow glider fuselage with controls, cables and steel parts and various fittings is not easy to find. The cable should not be longer than two meters and should be point-to-point. If a flap sensor is also installed, pins 3 and 4 on interface S2 must only run to the magnetic sensor, not also as a spur line to the flap sensor. Otherwise, reading errors and even failure of the compass are possible.

For reasons of space, the display of the magnetic heading is currently only supported in the retro display or the UL style.

In the following menu items, its settings as well as the calibration of the sensor or the compensation of the deviation can be carried out.

Sensor Option

[Disable]

[Enable I2C]

[Enable I2C no Tilt Comp.]

[Enable CAN Sensor]

With this, the type of magnetic sensor can be selected or the sensor can be switched off. By default, the magnetic sensor is switched off [Disable]. In the [Enable I2C] setting, a simple magnetic sensor connected to S2 with an I2C interface is selected, which compensates for the tilt angle (English Tilt Compensation). In the setting without tilt compensation in the next point, the usual compass rotation error up to an inversion of the display values can be expected. This setting is essentially only for test purposes, e.g. for a test setup in the car. The [Enable CAN Sensor] setting enables the use of a new magnet sensor type with CAN interface, which means that the serial interface on S2 remains free and can be used for other purposes, e.g. for the serial connection to an OpenVario. Furthermore, there is no restriction on the cable length for the CAN interface (max. 2 meters with I2C), the CAN magnetic sensor can therefore be installed at any point.



Note CAN:

When selecting the CAN type, the CAN interface must be switched on in the system menu, the setting 1000 Kbit is recommended, other data rates are also possible.

The sensor should also be plugged in when the compass is switched on, otherwise the software will query the module regularly, which will generate unnecessary CPU load in the event of an error.

Sensor Calibration


[Cancel]

[Start]

[Show]

[Show Raw Data]

With this option, the measuring range of the magnetic sensor is calibrated in the same way as you know it from the compass module of a mobile phone. The calibration must be carried out again if the strength of the earth's magnetic field changes, this is the case, for example, if you move to a different region on the globe. Normally, it is sufficient to carry out the calibration once.

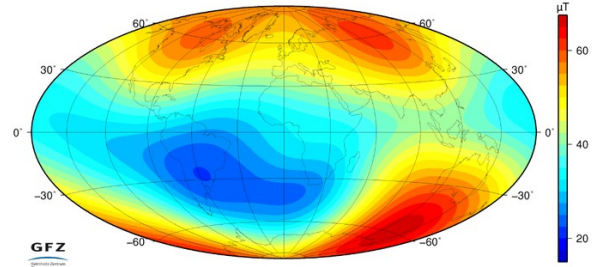

For the purpose of calibration, the sensor must be swiveled in all spatial directions, which must be done before the sensor is permanently installed in its installation position at a location that is as free of metal or magnets as possible. The minima and maxima of the magnetic field strength in the individual spatial directions X,Y,Z are recorded and permanently stored in the non-volatile memory of the XCVario. Calibration is complete when the three displayed scale values (X, Y, Z scale) are close together and no longer change. In the sensor dialog, the measured field strength for the individual directions X,Y,Z is displayed live as a percentage of the maximum value of 2 gauss to the right of the scaling value in brackets.

example:

X Scale=95.2 (-5.2)
Y-Scale=100.4 (3.9)
Z-Scale=102.1 (13.9)

The best results are achieved if you calibrate the 3 directions individually and make sure that each direction X,Y,Z displays the maximum possible positive field strength once, e.g. (+18.5), and then and in the opposite direction, i.e. rotated 180 degrees, and with that the maximum negative display shows eg (-18.5). This is to be carried out for all 3 spatial directions in both directions. The corresponding spatial direction will turn **green** if the maximum values have been reached. This is the case when **the other two directions are at zero or close to zero** (display value less than 1.0), the other two direction sensors are then orthogonal to the earth's magnetic field. A small graphic with maxima and minima, as well as the current measured values for the six directions X,Y,Z, positive and negative, makes calibration easier.

The X-axis of the sensor runs across the board (i.e. along the short side), the Y-axis along it (along the long side), and the Z-axis runs exactly perpendicular to the surface of the board.

Attention: The inclination, i.e. the inclination of the field line of the magnetic field to the earth's surface, is between 62° and 70° in Germany (steeper in the north), the sensor for calibration is therefore at an angle of about 35°, namely inclined to the south, compared to the horizontal hold to capture the maximum value. Once you have found this, you rotate the sensor in exactly this position by 180° around its own axis, where this value is inverted. Then the sensor is rotated 90° in a different direction for the next axis.

The saved results of the calibration can be viewed at any time under the [Show] option.

With "Show Raw Data" the raw measured values, the sensor data, can be delivered in real time. An example is below:

```
X = 3397
Y = 1874
Z = 5420
Raw magn H= 48.0 uT
Cal magn H= 48.5 uT
```


Here, the X, Y and Z values are the digital values of the AD converter for all three spatial directions. The value 8192 corresponds to 1 Gauss or 100 μT . And the "Raw Magn H" is the sum of squares of the values, i.e. the amount of the field strength in μT . The normal field strength in Germany is around 49 μT and should show around this value unaffected. The "Cal magn H" is shown when the sensor is fully calibrated, and should not deviate more than 2% from the raw value, if the difference is much more, this can indicate an incorrect calibration.

Note: **No meaningful directions** can be determined without the sensor calibration, so the **display remains switched off until then**. A faulty, incomplete calibration can lead to deviations in the magnetic heading.

Setup Declination

0°

The local spatial variation or declination, source e.g. ICAO map or from airfield data on the Internet, can be taken into account with this parameter. A negative spatial declination, for example -2 degrees, corresponds to a deviation of the magnetic needle to the west. A positive spatial declination of e.g. 2 degrees corresponds to a deviation of the magnetic needle to the east. This setting can make sense if you start at a different location with a different local variation without wanting to carry out a new calibration.

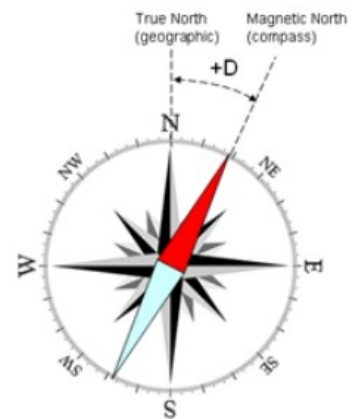

Auto-Deviation

[Disable]

[Enable]

When "Auto-Deviation" is switched on, the deviation is determined automatically, so it does not need to be compensated for manually, as is possible in the following point. This setting is part of the new method for wind calculation TAWC (Tesla Assisted Wind Calculation), which uses the direction information from the earth's magnetic field, but calculates the compensation for the deviation in a control loop with the help of the wind information from the circling flight. The wind triangle is fed with the basic vector and the wind from the circling flight, and the result is a calculated vector for the heading and the airspeed, with which the deviations in the compass and the airspeed can be perfectly adjusted. The determined values are saved in the non-volatile flash memory approximately every hour. The procedure can only be used if there is at least a crank share of 20%. In pure straight flight, e.g. in a UL, manual deviation compensation at the compensation station is to be used.

Setup Deviations

Direction: 000

Direction: 045


Direction: 090

Direction: 135

Direction: 180

Direction: 225


Direction: 270

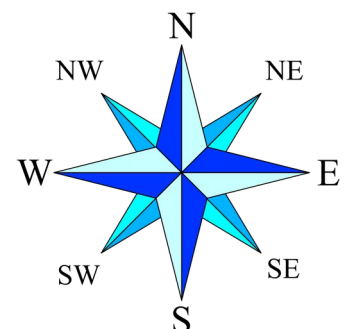

Direction: 315

This compensates the deviation of the compass in its installation position in the aircraft. Each direction can be set separately via the dialog. This corresponds to the step-by-step creation of a deviation table; the software uses these values to carry out an approximation for all directions. To compensate for the deviation on the ground, the aircraft must be rotated precisely in eight different directions with the wings level. For this purpose, some airfields have a compensation area with a compass rose attached to the ground, which makes this easy to do. If this is not an option, the direction can be determined with the help of an accurate compass, e.g. on the wing. For complete compensation, all 8 directions must be selected and the calibration started and ended by pressing a button. After confirmation, the value is stored in non-volatile memory and you can move to the next direction.

Two different effects are compensated for in the specific installation position, the so-called "soft iron effect" which is caused by the influence of non-magnetic metals on the earth's magnetic field, such as nickel or iron, and bends the magnetic field. There are also the "hard iron effects", metals which are magnetic themselves, i.e. produce their own magnetic fields and normally emanate from magnets such as a loudspeaker.

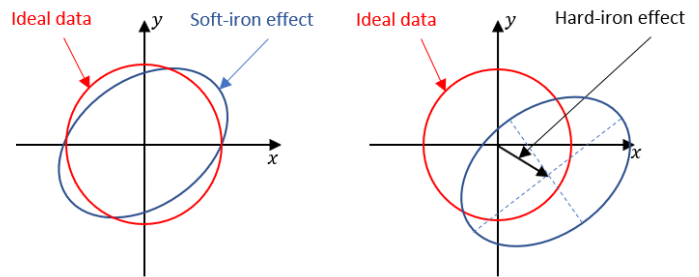

Show Deviations

The deviation values can be displayed under this point, for all eight directions for which the deviation was saved, whether it was determined manually through compensation as in the previous point, or calculated using the AutoDeviation feature. A small graphic illustrates the course of the deviation curve. Ideally, the curve should be continuous and have a sine period without further oscillations.

Reset Deviations

[Cancel]

[Reset]

An existing deviation table as created in the previous point can be deleted here.

Setup NMEA

Setting the NMEA sentences generated by the compass module.

Magnetic Heading

[Disable]

[Enable]



Turn on the generation of NMEA sentences for the magnetic course, which points in the direction of magnetic north. The corresponding NMEA sentence for this is \$HCHDM.

True Heading

[Disable]

[Enable]

To generate the NMEA for True Heading, according to \$HCHDT, a spatial variation (declination) must be recorded and the calibration carried out.

Damping


3.00 sec

Damping calms down the compass display, the default is 3 seconds, which is usually sufficient to get a stable display. If the displayed value is not stable in individual cases, e.g. due to electrical lines or other sources of interference, the damping can be increased slightly. The settling times increase accordingly.

I2C Clock

100 KHz

The clock of the I2C bus (SCL) to the magnetic sensor, which is outside the housing, can be set here. 100 KHz is the manufacturer's recommendation for the chip. If, for example, problems arise with this due to long lines, such as a sensor not being found during calibration or no display being visible, the frequency can also be lowered.

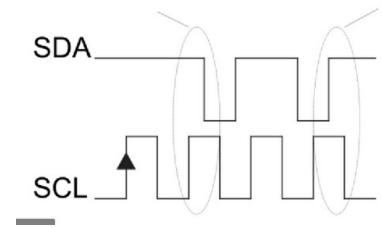

Show Settings

Shows an overview of the most important settings and whether the measuring range has been exceeded (sensor overflow).

Wind Calculation

[Disable]


[Straight]

[Circling]


[Both]

With this option the wind calculation is switched on. The information is shown in the retro display (below the airspeed).

For wind in straight flight (Straight setting), the compass must be installed and functional, and the sensor calibration must be performed. The wind is calculated as vector subtraction of the air vector from the true heading (TH) of the compass and the airspeed, as well as from the GPS signal of a connected FLARM the ground vector from ground speed and the true course (TC), the course over ground. The deviation can be compensated on the ground or automatically determined in flight. The XCVario must also be connected to a Flarm. The wind in level flight is an important piece of information, since with crank percentages of perhaps only 20%, a glider will be in level flight most of the time. A good accuracy of the compass is important here, the high-resolution 3D magnetic sensor, available as an additional module for the XCVario hardware series 21, supports this.

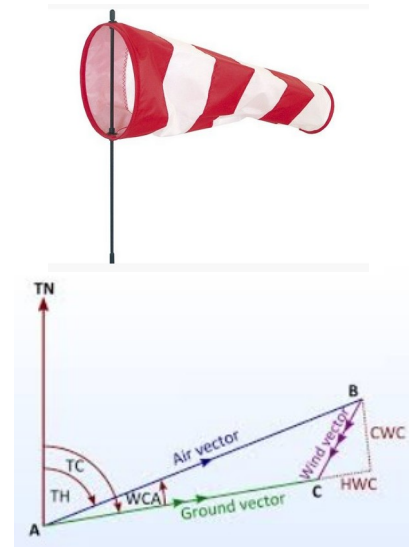

Below is a comparison of the wind display of both methods over an entire flight day on February 7th, 2022 (<https://www.weglide.org/flight/178203>), at the altitude of the flight with the east wind with approx. 20 km/h in the west from 120° and turning east to south by 150° were announced. Both methods meanwhile give values with good agreement:

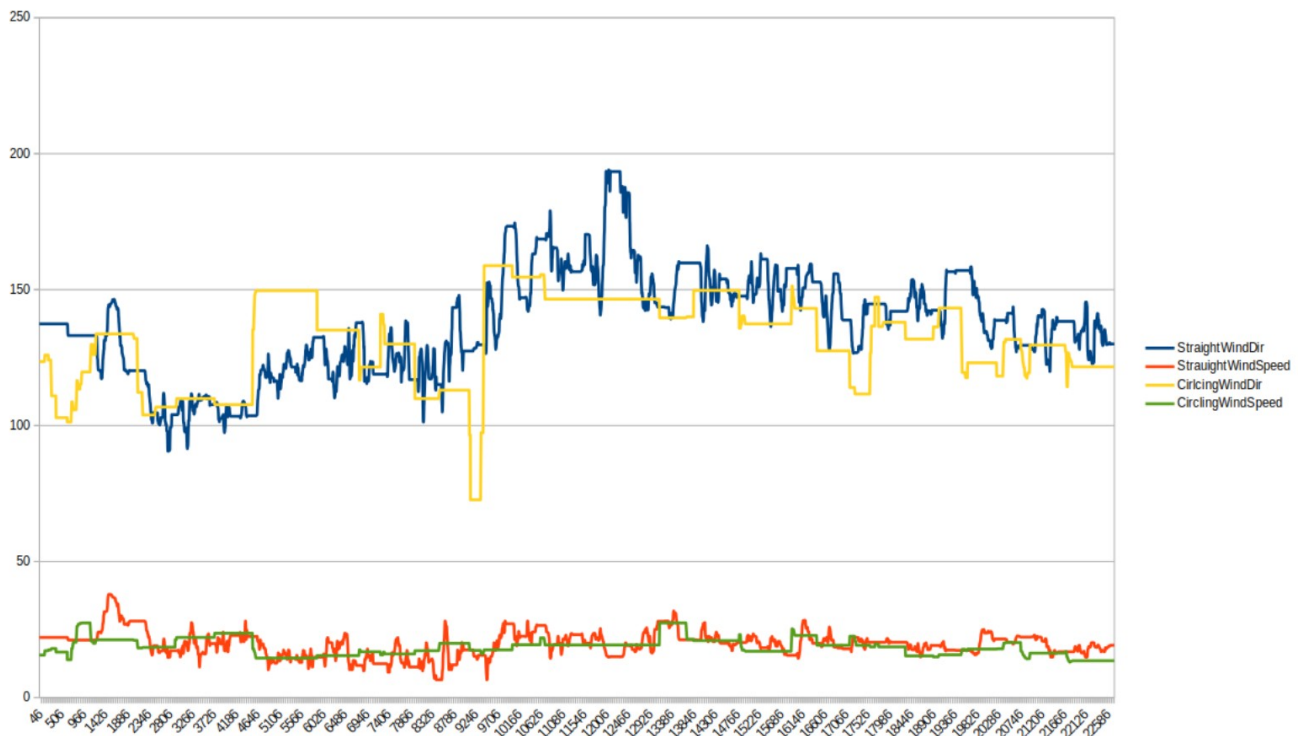

Note: The straight flight setting for the wind calculation has is now under test in flight and has been optimized with the help of simulations, so it is still under development. A final release is not expected until summer 2022 due to bad weather during the season 2021.

The wind calculation in circling, on the other hand, is already sufficiently stable, the method is identical to XCSoar or Cumulus, from which it originally comes, and has already been released. In the 'Both' setting, the wind that has just been calculated is always displayed. Depending on the flight status, circles or straight ahead, the corresponding calculations are carried out here.

Display


[Disable]

[Wind Digits]

[Wind Arrow]

[Wind Both]

[Compass]

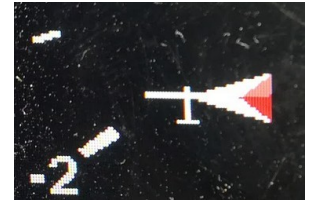

Under the "Display" setting, either the current wind can be displayed digitally [wind digits], e.g. 90°/25 in the format of wind direction/wind force in the retro-style display (below IAS/TAS), or as a small wind arrow within the display [Wind Arrow], or both ways [Wind Both]. By default, the wind indicator is disabled [Disable]. In addition, in the [Compass] setting, the compass course can also be selected and displayed. If there is no wind calculation, e.g. on the ground or during the first calculations, the compass course is always displayed instead of the digital wind. The wind is always displayed in the unit selected for the airspeed.

Arrow Ref

[North]

[Mag Heading]

[GPS Course]

The "Arrow Ref(erence)" determines whether the wind arrow (Engl. Arrow), relative to the north direction, to the compass course or direction of the longitudinal axis of the aircraft [Mag. Heading] (only possible if a magnetic sensor is present), i.e. to the longitudinal axis of the aircraft, or relative to the GPS course [GPS Course] over the ground. The wind arrow is only displayed in retro-style display mode. For relative plots, a small airplane symbol is drawn at the wind's tip.

Straight Wind

Filters

Airspeed Lowpass

0.020

The airspeed sensor is continuously calibrated during wind measurement. The low-pass factor determines the speed at which the calibration is adjusted. The default value of 0.020 or 2% means a calibration change of 2% per second. Normally, the default value does not need to be adjusted.

Deviation Lowpass

0.020%

The deviation of the magnetic sensor is also continuously calibrated during wind measurement. The low-pass factor determines the speed at which the calibration is adjusted. The default value of 0.020 or 2% means a calibration change of 2% per second. Normally, the default value does not need to be adjusted.

GPS Lowpass

1.0 sec

This value is used to subsequently filter the course information from the GPS in order to obtain an identical time behavior with the compass. The default value is still being optimized at the moment and may change slightly.

Averager

60


This determines the number of measurements that are relevant for the averaging of the measurements. Measurements are taken every second, a value of 20 (default) means an average over the last 20 seconds. A smaller setting makes the wind calculation more nervous, deviations in the course, e.g. due to side slip, are immediately apparent. At a higher setting, temporary deviations are averaged out.

Limits

Deviation Limit

30 °

The correct deviation of the magnetic sensor is an important parameter and can be calculated automatically with "AutoDeviation" using the circling wind. The tolerance indicates how far the calculated deviation for the current direction may deviate from the last saved value. In the case of values above this, the current wind measurement is rejected as implausible. The default is 30%. Normally, the value does not need to be adjusted.

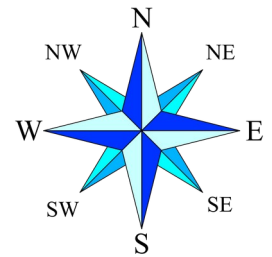

Sideslip Limit

2.0°

The wind calculation requires a precise heading, which is only guaranteed if the thread remains exactly in the middle. Even with deviations of a few degrees, the accuracy of the wind calculation decreases. Typically, gliders oscillate a few degrees around the vertical axis with each correction due to the roll turning moment, which varies in strength depending on the model. So that the sideslip has little or no influence on the wind calculation, the XCVario continuously calculates the sideslip angle from the sensors and only uses those wind measurements that were obtained at a sideslip angle within a tolerance that can be configured here. The smaller this value, the more precise the wind calculation, but the fewer measurements will fall within the tolerance band. For checking, the slip angle can be shown live in the field of the speed display (IAS/TAS) in the retro display. By default, a maximum sideslip angle of 2 degrees (to the left and to the right) is configured. Values up to 1 degree have already been successfully tested.

Course Limit

7.5°

The course limit specifies the maximum deviation in degrees per second for level flight up to which the wind calculation is carried out. A measurement at higher turning speeds than the configured value is rejected as containing errors. The default is 7.5 degrees per second.

AS Delta Limit

15 km/h

The AS Delta Limit specifies the maximum deviation in km/h for the flight speed in level flight, up to which the wind calculation is carried out. A measurement with a higher variance of the speed than the configured value is rejected as containing errors. The default is 15 km/h change per second.

Straight Wind Status

The status screen shows information on the straight flight wind calculation, such as the input parameters, e.g. the GPS status, deviations in ground speed and airspeed within the measurement window, the underlying compass deviation and more can also be used for diagnosis if the measurement does not work.

- Straight Wind enabled : Yes [No] (Feature active or not)
- Status : Initial [Calculating] (status of calculation)
- GPS Status: Good [Bad]
- AS C/F: +1.000%/1.000% (Airspeed calibration Info)
- Last Wind : 93°/25 (Direction and wind strength in the set unit for speed)
- MH/Dev: 68.00/+7.23: (Magnetic Heading and corresponding Deviation)
- Wind Age : 120 sec (Age of the last wind measurement)

Circling Wind

When circling the wind calculation, only a few can be adjusted, the procedure is quite simple. The calculation is based purely on the GPS data, a compass module is not necessary for this, therefore also possible on devices of the 2020 series, without a second S2 interface. A Flarm as a GPS data source is the prerequisite for this. During the calculation, the vectors of the ground speed are evaluated and the wind vector is calculated from the directions of the maximum and minimum ground speed. The method also works for circles that are not quite circular; a relatively constant speed when circling is advantageous. The measurement is improved by intelligent filtering (simplified Kalman filter) over several circles, using the quality factor of the measurement from the correlation of the direction of the minima and maxima of the measured speed values. Normally, two to three circles are enough for a precise value, and after just one circle, the wind is initially displayed.

Circling Wind Status

The status screen shows information about the circling wind calculation. This display element can be left again by pressing a button. The information is updated by turning the knob.

- Circling Wind enabled : Yes [No] (Feature enabled or not)
- GPS Status : Good [Bad] (The GPS status)
- GPS Satellites: 8 (number of satellites)
- Number of Circles: 2.52 (Number of circles that have been rotated since the start of the measurement)
- Last Wind : 93°/25 (Current direction/wind strength in the set unit for speed)
- Wind Age : 20 sec (age of last wind measurement)

- Quality : 95% (Factor for the quality of the measurement (0..100%))
- Status: sampling (status of wind calculation)
- Flight Mode: circling L (Flight mode, calculations are only made when circling)

Max Angle Delta

90°

The maximum permissible angle difference of the normalized directions for the maximum and minimum speed over ground (ground vector) can be set here. The default is 90 degrees, beyond which a wind calculation no longer makes sense, so a circle with an angle difference of more than 90 degrees is discarded for the wind calculation.

Averager

5

This determines the number of measurements that are relevant for averaging the wind measurements when circling. The measurement is made after each complete circle. A value of 5 (default) means an averaging over the last 5 circles. A smaller setting makes the wind calculation more nervous, a higher setting dampens temporary outliers, e.g. due to speed fluctuations while circling.

Wind Logging

[Disable]

[Enable WIND]

[Enable GYRO/MAG]

[Enable Both]

With this setting, the wind logger can be activated, which is used to develop and optimize the feature, and generates NMEA-like data sets with the \$WIND identifier in the normal NMEA data stream of the XCVario. The data record contains a time stamp (second), the basic vector (°, km/h), the airspeed vector, the current wind calculation and the average wind, the last circle wind calculation, the airspeed correction, the flight mode, the GPS status and the deviation.

In order to be able to evaluate the data after the flight, the "NMEA logger" must be set to "On" in addition to this setting to Enable in the XCSoar settings under System → Settings → Logger.

An .nmea file is then stored in the XCSoarData, the logs directory, which contains all the information that the XCVario has sent to XCSoar, including the \$WIND data record.

The GYRO/MAG setting outputs additional data fields with the X,Y,Z raw values of the acceleration, the gyrometer and the magnetic sensor.

Beispiel:

```
$WIND;9747;214.8;115.9;153.1;136.3;58.9;116.6;58.9;116.6;89.8;26.2;5.0,1,1,-16.8
```

10.10.9. Wireless

Wireless

[Disable]

[Bluetooth]

[Wireless Master]

[Wireless Client]

[Wireless Standalone]

[Bluetooth LE]



The dialog serves to activate and deactivate the interface to a wireless device.

Bluetooth

The default is [Bluetooth], whereby only one device can connect to the XCVario.

Wireless LAN

Another option for supporting multiple devices and multiple drivers in XCSOAR is the "Wireless LAN" or WLAN or WiFi setting. Theoretically, up to four devices can be coupled with the Master XCVario, tests were successfully carried out under load conditions with 3 devices. The Vario serves as a WiFi server.

Wireless Client

With this setting, the device can be used as a second display in a two-seater. When switching on, it waits for the Master XCVario, which must be in [Wireless LAN] (=Server) mode. Synchronization via Bluetooth is not possible. If necessary, the waiting screen on the Master XCVario can be ended at the push of a button, and the mode can be implemented again if you have accidentally set this but only have one Vario. In "Wireless Client" mode, the second device receives all sensor data from the Master Vario, such as temperature, airspeed, TE variometer and more.

Also QNH, ballast and bugs are mutually synchronized, while the MacCready value can be set individually, both on the master and on the client device.

Bluetooth LE

The Bluetooth Low Energy or BLE standard is experimental right now. Classic Bluetooth better supports NMEA streaming protocols via RFCOM feature, hence NMEA streaming via BLE notifications using nordic UART service is also possible. There is no support yet in XCSOAR or LK8000, hence we expect that this will be part of a future development and so we made BLE already available here. The XCVario will advertise an ID like "XCVario-1234-LE" once BLE is activated.

WL Routing

As an important feature, the routing for all interfaces can now be set up individually without restrictions. The new function enables routing settings, e.g. to declare a task on a navigation device connected to the second device via Bluetooth on the logger or Flarm connected to the front device, or to route the NMEA data on the serial interfaces of the second device to the front device. Settings from a previous software version are automatically adopted and the new switches are preset accordingly. Paths that did not previously exist can now also be set from this software version.



A routing menu in the setup exists for the wireless interface, the two serial interfaces S1 and S2, and for the CAN bus.

XCVario

[Enable]

[Disable]

With this setting to "Enable" you select whether XCVario data is to be output on the wireless interface and commands are to be received and processed via this interface.

S1-RS232

[Enable]

[Disable]

This setting routes the data from the wireless interface to the serial RS232 interface S1. With this setting, the XCVario works as a Bluetooth or WiFi bridge and transparently forwards data from a wireless coupled navigation system with e.g. XCSoar to the serial interface S1. Data from other sources are switched to the interface one after the other using the time multiplex method. The setting is equivalent to the [Wireless] routing setting for the S1 interface. If this setting is enabled, for example if one enables the routing of wireless data to S1-RS232, then routing of S1-RS232 data to wireless is also enabled. The adjustment therefore only needs to be made at one end. This generally applies to all return directions.

S2-RS232

[Enable]

[Disable]

With this setting, the wireless data is routed to the S2 interface and vice versa. In this setting, the XCVario works as before for S1, here as a bridge to the serial interface S2.

CAN-bus

[Enable]

[Disable]

This setting routes the data on the wireless interface to the CAN bus, e.g. if they are also relevant on the second display.

WiFi Power

50%

With the WiFi Power option, the maximum power of the WiFi module is set. The power can vary between 2 dBm and 20 dBm. In the smallest setting of 10%, 2 dBm are emitted, which is usually sufficient for single-seaters where the receiver is mounted close to the variometer, e.g. on the I-board. The default is 50% corresponding to 10 dBm and should be sufficient for all applications, including reception in two-seaters from the rear seat. If the connection is broken in difficult reception situations, e.g. due to closed carbon panels which perfectly dampen radio waves, the performance can also be increased to 100%. This increases the power consumption by approx. 5 mA.

Lock Master

[Unlock]

[Lock]

Under the "Lock Master" entry, a second device can be paired with its WiFi master so that the device only connects to this master XCVario. After selecting [Lock], the ID of the XCVario with the strongest WiFi signal in the vicinity, usually the front device, appears in the dialog and can then be saved with the push of a button. The

connection is then only established with this device. When pairing, make sure that no third device is closer than the front device in the cockpit. If necessary, switch it off for the moment of pairing. The pairing can be canceled at any time with [Unlock]. The explicit configuration has the advantage that no other device can be found, e.g. if the front device is not yet switched on when the second device is switched on.

Monitor

[Disable]

[Bluetooth]

[WiFi 8880]

[WiFi 8881]

[WiFi 8882]

[RS232 S1]

[RS232 S2]

[CAN Bus]

The monitor is used to monitor external data connections of the XCVario and can be activated with this dialog. Under [Disable] the monitor is switched off and no interface is selected, while e.g. [RS232 S2] selects the serial interface at S2 and outputs the data transmitted there on the screen. If there is no output, no data is transmitted. After selecting the interface to be monitored, the output of the data on the screen starts with a short push of a button. The screen scrolls, the output can be paused by briefly pressing the button, and the data monitor is ended with a long press. All printable ASCII characters are output here, which applies to all data sets in NMEA format and NMEA like formats (.i.e. GPS data sets). is available as a powerful troubleshooting tool. At the beginning of each data set at the start of a new line, the > character indicates that the data is in the receive direction, and the < character indicates the data in the transmit direction. A line feed occurs after each transmitted record. The output speed has its limits, with fast data connections with high data volumes, individual packets can be lost. However, due to the mostly cyclical transmission, different packets are received, so that the data sought can usually be recorded without any problems. The number of bytes received and sent are shown in the header. The only known binary protocol is the FLARM protocol for downloading flights, and can only be monitored with it, such as the start of binary mode (FLARM bincom), and the printable characters during transmission.

Example:

Data in sending direction:

```
<$PXCVR,0.0,0.5,0,1.00,0,24.1  
,1003.0,984.5,0.0,0.9,0.8,0.01,0  
.00,1.00*30
```

Data in receiving direction:

```
>$GPGSV,3,1,12,02,36,257,19,04  
,14,080,34,05,23,307,,06,22,206,  
*7B
```

Monitor Mode

ASCII

binary


The "Monitor Mode" is used to select whether the data is displayed in ASCII or in binary format. Normally, NMEA data is sent in ASCII. However, some devices use the binary format, e.g. protocols to set up a radio device, this data can only be displayed in detail in binary format, which represents the binary data as hexadecimal tuple's (00..ff). The ASCII mode is set by default. Changes here are not saved in the flash, so they have to be set again after the next start.

Custom ID

A separate **identifier** for the wireless device **ID** for Bluetooth or WLAN **can be set** using the "Custom ID". The prefix "XCVario-" is unchangeable, the number after it can be set as desired via this setup. Six digits are available for this and enables the entry of a complete license plate number, e.g. D-1234 or D-KABC. A competition number or the aircraft type are also conceivable, e.g. ASW24. Together with the prefix, this creates the ID "XCVario-D-KABC", for example, which can be linked to the smartphone in the usual way. When changing the ID, it is recommended, if the Vario is still paired with the navigation device, to delete the old (now invalid) ID there.

10.10.10. G-Load Display

The G-Load Display is an option from the XCVario Series 21 (ff) to display the load factor. If the option is activated, the maximum values are also stored in the non-volatile memory, shown in the G-Load display or can be called up in the setup menu of the G-Meter. It can be set under "System/Hardware Setup/Rotary Setup/Screens" to display the G-meter alternately with the variometer display at the push of a button. In addition, the maximum IAS below the peak value of the negative load factor is now also displayed. The peak values are displayed in red as soon as the configured limits have been exceeded.

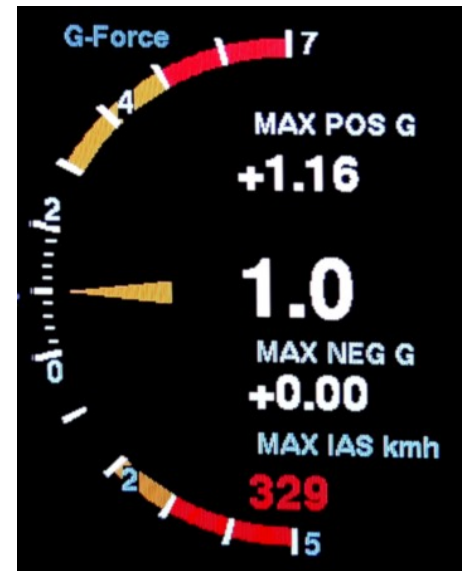

Activation Mode

[Off]

[Dynamic]

[Always On]

The display of the load factor can either be deactivated [Off] by default, take place dynamically [Dynamic] and occur when the set thresholds for positive or negative load factor are exceeded, or it can be permanently activated [Always On], e.g. for aerobatics.

Positive Threshold

5.0

This defines the threshold for the positive load factor in g (multiple of the gravitational acceleration) at which the "G-Load" display shows. A "1" or 1 g corresponds to normal gravity, the acceleration of gravity. The default is 5 g. The value as well as the following settings can be adjusted in steps of 0.1 g.

Negative Threshold

-3.0

The same setting as in the previous point, only for the negative load factor. The default is -3 g.

Red positive Limit

4.0

The positive limit of the load factor as relevant for the specific aircraft type. The value can be found in the flight manual. The scale shows when this load factor is exceeded as a red area. The default is 4 g. An acoustic warning signal also sounds when the set maximum permissible positive load factor is reached.

Yellow positive Limit

3.0

Second, reduced positive limit for the load factor for the value that applies outside the range of the maneuvering speed, for example. The value can be found in the flight manual. If there is no value there, then the value can be set equal to the previous limit, a yellow area does not then appear. The scale shows when this load factor is exceeded as an orange area. The default is 3 g.

Red negative Limit.

-3.0

The same setting of the limit as in the previous point, only for the negative load factor. The default is -3 g. If the limit is exceeded, an acoustic warning signal sounds here too.

Yellow negative Limit

-2.0

The same setting of the limit as in the previous point, only for the negative load factor. The default is -2 g.

Max Positive

The highest measured value of the load factor since the last reset.

Max Negative

The highest measured value of the negative load factor since the last reset.

Alarm Volume

100 %


Alarm Volume that is applied during an G-Load alarm.

G-Load reset

With this the stored maximum values of the previous two points can be reset.

10.10.11. Horizon Display

With the current software version, the XCVario supports a simple horizon display as an awareness indicator similar to the horizon in XCSoar. The display is square and equipped with a pitch scale. The horizon is also activated via the Screens Menu as in the previous point. The small lines on the scale indicate an inclination of 5°, the large lines each 10°, the fourth or top line stands for an inclination of 40°.

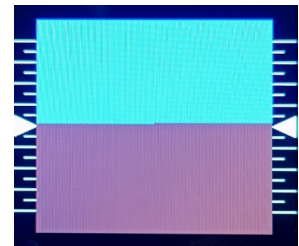

Attention: The horizon is not a **blind flight instrument**, but a tool to train and monitor, for example, the optimal bank angle of ideally 45°, or the optimal angle of attack when thermalling, and shows this in normal flight attitudes with sufficient accuracy.

10.11. System

Various things related to the hardware and software are set in the system menu.



10.11.1. Software Update

Software Vers.

21.0119-18

Display of the installed software version.

Software Update

[Cancel]

[Start]



The software of the device is freely accessible as open source on the github page:

<https://github.com/iltis42/XCVario>.

The Firefox browser is recommended for downloading the file and for the update. With other browsers, problems can occur on some devices due to the ".bin" extension of the file to be loaded due to other links.

Software releases will be on: <https://github.com/iltis42/XCVario/releases> published, and can be imported OTA (Over The Air) via a WiFi access point of the Vario. To do this, the new firmware, e.g. the file [sensor-master-22.0824-2302.bin](#), must first be saved locally on a WiFi-enabled device, e.g. an Android or IOS mobile phone or tablet, or a laptop or PC with an Internet connection. Please make sure that the file length of the loaded file corresponds to what the website shows. Typical file lengths are around 1.7 megabytes.

Intermediate releases for testing purposes are accessible here

<https://github.com/iltis42/XCVario/tree/master/images>, but install at your own risk, documentation may not be up to date at the time of publication, and it has been not all tests have been carried out yet, support can only be given to a limited extent.

Then start the software update on the XCVario in the Vario Setup under System/Software Update/ [Start] and switch to the WiFi "ESP32 OTA" on the device on which the file is located. Alternatively, you can jump to the software update mode (shortcut) by pressing the rotary immediately after switching on, immediately after the software version is displayed (first line). Since some newer devices can no longer or do not want to work with unsecured WiFi networks, WiFi was switched to the secure WPA2 PSK standard in February 2022. A password must be entered once. The password is displayed on the screen and is like the ESP32 XCVario-<nnnn> WiFi access point: **xcvario-21** .

Once this is done, the new firmware can be selected (browse) in the browser on the website <http://192.168.4.1> and then uploaded. The IP address is now also unified. Specify the prefix <http://>, in any case if the browser tries to connect with <https://>, possibly switch off an existing automatic forwarding to [http](http://).

The dialog guides you through the download with a progress display and shows the success both on the website and on the variometer. If transmission errors occur, the software is discarded and the variometer restarts with the previous software. There are two download areas, the new software is always written in the non-active area, and to guarantee the functionality of the device at all times.

If the software download was selected on the Vario, but no file was selected and loaded, there is an automatic timeout after 15 minutes and the old software restarts. If you don't want to wait for the timeout, you can cancel the download at any time by pressing a button on the software's rotary switch.

If the connection with the WiFi does not work, check whether the device has a check mark that the connection should be maintained even if it is not Internet-capable. If necessary, also answer positively to a corresponding pop-up. As of software February 2022, the XCVario randomly selects a different channel each time the download feature is started, so that a channel can also be found in an environment with many occupied WiFi channels, which enables an error-free download.


After the update, the settings must be checked. Normally, these should be fully adopted from the previous installation. However, new features may be added in new releases and the default settings may need to be changed. Please read the corresponding information in the release notes.

Note: When updating from older versions before mid-2021, it is possible that the polar setting has changed, so check this parameter in any case and correct it if necessary. The problem of the potential shift of the polars is solved from July Release 2, 2021, the check when updating versions after that is no longer necessary.

10.11.2. Factory Reset

[Cancel]
[ResetAll]

Allows a reset to default of all settings of the device. Attention, all settings compared to the default values will be lost. After a reset, make polars and other settings necessary for the aircraft type. A factory reset can also be carried out when downloading the software via the browser using the "Factory Reset" button.

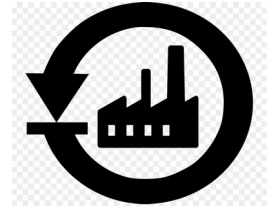

10.11.3. Battery Setup

The voltages are preset for a lead-acid battery. For other battery types, adjust according to the manufacturer's data sheet. In the case of voltages below the "Battery Red" value, the display also flashes.



Battery Low

11.50 Volt

Setting the voltage for empty battery (display 0%, empty, no display of remaining charge)

Battery Red

11.75 Volt

Setting the voltage for battery alarm red (display 0-10%, remaining charge flashing red)

Battery Yellow

12.00 Volt

Setting der voltage for battery alarm yellow (display 10-20%, charge indicator yellow)

Battery Full

12.80 Volt

Setting the voltage for battery full (display 20-100%, charge indicator green)

Battery Display

[Percentage]

[Voltage]

[Voltage Big]

The type of display can be modified under the menu item "Battery Display". The battery value can be displayed as a percentage [Percentage] or as a voltage [Voltage] with one decimal place, e.g. 12.5V. [Voltage Big] shows the value in volts without the battery symbol with a larger, easier-to-read number.

10.11.4. Hardware Setup

DISPLAY Setup

[HW Type]

[Style]

[Orientation]

All settings related to the display.

HW Type

[UNIVERSAL]

[RAYSTAR]

[ST7789]

[ILI9341]

The display is factory set with the correct default which corresponds to the installed display type. A change under [Type] here brings no advantages, at most it can worsen the display, and therefore does not need to be made.

Style

[Airliner]

[Retro]

[UL]

This allows you to change the mode of the graphic display between "Airliner" style, "Retro" style or "UL" style. The previous colored bar display can be found in the airliner style, while the retro style works with a semicircular display with a pointer as is usual with mechanical variometers. The two displays are explained in more detail in the relevant chapters at the beginning of the document. A new addition is the UL style, which hides the speed-to-fly display specific to gliding and the MacCready value, but displays the QNH value instead.

Color Variant

[W/B]

[B/W]

With this option, the color of the display can be switched from "W/B", i.e. white to black (white on black), to black on white. The default setting is W/B, which is easier to read in sunlight and is more pleasant to the eye due to the lower light intensity. The inverted setting is another option and can make sense if other instruments or the panel are also in this color.

Orientation

[NORMAL]

[TOPDOWN]



By default, the device is configured for installation on the left side of the panel. It is operated with the left hand, on the left edge of the display. For installation on the right, the display orientation can be inverted with the [Orientation] setting, so that the rotary knob moves to the other side. [NORMAL] and [TOPDOWN] are available for selection.



Needle Alignment

[Front]

[Back]

This can be used to set whether the variometer needle is displayed in the foreground [Front], i.e. over the information within its area such as altitude display, wind information, etc., or in the background [Back], i.e. behind it.

Rotary Setup

Direction

[Clockwise]

[CounterClockwise]

The direction of rotation of the rotary switch (rotary) can be reversed if the rotary switch used has a different coding. This setting is made in the factory and does not normally need to be changed. After a factory reset it may be necessary to make this setting again.



Increment

1 Indent

2 Indent

3 Indent

4 Indent




This allows you to adjust the sensitivity of the rotary switch. There are rotary switches which deliver two pulses per detent (indent). In this case, "2..4 indent per increment" is announced, since otherwise a point would be skipped during a detent. The optimal setting is made in the factory and normally does not need to be changed. It has proven useful to select a setting with "2 Indent" per increment (default setting) so that you do not accidentally move a line or a value when you press the rotary knob.

Rotation

[Volume]

[MC Value]

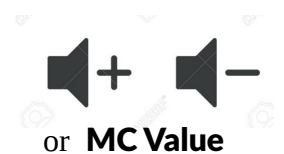

The presetting for the rotary switch (English Rotary Default) determines which setting is changed in Vario mode by turning the rotary. You can choose between [Volume] for the volume and [MC Value] for the MC value. The default is [Volume]. If the volume control is not required, e.g. when using an external audio device with its own volume control, or if changing the volume via the setup is sufficient, the MC value can also be used here. The setting [MC Value] makes sense if the audio function is implemented via the external audio input of the radio device, the internal loudspeaker is then switched off. In this case, the volume control of the radio is used, so the rotary can take over the other function.

Setup Activation

[Short-Press]

[Long-Press]



This setting can be used to select whether the XCVario should activate the setup menu with a brief press of the rotary button (less than half a second) or with a long press of the button. In the "Short-Press" presetting, a short press on the rotary activates the setup menu. If you want to use the feature and switch back and forth between different display screens with a short press, see next heading, it makes sense to first activate the setup menu with a long press. The short press is therefore available to change the display to the next screen.

Screens

G-Meter

[Disable]

Enable

Horizon

[Disable]

Enable

The "Screens" menu item can be used to select which screens are displayed by briefly pressing the rotary. In the default setting, only the variometer is visible, and you can jump back and forth between the setup menu and the variometer at the touch of a button. If you also want to display the G-Meter screen by pressing a button, this can be achieved by enabling this setting. At the push of a button, the XCVario then switches between variometer > G-Meter > Horizon > Setup, etc. If you only want to switch between the screens and not into the Setup in between, the Setup can be set to long-press as described in the previous point. A short press then only switches between the screens shown here.

Gear Warning

[Disable]

[S2 Flap positive]

[S2 RS232 positive]

[S2 Flap negative]

[S2 RS232 negative]

[External]



With the "Gear-Warning" (German landing gear warning) a warning can be triggered in the case of extended brake flaps and retracted landing gear. The magnetic contact on the brake flap must be closed when it is retracted, and the contact on the landing gear when it is fully extended. The warning can be acknowledged by pressing the rotary and then turns off for 5 minutes.


Both contacts are switched in parallel with one end connected to ground (GND, battery minus) and the other end connected to pin 6, the flap sensor input, to S2 and connected to +12 volts via a pull-up resistor. Alternatively, pin 4 on S2, the RX pin of the RS232 interface, can be used, and there is an option for external [External] commands that can be send by an external device in order to trigger the gear warning, see the „\$g“ commands section for details about this.

The warning is given optically with the display **! GEAR !**, as well as an audible warning tone, and has priority over the other screens, with the exception of the stall warning.

The feature is available if either the flap sensor or the RS232 interface is not configured, i.e. setting: Disable is mandatory there and is switched off by default, or if you don't use the flap sensor input.

The switching of the two magnet contacts is shown on the right, both must be designed as normally open contacts, i.e. they must be shot in the vicinity of the magnet. The pull-up resistor is necessary for a high-level and should be in the 68 to 150 kilo ohm range and at least 1/8 watt of power.


With the "negative" options you can also use contacts, which are to be laid in series and then close when the flaps are not locked, or the landing gear is not fully locked.

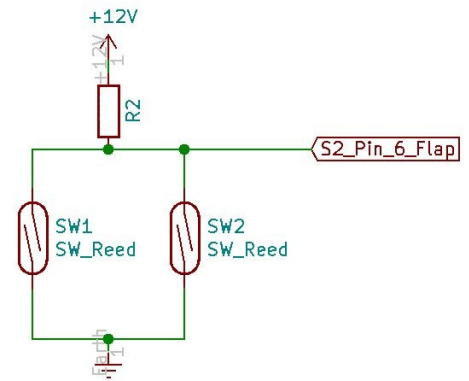

AHRS Setup

From the 2021 series of the XCVario there is a permanently installed AHRS sensor, which has a sensor for the acceleration in all three axes and a gyro for the rotational speed also in all three axes.

The sensor is used to record the acceleration or the load factor (G-Load), e.g. when circling, which in principle has the same effect as additional ballast, i.e. an increase in the optimal drive, as well as input for the position indicator (artificial horizon) and to deliver the load factor to XCSoar.

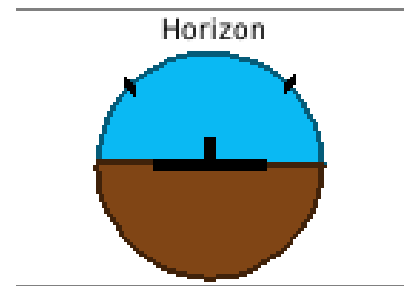

AHRS ID

The four-digit "AHRS ID" is required to generate the license key for the AHRS feature. If the feature was not ordered directly with the device, this ID must be specified when ordering the AHRS feature. The AHRS ID is not changeable.

AHRS Option

- [Enable]
- [Disable]

In the default setting and with a set license key (license key), the sensor is Enabled, otherwise Disabled. The option can only be set to Enabled if a valid key is present. With this setting, the processing of the sensor data can be switched off. When switched off, the data fields for the roll angle and the pitch are not forwarded in the NMEA sentences, the corresponding fields remain empty in this case.

AHRS Autozero

- [Cancel]
- [Start]

According to the manufacturer's instructions, the sensor must be zeroed once in its installation position for maximum accuracy. This is necessary because small deviations of 1-2 degrees are possible when soldering. This is done at the factory and normally fits. However, if the installation position of the device in the flight attitude panel is also different, it is possible to set the sensor to zero with regard to bank and horizon. The aircraft may be on the

ground with the wings level, preferably level with the ground e.g. with a spirit level, and the fuselage should be leveled as prescribed for a weigh-in. This can only be adjusted to a limited extent in flight, since a stable measurement over several measured values is required.

AHRS License Key

[First Letter]

[Second Letter]

[Third Letter]

[Last Letter]



The four-digit license key for activating the AHRS sensor can be entered via this menu item. 4 letters, numbers or special characters are possible, resulting in several million possible combinations. If the feature is purchased, the license key is set accordingly.


The key is not overwritten during a factory reset.

Note: The AHRS sensor is used to take the load multiple into account for the stall warning and for the polar to precisely calculate the target travel. The variometer has a simple screen for an artificial horizon, and when activated, the data is also forwarded to the flight situation (English situation awareness). **Under no circumstances is this simplified screen intended to fly into IMC conditions.**

The license key can only be entered on the ground.

AHRS Parameters

Here parameters of the attitude and heading reference system can be tuned. Normally no change is required. Changes can cause changes and inaccuracies in the artificial horizon, so normally do not make any changes here. The optimal default setting is the value printed here in bold.

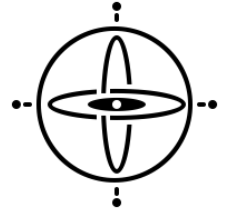

Gyro Max Trust

100x

This factor determines the maximum trust in the rotation angle sensor (gyro sensor) compared to the acceleration sensor for the position indicator. The 3D vectors of the acceleration sensor, cleaned of the centrifugal force, are merged with the values for the rotation angle of the gyro sensor; the optimal value is as high as possible without the gyro drift causing static position deviations.

Gyro Min Trust

20x

This option changes the minimum factor of the sensor fusion of the rotation angle sensor (gyro sensor) and the acceleration data for the position indicator. This factor is always active, regardless of the loadfactor.

Gyro Dynamics

5.00

The factor says by which dynamic factor the maximum trust in the gyro is multiplied at a loadfactor unequal to 1.0. At loadfactor around 1.00, the acceleration values are more trusted because they work very precisely and, above all, drift-free. However, these values are unusable during accelerations, and the gyro is therefore more trusted to continue to correctly represent the position in space in this phase. The formula for the multiplier is $10^{(Load\ multiple - 1) * Gyro_Dynamics} - 1$.

Gyro gating

1.00°

Gyro gating can be used to suppress the drift of the gyro around the zero point. A specification of 1.00° means that smaller rotation speeds of less than 1.0° per second are hidden.

Gyro calibration

1.07

The gyro may need to be adjusted and calibrated to provide an accurate response. The factor chosen is an average over a series of measured sensors to obtain the correct angle when the device is rotated, e.g. B. at 45° the result should also be 45°.

AHRS Defaults

[Cancel]

[Start]

The default values for the AHRS parameters from the last chapter can be reset to the default values by entering [Start]. This can be helpful if the values have been changed manually or come from an older software version, but these have meanwhile been further developed in newer SW versions.

AHRS RPYL Sentence

[Disable]

[Enable]



This can be used to activate a data set as generated by a Levil AHRS. The \$RPYL as well as an \$APENV1 data record are generated. The data sets contain AHRS information such as pitch, roll and yaw (the latter if a magnetic sensor is installed), the load factor in the Z direction (vertical), as well as the altitude and airspeed and the TE variometer information. The feature is switched off by default [Disable], and is only required for programs that support it, the idea behind it is e.g. to operate a sky map, which is currently being tested.

AHRS Temp Control

From hardware revision -23, the temperature of the AHRS chip can be adjusted to a constant value. The feature improves the accuracy of the G-meter and angular rate sensor (gyro) through the constant temperature, and thus the accuracy of the horizon. The default is 45° Celcius. The temperature can be reduced for northern areas, or increased for southern areas. A setting of -1° Celcius disables the feature. This increases the power of the device by a maximum of 0.3 watts or about 20 mA at 12V. Normally, only a part of the power is used, the control reduces the power when the set temperature is reached via a PWM signal. A temperature of about 35° Celcius above the ambient temperature can be reached. With a setting of 45°, the temperature remains constant in an ambient range of 10° to 45°. The feature is automatically switched on with hardware revision -23. If the temperature is set correctly, the unit is shown in gray (°C) at the top left of the display as usual. If the temperature is more than 0.5 degrees higher, the unit is shown in red (°C) or if the temperature is too low in blue (°C).

AS Sensor type

[ABPMRR]

[TE4525]

[MP5004]

[Autodetect]

Different sensors for airspeed (airspeed, abbreviated: AS) are used. The 2020 series was delivered with the sensor type MP5004, in 2021 the TE4525 and later the ABPMRR were used. The setting is made at the factory and does not need to be changed. With [Autodetect] an attempt is made to automatically recognize the correct setting at the next start.

Attention:

The ABPMRR and TE4525 types are indistinguishable at their interface, but have differences in mechanics and

behavior and must therefore be set manually. The method of detecting the sensor via Autodetect cannot be used here. The correct type must be set manually. This can be the case when updating from older software versions.

10.11.5. Factory Voltmeter Adj

-0.00 %
12.75 Volt



Dialogue which can only be used in the factory to precisely fine-tune the battery voltage measurement in order to achieve maximum accuracy. If the adjustment has already been made, the dialog will be suppressed at the next start. After a factory reset, the dialog appears and enables precise adjustment. Without this setting, the measurement is accurate to about 1%. A multimeter is required to carry this out, with which the voltage can be measured exactly.

10.11.6. Altimeter, Airspeed

This can be used to set parameters for the altimeter (altimeter) and the sensor for the displayed speed (IAS), and to zero the airspeed sensor.



Altimeter Source

[TE Sensor]
[Baro Sensor]

Either the [TE Sensor] or the [Baro Sensor] can be selected as the source for the altimeter. The baro sensor is preset. The PD sensor only makes sense if you want to have the energy level displayed, or for test purposes.

AS Calibration

0 %

With the AS Calibration, a proportional calibration of the "Air Speed (AS)" or flight speed can be carried out. The calibration can be set in 1% steps in the range of +/-10%. For example, with a calibration of +5%, instead of 100, 105 km/h will be displayed. This is normally not necessary, as the accuracy of the sensor is usually completely sufficient, however, the pressure readings in the aircraft can run incorrect values, and so there is an option here to minimize these errors. Default is 0% calibration. The AS calibration calibrates the respective value according to the setting IAS/TAS.



AutoZero AS Sensor

[Cancel]
[Start Autozero]

With this option, the zero point of the airspeed sensor can be recalibrated. The high accuracy of the airspeed sensor is ensured by a daily calibration of the zero point. This is normally carried out automatically on the ground when the power is turned on and is therefore only necessary in exceptional cases. At low speeds < 30km/h, very

low pressures are relevant, different wind pressures from a gust or the propeller on the statics or the pitot tube when switching on can possibly lead to a deviation. If the display on the ground does not show exactly zero due to an incorrect zero point, this can be a remedy.

Alt. Quantization

[Disable]

2

5

10


20



This item allows you to choose to what extent the altimeter display is quantized to an interval of 2-20 meters (or 6-60 ft), as shown in the graph to the right with 10 meters. The two digits then move up (rise) or down (fall) like on a counter wheel, which significantly improves readability when the flight altitude is in motion compared to the simple digital display.

Stall Warning

The stall warning gives a visual and audible warning of an impending stall. The set stall speed, the load and, if the AHRS option is available and enabled, also the load factor are decisive. For example, the stall speed increases by 41% in a banked turn with 60 degrees and a load factor of 2 g. The stall warning can be helpful in flight phases with a high workload, e.g. when approaching in gusty weather, or when circling in thermals. The warning is given by a screen with the red lettering " ! STALL !" and a triangle pointing downwards, which means that there is a visual indication of a hold-up and an acoustic warning signal.

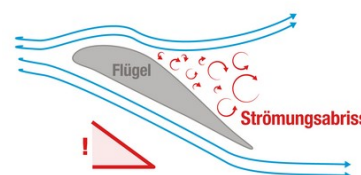

The stall warning will not activate until the aircraft first reaches stall speed.

Stall Warning

[Disable]

[Enable]

The feature can be switched on or off with this. By default, the stall warning is disabled with [Disable].

Stall Speed


70 km/h

By default 70 km/h is set for the aircraft without additional load which fits many standard gliders like LS4 and similar. For other types of aircraft, the correct stall speed can be found in the flight manual and set here. The warning is triggered from stall speed and slower, down to minus 30% of stall speed.

Maximum Speed

270 km/h

By default, 270 km/h is set as the highest speed (IAS, indicated airspeed), which the instrument specifies for the target flight. This must not exceed the maximum permitted speed for aircraft.

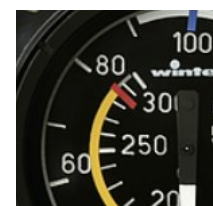

Caution: The default value should be checked and adjusted if the value in the flight manual deviates from the default.


10.11.7. RS232 Interface S1

The RS232 interface is used to output the serial OpenVario data (TX) and as a serial to Bluetooth bridge (RX) to connect another serial device, e.g. a Flarm with the device on which XC Soar is running.



Baudrate

[Serial OFF]
[4800 baud]
[9600 baud]
[19200 baud]
[38400 baud]
[57600 baud]
[115200 baud]

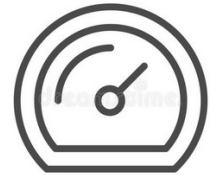

Under this option, the speed can be set between 4800 and 115200 baud in the usual baud rates, or switched off [Serial OFF]. The interface is preset to the baud rate of 19200, which is also preset for FLARM. The speed setting always applies to both directions RX and TX. The default setting is perfect for normal operation of the FLARM to receive GPS data, baro and data from other aircraft. For regular downloads of longer flights, it is recommended to set a higher data rate. For example, with the data rate 57600, which is the highest supported by the Classic FLARM, longer flights can also be loaded in an acceptable time, which has proven to be stable in various applications. Tests on Power Flarms of the newer generation which support higher data rates also ran stably with 115200 baud. Of course, the higher data rate can remain the same for normal operation. The data rate must of course be set the same in FLARM.

Serial Loops

[Disable]
[Enable]



This option directs data from the receive direction of the serial interface to the send direction. The setting relates to the source of the data. For example [Enable] means routing of the data received on the receiving side (RX) to the transmission direction (TX).

The mode is only supported on S1, and is required, for example, if two devices are connected to an XCVario-20 device with only one interface, e.g. a FLARM on serial RX and an OpenVario on serial TX, and the data from the FLARM is also looped to the OpenVario should. However, this mode does not allow bidirectional communication with the respective devices, so no flight download from the Flarm and no synchronization of MC, ballast, bugs synchronization of XCSoar to the Vario is possible.

S1 Routing

With this setting, the data from all other interfaces can be routed to the serial interface S1. The routing is always bidirectional, i.e. in addition to the sending direction, the receiving direction, i.e. the return direction, is also routed.



In the default setting for S1, the wireless interface is set to Enable, i.e. the coupled device is connected via WiFi or Bluetooth to a device on the serial interface S1.

This means that both the commands from the navigation device, e.g. from XCSoar, e.g. to control a radio device, and the messages that the device sends are routed back to the XCSoar.

The following figure shows the total of five interfaces of the router as they are named both in the setup menu and also here in the documentation.

XCVario

[Enable]

[Disable]



With this setting to "Enable" you select whether data of the XCVario should be output on the S1 interface and whether commands should be received and processed via this interface.

Wireless

[Enable]

[Disable]



This setting routes the data between S1 and the wireless interface, depending on the Bluetooth or WiFi setting. With this setting, the XCVario works as a Bluetooth or WiFi bridge and transparently forwards data from a wirelessly coupled navigation system with e.g. XCSoar to the serial interface S1. Data from other sources are switched to the interface one after the other using the time multiplex method.

S2-RS232

[Enable]

[Disable]



With this setting, the data is routed between S1 and interface S2 and vice versa. This is of interest, for example, if a Flarm is connected to S1 and an OpenVario is to be operated at S2. This setting supports, for example, the possibility of connecting a serial FLARM to S1 and an OpenVario to S2 on the main device.

CAN-bus

[Enable]

[Disable]




This setting routes the data between S1 and the CAN bus, e.g. if they are also relevant on the secondary display. For example, if a FLARM is connected to the front device and its data is routed there to the CAN bus, it can be routed to S1 on the second display so that the FLARM data is available, e.g. for an OpenVario on S1. In this case set this setting to Enable.

TX Inversion

[Normal]

[Inverted]

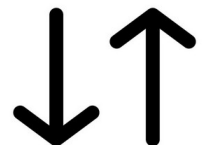

According to the RS232 standard with real RS232 levels, mostly realized by a dedicated level conversion chip, a negative logic is actually used. A logical one is represented as minus 15 volts and a zero as plus 15 volts. With the RS232 "TTL", as is usual with most avionics devices (although rarely mentioned in the manual), there is this level conversion and not, the RS232 TTL levels used there are usually 0 volts for zero and plus 5 volts for a one . In order to send to an RS232 TTL device with the correct logic, the default [Inverted] should be left as is. Devices with real RS232 level converters (plus/minus 15 volt level) usually also understand the voltages 0 and 5 volts that the RS232 TTL supplies, but need 0 volts for a one and 5 volts for a zero, there the setting would be [Normal] necessary. The voltages are actively limited at


the input of the XCVario, so the XCVario can also process the higher levels.

If the setting is correct, the connected device responds correctly to commands sent and readable characters appear in the NMEA device monitor of the navigation system. The XCVario works with 3.3 volt levels, but external 5 volt hardware is compatible with it, since with the TTL standard the one is already reliably recognized from a level at the input of 2 volts, and 3.3 volts are significantly higher.

RX Inversion

[Normal]

[Inverted]

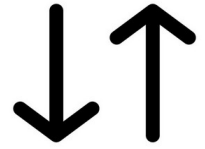

As with the TX (transmission) inversion but for the receiving side. Default is [Inverted] for RS232 TTL. Normally the setting is identical to the setting for the TX line. To check, look at the data in the XCSoar device manager, if readable ASCII characters appear there with the correct baud rate, the setting is correct.

Twist RX/TX Pins

[Normal]

[Twisted]



With this option, both a serial device with (DTE) interface, i.e. terminal such as FLARM, and a device with (DCE) i.e. modem or computer, such as an OpenVario, can be connected to the XCVario. In general, the following applies: With RS232 serial lines, a connection named TX at the other end must be switched together with a connection named RX. If the device at the other end is also labeled with TX on pin 4, then the XCVario turn the pins with the "Twisted" setting to enable a connection with 1:1 standard patch cables. The normal setting means pin 3 = TX and pin 4 = RX. In twisted mode, pin 3 = RX and pin 4 = TX at the IGC standard end of the usual Flarm cable set connected S1, or directly at the IGC compatible S2 port.

TX Line

[Disable]

[Enable]



With the help of this option, the transmission line (TX) of the S1 interface can be switched off in the [Disable] setting. Then only the data arriving in the receiving direction of interface S1 (RX) is evaluated, the transmission line remains high-impedance.

The feature is required if two devices are to be connected to the external source (e.g. FLARM) using a simple passive 1:1 splitter (RJ45 T-piece) and 1:1 standard cable 8P8C is to be used. In [Disable] mode, the FLARM cannot be actively accessed from the XCVario, e.g. to declare a flight task or to download a flight.

10.11.8. RS232 Interface S2

The second RS232 interface, from series 2021, is primarily used for communication with a serial OpenVario data (TX) device, e.g. for an OpenVario or a serial Kobo, or in the case of a wireless device as a serial to wireless bridge to connect another device to the wireless to connect devices. The OpenVario should be used here because this interface can exchange the RX/TX lines in terms of hardware and is therefore able to communicate with a 1:1 standard cable, e.g. with an OpenVario. Various devices are possible, various radio devices that XCSoar supports, e.g. a KRT2 radio device (baud rate 9600 baud) can be connected here.



Baudrate

- [Serial OFF]
- [4800 baud]
- [9600 baud]
- [19200 baud]**
- [38400 baud]
- [57600 baud]
- [115200 baud]



The baud rate is set in the same way as for Interface S1, the same baud rates are supported.

S2 Routing

With this setting, each of the four other data sources or sinks can be routed to the serial interface S2.

The default is via wireless: Enable, i.e. the coupled device, either via WiFi or Bluetooth, is brought together with a device on the serial interface S2. This means that both the commands from the navigation device, e.g. from XCSoar, e.g. to control a radio device, and the messages that the device sends are routed back to the XCSoar.



XCVario

- [Enable]**
- [Disable]

With this setting to "Enable" you select whether XCVario data is to be output at the S2 interface and whether commands are to be received and processed via this interface.



Wireless

- [Enable]**
- [Disable]



This setting routes the data on S2 to the wireless interface, depending on the Bluetooth or WiFi setting.

S1-RS232

- [Enable]
- [Disable]**



With this setting, the data is routed from S2 to the S1 interface and vice versa. This is of interest, for example, if a Flarm is connected to S1 and an OpenVario is to be operated at S2. This setting supports the possibility of connecting a serial FLARM to S1 and an OpenVario to S2.

CAN-bus

[Enable]

[Disable]




This setting routes the data between S2 and the CAN interface, e.g. if they are also relevant on the secondary display.

TX Inversion

[Normal]

[Inverted]

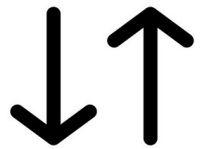

Identical to the function as with S1, only here for the interface S2.

RX Inversion

[Normal]

[Inverted]

Identical to the function as with S1, only here for the interface S2.

Twist RX/TX Pins

[Normal]

[Twisted]



Identical to the function as with S1, only here for the interface S2.

TX Line

[Disable]

[Enable]



Identical to the function as with S1, only here for the interface S2.

10.11.9. CAN Interface

The XCVario-22 hardware from around October 2021 also has a CAN bus interface as an option for data transmission to a second device and for connecting future hardware. For devices without CAN, leave the settings at CAN-OFF as shown here in bold (default setting). The CAN bus supports cable lengths of up to 20 meters.



Datarate

[CAN OFF]

[250 Kbit]

[500 Kbit]

[1 Mbit]

The data rate can be set here. It is recommended to use the 1 Mbit setting, which works without problems over the short distance on the plane and is far outside the spectrum of the radio.

CAN Routing

With this setting, any data source or sink can be routed to the CAN bus. The routing is always bidirectional, i.e. in addition to the sending direction, the receiving direction, i.e. the return direction, is also routed.

The default is "Disable" for all data, because this only makes sense if a second display is to be connected and synchronized via the CAN bus.



XCVario

[Enable]

[Disable]

With this setting to "Enable" you select whether XCVario data is to be output on the CAN bus and commands are to be received and processed via the CAN bus. It assumes that the other party also routes the corresponding data to the CAN bus.



Wireless

[Enable]

[Disable]

This setting routes the data between the CAN bus and the wireless interface, depending on the Bluetooth or WiFi setting.



S1-RS232

[Enable]

[Disable]

With this setting, the data is routed between S1 and the CAN bus and vice versa. With this, for example, the data of a Flarm can be transmitted to S1 via the CAN bus to the second display.



S2-RS232

[Enable]

[Disable]

The same functionality as with "S1-RS232" visible here in the setup for the S2 interface.



Mode

[Master]

[Client]

[Standalone]

This setup is essentially relevant when two devices are connected to the CAN bus in a two-seater. "Master" must then be set for the front device and "Client" for the rear device. Otherwise the mode remains on "standalone" which is delivered by default.

Caution: If the mode master is selected for a standalone device, a dummy load is created by the traffic that is sent to the second device but not confirmed. The standalone setting is therefore optimal.

10.11.10. NMEA Protokoll

[OpenVario]

[Borgelt]

[Cambridge]

[XCVario]

This option is used to set the protocol of the data that the variometer sends to the connected device via Bluetooth.

OpenVario

This is the default setting of the XCVario and offers the essential data of the variometer sensors such as the barometric pressure for the altitude, the dynamic pressure for the airspeed, TE Vario information and the outside temperature, provided the temperature sensor is installed accordingly. The synchronization of MC, bugs or ballast is not implemented by XCSOAR and is therefore not sent.

The OpenVario (POV) protocol is defined as follows:

```
$POV,P,<baro>,Q,<dp>,E,<te>,T,<temp>"
```

<baro>: static pressure in hPa

Example: 1018.35

<dp>: dynamic pressure in Pa

Example: 23.3

<te>: TE vario in m/s

Example: 2.15

<temp>: temperature in deg C

Example: 23.52

A detailed description of the protocol can also be found here: https://www.openvario.org/doku.php?id=projects:series_00:software:nmea

Borgelt

The second option is [Borgelt], 'Borgelt B50/B800' is to be set as the device driver on XCSOAR. The Borgelt protocol supports the synchronization of MacCready value (MC), ballast or insects (bugs), from and to the XCVario. The barometric height is not part of the Borgelt protocol, but is transmitted via a generic interface using

the \$PTAS1 NMEA data set as height above the standard pressure area (1013 hPa). The QNH must therefore be set separately on the XCSoar and on the Vario, and enables, for example, a standard setting on the XCSoar and a QNH setting on the Vario, which can make sense for flights near airspace restrictions that are usually related to the standard .

Format see below, this format is also automatically sent to XCSoar and always evaluated there, regardless of the protocol driver set, as well as the standardized FLARM data.

The Borgelt datasets have the following format:

```
$PBB50,AAA,BBB.B,C.C,DDDDD,EE,F.FF,G,HH*CS<cr><lf>
```

AAA = TAS 0 to 150 knots

BBB.B = Vario, -10 to +15 knots, negative sign for sink

C.C = MacCready 0 to 8.0 knots

DDDDD = IAS squared 0 to 22500

EE = bugs degradation, 0 = clean to 30 %

F.FF = Ballast 1.00 to 1.60

G = 1 in climb, 0 in cruise, Note: Original Borgelt docu shows vice versa

HH = Outside airtemp in degrees celcius (may have leading negative sign)

CS = standard NMEA checksum

```
$PTAS1,xxx,yyy,zzzzz,aaa*CS<CR><LF>
```

xxx: CV or current vario. =vario*10+200 range 0-400(display +/-20.0 knots)

yyy: AV or average vario. =vario*10+200 range 0-400(display +/-20.0 knots)

zzzzz: Barometric altitude in feet +2000, related to QNH standard 1013.25 setting

aaa: TAS knots 0-200

CS: XOR Checksumme

Cambridge

Using the Cambridge (CAI302) format, other devices can be supplied with data, for example LX-Mini-Map, LK8000 and others that only understand this format. The Cambridge format supports synchronization of MC, Ballast Bugs and QNH (QNH from device only), but no AHRS information. All relevant data fields are supported, except for the wind vector, which is calculated in the cross-country flight program. This format is available in the current software versions, so far as an experimental format and only tested with XCSoar, further tests for other devices are necessary.

* Cambridge 302 Format

```
!W,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,<10>,<11>,<12>,<13>*CS<CR><LF>
```

<1> Vector wind direction in degrees

<2> Vector wind speed in 10ths of meters per second

<3> Vector wind age in seconds

<4> Component wind in 10ths of m/s + 500 (500 = 0, 495 = 0.5 m/s [tailwind](#))

<5> True altitude in Meters + 1000

<6> Instrument QNH setting

<7> True airspeed in 100ths of Meters per second

<8> [Variometer](#) reading in 10ths of knots + 200

<9> [Averager](#) reading in 10ths of knots + 200

<10> Relative [variometer](#) reading in 10ths of knots + 200

<11> Instrument MacCready setting in 10ths of knots

<12> Instrument Ballast setting in percent of capacity

<13> Instrument Bug setting

CS Checksum, XOR of all bytes of the sentence after the '!' and before the ''

XCVario

For the XCVario with AHRS, a separate protocol with its own "XCVario" device driver was developed in XCSoar, which combines the elements of the setup, the transmission of sensor data and the AHRS capability of the new series in a separate protocol.

The protocol has already been adopted in the XCSoar project and is already supported in the current releases (> 6.8.16). With the XCVario protocol, as with the Borgelt protocol, a bidirectional synchronization of MacCready value, ballast and bow as well as QNH (QNH only from the device) can be achieved, and the transmission of the AHRS sensor data for the position indicator (horizon) is also full supports.

The protocol consists of components of the Cambridge CAI302, Borgelt, and the OpenVario protocol.

The 2020 series also benefits from the newly added QNH synchronization, of course the AHRS data cannot be supplied by these devices.

```
/*  
    Sentence has following format:  
    $PXCv,  
    BBB.B, // Vario, -30 to +30 m/s, negative sign for sink  
    C.C, // MacCready 0 to 10 m/s  
    EE, // Bugs degradation, 0 = clean to 30 %  
    F.FF, // Ballast 1.00 to 1.60  
    G, // 1 in climb, 0 in cruise, Note: Original Borgelt docushows vice versa  
    HH.H, // Outside airtemp in degrees celcius ( may have leading negative sign )  
    QQQQ.Q, // QNH e.g. 1013.2  
    PPPP.P, // Static pressure in hPa  
    QQQQ.Q, // Dynamic pressure in Pa  
    RRR.R, // Roll angle  
    III.I, // Pitch angle  
    X.XX, // Acceleration in X-Axis  
    Y.YY, // Acceleration in Y-Axis  
    Z.ZZ, // Acceleration in Z-Axis  
    *CHK = standard NMEA checksum  
    <CR><LF>  
*/
```

Disable

With this selection, all NMEA transmissions from this menu item are switched off, e.g. if no device is present, or if only the NMEA data sets from other settings, e.g. only the data sets of the AHRS subsystem or the compass are of interest.

11. XCSoar

XC Soar is free open source software and can be installed on various systems, e.g. Android devices. These usually already contain a GPS receiver which provides sufficiently accurate GPS data for the current position or the speed over ground.

For a complete glider flight computer, however, further values such as dynamic pressure, TE nozzle pressure, static pressure are missing in order to be able to run a usable vario display or information for the cruise mode for the current speed to fly. The XCVario delivers exactly this data to XC Soar either wirelessly via WiFi or Bluetooth or a serial RS232 interface.

The XCSoar software runs on many platforms, including Android devices such as modern smartphones, e-book readers such as Kobo's, Android navigation systems with bright color displays and large screens, as well as many Linux-based systems, including Raspberry-PI and an OpenVario.

Ready-made devices are available on the market with sufficiently bright displays and touchscreens and are well suited for use in the cockpit. With the XCVario, advanced technology is available at an affordable price. There are also OpenVario hardware suppliers who are just as well suited to be combined with the XCVario. Various users prefer the XCVario to the OpenVario's native sensor box for various reasons.

In cruise mode, XCSoar can use the data from the XCVario to provide precise target flight information, and the wind calculation also works without any problems. All in all, XCSoar together with the XCVario offers a glider computer with the latest technology, intuitive touchscreen operation (on touchscreen devices), many screens full of features for thermal cranking, cruise mode, final approach with freely configurable info boxes, display of terrain with airspace including side view. Displays with topography and landing fields. There are also assistants for competitions, a vario with an acoustic function, speed command for MC or dolphin cruise mode and much more.

11.1. XCSoar Configuration

On the wireless device with XCSoar, e.g. tablet or smartphone, the XCVario can be integrated into the XCSoar application with just a few clicks. For this purpose, the device must have either Bluetooth or WiFi hardware on the hardware side. The XCVario will support both variants from December 2020.



11.1.1. Bluetooth

In order to establish a connection with Bluetooth, the XCVario must be set to Bluetooth in Setup/Options/[Wireless iVario-123]. This is the default.

First, the XCVario must be paired with the Android as a Bluetooth device.

To do this, perform a device scan in the Android device setup under Bluetooth, and first pair the Vario, which should appear there as XCVario-5678, for example, in the pairing dialog. The number (only three digits for the 2020 series) is the serial number of the device.

If a Bluetooth password is requested for older devices, this should be entered with "1234".

Then in XC Soar under Configuration/NMEA connection, a previously free connection A..F is to be set up (edit). If the XCVario is paired via Bluetooth, it can be found in the 'Connection' field with its Bluetooth ID, e.g.

XCVario-5678. Select this there and in the following dialog enter the desired driver, for current XCVario versions "XCVario". The switch K6Bt remains in the 'off' position. After acknowledging the dialog with "OK", XCSoar will connect to the vario within a few seconds, which will then appear as a regular NMEA connection, e.g. with the status "connected; Baro, Vario" is displayed.

The relevant records of the Vario should now be visible under 'Monitor', more details on this under Device drivers below. Only one device can be paired with Bluetooth at a time. Unfortunately, this is a limitation of the Bluetooth/RFCOMM protocol, and cannot be changed.

11.1.2. Wireless LAN

In order to set up a wireless LAN connection (also called wireless LAN, WLAN or WiFi), the XCVario must be set to wireless LAN in Setup/Options/[Wireless XCVario-1234]. If this is the case, you can register a wireless device, e.g. an Android device, on this WLAN. The network ID is identical to the Bluetooth ID, e.g. XCVario-5678. Pairing with WiFi is done by entering the password.



The WLAN password is: xcvario-21 all lowercase and with a hyphen (minus sign).

The XCVario is a pure data device and of course does not offer an interface to the Internet, which causes some devices to constantly search for better networks and, if successful, to switch to them.

In order to ensure a secure connection, for example if the Android device switches to WiFi when starting the clubhouse, the passwords for other WiFi networks should be deleted on the device for security reasons, or these networks should be deleted from the device or, if supported, these on the device be blocked.

While it is not possible to specify a second device driver with Bluetooth, this is possible when connecting via WiFi through different ports. The ports are permanently assigned to the interfaces in the Vario (see also the overview at the beginning of the document). It is also possible to connect up to 3 devices at the same time via WiFi. Two devices are possible without any noticeable loss of performance. The limitation in the software is 4 devices.

The XCVario offers a total of three ports for different drivers on one IP address.

The "TCP Client" option must be selected for the device connection, the IP address must be specified as 192.168.4.1 (the IP address of the server) and the ports assigned as shown in the following chapter.

XCVario TCP Ports

8880	XCVario sends sensor data according to the device driver set under NMEA protocol in the Vario
8881	FLARM if a FLARM is connected to the connector of the FLARM cable (connection S1-RS232), the data is exchanged on this port.
8882	From the XCVario Series 21, another device, e.g. a radio, can be controlled via this port on the second serial interface S2.

The Vario forwards the data to the device via its internal router. Here, the routing to "Wireless" must be activated on the corresponding serial interface. Details on the setting in the Router section, in the setup for wireless routing, and the RS232 interfaces.

11.1.3. Device driver

There are several device drivers on the XCVario page, more details on this in the previous chapter on setup under "Setup/NMEA protocol. To help you decide, here are a few explanations.

OpenVario

So far, all devices have been delivered with the default setting OpenVario. This protocol does not support any setting from or to the device, which is sufficient for many users or even desired, e.g. a security MacCready value should be set in XCSoar in order to receive information there for a safe arrival at the destination, and ballast or settings for Bugs are not an issue and the real-time display of the XCVario is used for the speed to fly. In the future, delivery will take place with the XCVario protocol.

OpenVario data example: `$POV,P,978.1,Q,0.0,E,-0.0,T,15.0*4F`

Borgelt

In order to enable an exchange of settings, which some users want, the Borgelt B50/B800 protocol was already implemented during the 2020 season (from software version 20.0815-21). This allows MC, ballast and bugs to be synchronized in both directions, but not QNH, since this is not part of the Borgelt protocol. But you don't necessarily need the altitude display on the XCSoar, and you can read the easy-to-read altitude value on the XCVario, in which case synchronization is not necessary. If you also want the altitude to be displayed in XCSoar, set the QNH on both devices before takeoff. Since the Borgelt does not support barometric altitude, an additional sentence is sent in the NMEA standard protocol "PTAS1" after each Borgelt sentence. XCSoar automatically evaluates standard NMEA sentences, which also transmits the altitude to the XCSoar flight computer.

Borgelt Daten Beispiel: `$PBB50,000,+0.1,3.7,0,0,1.00,0,25*65`
`$PTAS1,+0.1,+0.0,+3000,0*34`

Cambridge

This protocol was not developed with XCSoar in mind, but rather for end devices with a navigation program (Oudie, LX) which neither Borgelt nor XCVario supports. Basically, it doesn't offer much of an advantage over Borgelt. A synchronization of MC, ballast and bugs from the XCVario is thus possible in the same way. The XCVario transmits the true airspeed (TAS), altitude, variometer values and the QNH setting. If the connected device supports it, these values (except for QNH) can also be synchronized in the XCVario direction. Borgelt also uses the Cambridge protocol for these settings.

XCVario

The above variants have no way of transmitting information from the gyro sensor. Although there are some protocols that could do this (e.g. Eye-Sensorbox), any settings fall by the wayside. Something new therefore had to be developed for the 2021 series.

Today, the XCVario is delivered with the XCVario setting by default.

The new "XCVario" driver has been integrated in the last 6.8 versions and in the 7 versions of XCSoar (update via Google Playstore) since the 2021 season. In addition to the entire sensor system, including the AHRS position sensor, the XCVario protocol also supports the exchange of all settings, including QNH from the device in the direction of XCSoar. The QNH setting from XCSoar to the device is currently not possible, but is already supplied in the source code and is expected from version XCSoar 7.22.

XCVario Data example:

\$PXCv, -0.0,0.5,0,1.00,0,24.4,1012.0,962.0, 0.0,0.1, -3.2, -0.05,0.00,0.99*1C

XCVario commands:

The XCVario protocol supports various NMEA commands for setting, the first three are used to set the MacCready value and ballast and bugs and correspond 1:1 to the Cambridge format line termination. The commands for QNH and the speed-to-fly mode were based on the Cambridge data format, also contain a checksum, and continue to follow the NMEA standard, i.e. they are terminated with <CR> and <LF>. These enable the remote control of the XCVario, e.g. via XCSOAR controlled "sendNMEA1" events that can be defined in an .xpi file, e.g. controlled by an XCNAV or Stefly remote stick.

In addition, the landing gear warning can be triggered and stopped again via a command from an external device.

The following commands are supported at the moment:

CAI 302 Format: !g,<cmd><value><CR>	<value> Einheit	Zweck
!g,m15<CR>	tenth knots	Sets the MacCready value to 1.5 knots/s in the example
!g,b1<CR>	Ballast in % times 10, float also possible, e.g. !g,b2.25 = 22.5% ballast	Set the ballast to 10% as in the example
!g,u20<CR>	Percent pollution from bugs	Sets the pollution in example to 20%
!g,q1021<CR>	Hektopascal	Sets the QNH to 1021
XCVario Format: \$g,<cmd><value><CR><LF>		
\$g,s1*<cs><CR><LF>	0 = Vario, 1 = speed to fly	Sets the speed command mode to on in the example
\$g,v4*<cs><CR><LF>	Increase volume by <N> %	volume plus 4%
\$g,v-4*<cs><CR><LF>	Decrease volume by <N> %	volume minus 4%
\$g,rp*<cs><CR><LF>		Rotary short press
\$g,rl*<cs><CR><LF>		Rotary long press
\$g,ru*<cs><CR><LF>	1 step	Rotary left, Cursor up
\$g,rd*<cs><CR><LF>	1 step	Rotary right, Cursor down
\$g,w1*<cs><CR><LF>	<cs> = 0C	Start der Fahrwerks Warnung
\$g,w0*<cs><CR><LF>	<cs> = 0D	Stop der Fahrwerks Warnung


12. Installation

The XCVario has been kept simple in terms of installation and configuration.

The installation in the cockpit is therefore very easy. The pressures required for the XCVario can be connected to the instrument hoses of the mechanical instruments using 6 mm T- or Y-pieces. If these connections are not already available from a previous Vario, the instrument hose can be cut at a suitable point and the connection for the Vario can be made using a T-piece.

You will need:

- ST: Static pressure (= Static)
- PI: Total Pressure (= Pitot = overall pressure)
- TE: TE-probe pressure

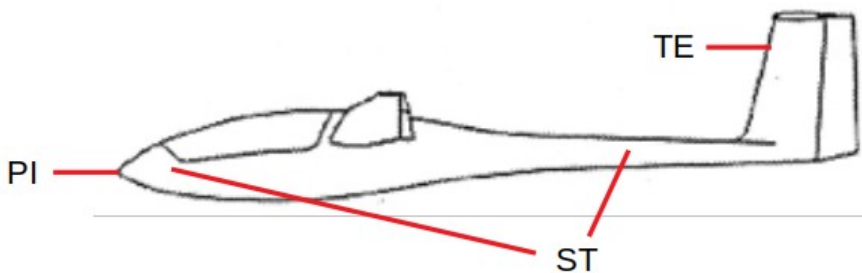


The pressures are usually hoses by the manufacturer behind the instrument panel, and are either already routed to match a previous device, or can be taken from mechanical instruments using a T-piece. PI and ST are on the airspeed indicator, TE usually on a mechanical variometer.

12.1.Rear panel connections, 2020 series

The electrical connections are made via the RJ45 connector and optionally for an external loudspeaker or audio input at the 3.5 mm audio jack socket on the back of the device.

Various cables are available with which the connection to the on-board power supply, the speed command switch, the temperature sensor and the connection to a FLARM via the serial RS232 can be established.

The pressure connections are to be attached to the 6 mm nipples according to the labels.

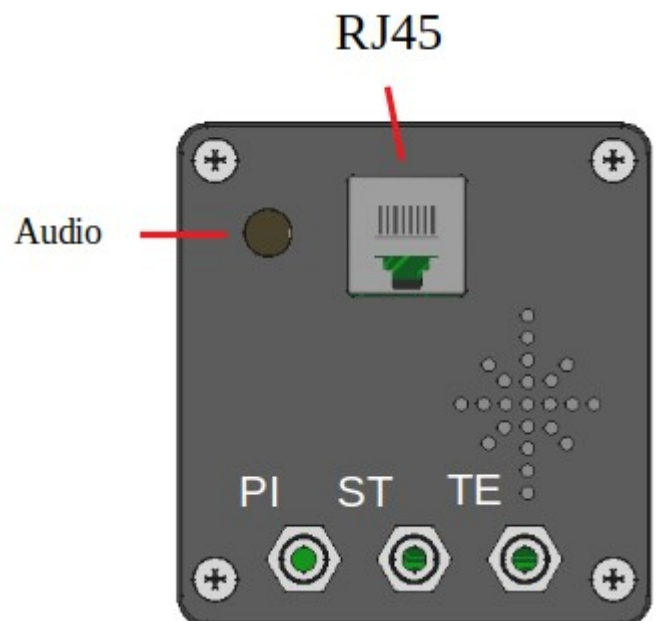

12.2. Connections rear panel, series 21&22

The electrical connections are identical to the 2020 series, S1 corresponds exactly to the single RJ45 connector as shown in the previous point.


From the 2021 series, there is an additional connection "S2" to which an additional device can optionally be connected. The assignment, see the chapter on the RJ45 connectors. The interface S2 has standard IGC assignment, the connection of individual devices such as the flap sensor or the magnetic sensor and can be done on S2 with 1:1 patch cables. The 80 mm variant has the same rear connections.

Caution: All **other devices** must be connected **via the S2 extender/splitter**. A direct connection of a Flarm, for example, to S2 can damage the CAN bus (from XCVario-22).

The supplied wiring harness may only be **connected to the S1** socket with the "**Vario**" labeled plug. Do not connect the Vario plug to the S2 socket either. If voltage is present, this can damage the temperature sensor in the cable on older revisions of the wiring harness.

Also, **do not connect** the end of the wiring harness that is labeled "**Flarm**" to the **XCVario**, this is intended for a Flarm IGC port and should remain unused if Flarm is not used.


A possible defect caused by demonstrably faulty wiring is not covered by the warranty.

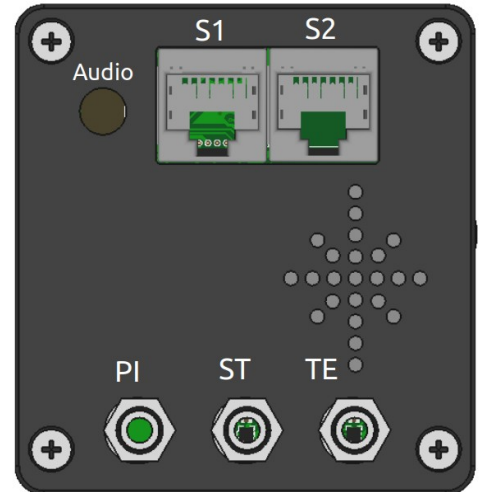

12.3. Installation and drilling plan

The 57 mm device (left) corresponds mechanically to the aviation standard for instruments with a diameter of 57 mm, the 80 mm device to the installation dimensions for 80 mm instruments. The holes for four M4 instrument screws should be at least 4.5 mm. The instrument screws must not protrude more than 10 mm into the housing. There is no guarantee of error-free operation if screws > 10 mm are screwed in by force. Depending on the thickness of the instrument panel, screws from M4x8 to a maximum of M4x10 are recommended. The exact dimension of the drilling circle for the mounting screws is 66.675 mm for the 57 mm device and 89.095 mm for the 80 mm device.


In the case of particularly thick instrument panels with a thickness of more than 2 mm, a small, preferably semi-circular niche with a width of 2 mm and a height of 14 mm must be created halfway up the side for the rotary button. Normally this is not necessary, since standard panels are approx. 2 mm thick.

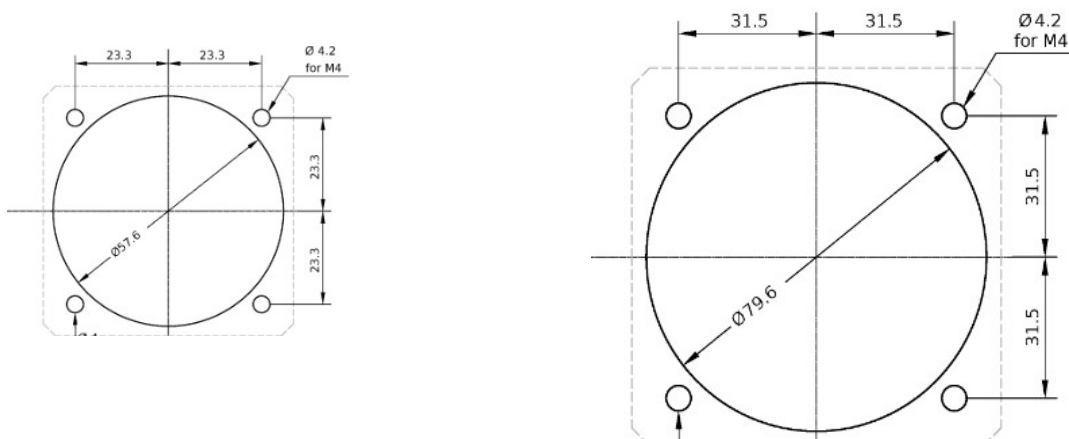

The 57mm device was developed for a 57mm bore and is optimally adapted for it. The 80mm device is more suitable for an 80 mm cut-out.

The installation of the 57 mm device in an 80 mm cut-out is still possible using our cover with threads and four shortened M4 screws or M4 screws and cap nuts on the front. The bezel is fastened as shown in the sketch with M4 countersunk screws from the back of the I-Panel (apply countersinks), against cap nuts on the front.


Alternatively, normal M4 instrument screws can be screwed in from the front and then the overhangs can be trimmed flush at the back with a saw blade, or the screws can be cut to length beforehand to suit the strength of the I-board plus the panel. A corresponding cover with threads in the 89 mm bolt circle is available in the shop.

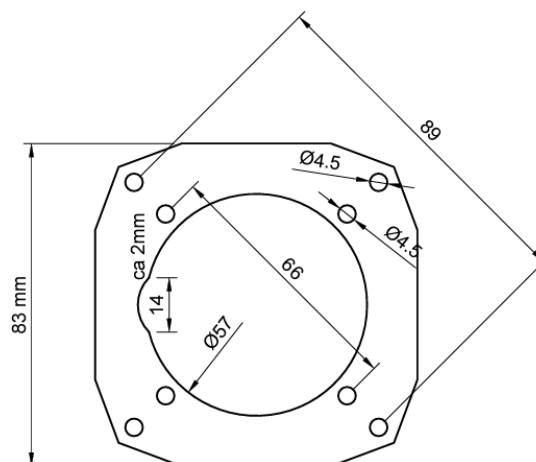

12.3.1. Drawing of the front part

The exact dimensions of the front part as interface to the instrument panel is shown below. The device is slightly asymmetrical towards the bottom, there is about 4 mm more space to be provided. If that is not possible, the device can also be turned 180 degrees, and the display can be rotated via the setup.

57mm device:

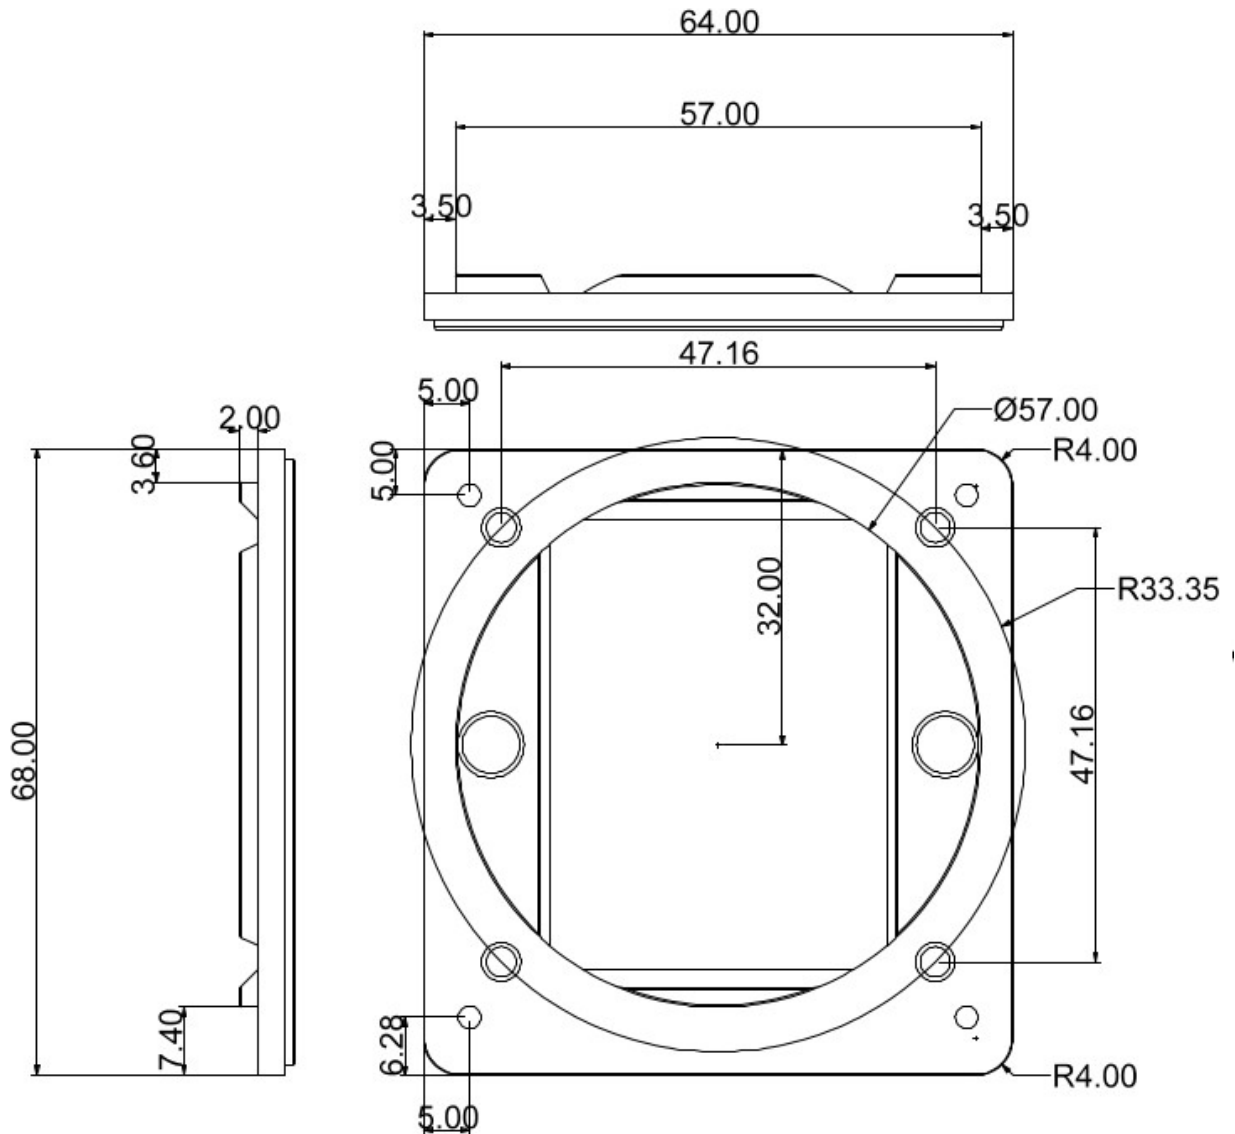

12.4. Micro USB

The device is programmed for the first time in the factory via the Micro USB-B connector on the sensor circuit board and is only accessible in the 20 and 21 series when the cover is removed. From the 22 series (57 mm), the USB-B connector is accessible on the top of the device, the opening is sealed with a sticker at the factory. The device can be connected to a PC via USB for diagnostics and can also be supplied with power via the PC. In order to establish contact with the serial interface of the ESP32, drivers for the serial USB converter chip CH340G may be required.

The connection is not required for operation as a variometer, nor for the OTA software update, which takes place via the ESP32 OTA WiFi connection.

12.5. Audio Output

A 3.5mm stereo jack offers an external output for the audio signal of the variometer. Either your own external speaker can be connected to it, or an audio input of a radio device can be used. Normally, the internal loudspeaker of the variometer is sufficient, but it can make sense to be able to hear the signal there, e.g. when operating with headsets, or to connect an external loudspeaker closer to the head in loud cockpits. The internal speaker switches off if an external audio device is plugged in.



The picture on the right shows the necessary audio plug, it is a standard 3.5 mm jack plug with tip, ring, sleeve (TRS), i.e. 3 connections. In the model in the drawing on the right, connector 1 is the tip, 2 is the ring, and 3 is the sleeve. The speaker is connected to connection 1 and 3. Port 2 remains unassigned (NC). If in doubt, measure the connector with a multimeter. The speaker must be connected between the tip and the ground pin.



Abbildung 1: Audio Stecker

Anschluss	Bezeichner	Lautsprecher
1	Tip, L	connection 1
2	Ring, R	NC
3	Sleeve, GND, Mass	connection 2

On the Vario side, the mono audio signal is also applied to connection 2 (ring), so it is not possible to use a mono jack plug (TS) with devices from the 2020 and some 2021 series, as this does not have an isolated ring between connection 2 and 3, and connects connection 2 to ground. From the 4/2021 series, i.e. devices from September 2021, the Vario signal is only output on connection 1, the alternative use of a mono plug is then possible.

12.6. Electrical connections

12.6.1. RJ45 connector S1

You can assemble your own RJ45 connector with suitable cables, or you can use a commercially available LAN patch cable, which has the following color coding. There are European (568A) and American (568B) standards, with differences in color coding. With the more common 568B cables, the positive pole is orange/white and the GND is brown. In addition, inexpensive cables with a ready-made temperature sensor and a plug for standard applications (standard IGC assignment, e.g. as with most FLARMS and loggers) can be obtained from the shop, which is recommended if you do not have any knowledge at this point.

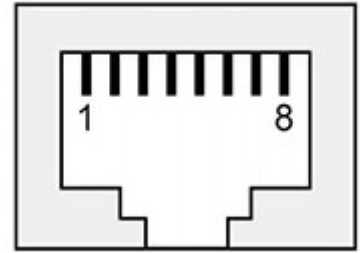


Abbildung 2: S1 FCC
Pinbelegung

Caution: The assignment at connection S1 with S2F switch and temperature sensor does not have an IGC assignment but is XC Vario-specific and different from S2. Only the XC Vario FLARM cable converts the assignment on the S1 appropriately, so that the IGC standard assignment (RJ45) required for the FLARM is available at the end of the FLARM cable. The RJ45 socket is shown in the figure above in a plan view from the rear. Pin 1 is therefore on the far left. The minimum connections required to operate the device in its basic function are shown in bold.

Interface S1

Pin# RJ45 FCC	Pin# RJ45 IGC	identifier	direction	cable colors 568B
1	8	Plus 8..28 VDC	↔	orange-White
2	7	RS232 TTL RX	↔	orange
3	6	RS232 TTL TX	→	green white
4	5	Vario/Speed to Fly Switch	↔	blue
5	4	T-Sensor +3.3 VDC	→	blue White
6	3	T-Sensor Data	↔	green
7	2	GND	↔	brown-white
8	1	GND	↔	braun

Temperature sensor:

The temperature sensor must be connected to the three pins 5, 6 and 7 provided with the RJ45 cable of the corresponding color. The temperature sensor is part of the FLARM cable.

Speed to Fly switch:

The vario/speed command switch is to be connected to pin 4 of the RJ45 and to ground pin 8. If the switch is closed, target travel is selected. The function can also be changed in the setup, i.e. when the switch is closed, Vario mode is selected.

FLARM

The FLARM is the standard configuration for the Interface S1 and can be connected to the XCVario with the standard FLARM cable. With the simple FLARM cable, only the direction FLARM is connected to XCVario (Series 20), i.e. only pin 4 in FCC numbering. These cables are no longer offered. The bidirectional FLARM cable is required for bidirectional communication with the FLARM (standard from series 2021). This enables e.g. the flight declaration in FLARM via the navigation system (e.g. XCSoar).

Below is the assignment at the FLARM end of the standard cable, the minimum connections required for receiving FLARM data are shown in bold.

Pin# RJ45 FCC	Pin# RJ45 IGC	XCVario FLARM Cable End	FLARM with RJ45 Interface
1	8	GND	GND
2	7		GND
3	6	RS232 TX	RS232 RX
4	5	RS232 RX	RS232 TX
5	4		
6	3		
7	2		+8..28 VDC
8	1	+8..28 VDC	+8..28 VDC

12.6.2. RJ45 connector S2

From series 2021, the hardware has the second electrical RJ45 connector "S2" with standard IGC assignment for the serial port, plus an additional input/output for a flap sensor and for a CAN bus (2).

A Strefly OpenVario, a FLARM in various versions, a Volkslogger, a radio device or any other device supported by XCSoar can be connected to the serial interface, pins 3,4 with a 1:1 patch cable. If the connected device does not have a standard IGC RJ45 plug, this should be done with a specially made specific cable. There are sources on the Internet for various devices. A customer-specific cable can usually be made by yourself according to the requirement, XCVario provides support for this. All connections on the S2 are optional for stand-alone operation of the device.

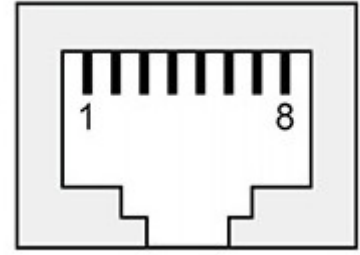


Abbildung 3: S2 FCC Pinbelegung

Interface S2

Pin # RJ45 FCC	Pin # RJ45 IGC	identifier	direction	568A	568B	connection
1	8	GND	⊞	grün-weiss	orange-White	Bordnetz Masse
2	7	GND (1)		grün	orange	-
3	6	RS232 TTL TX	⊞	orange-weiß	green white	Navi Serial RX
4	5	RS232 TTL RX	⊞	blau	blue	Navi Serial TX
5	4	CAN-L (2)	⊞	blau-weiß	blue White	-
6	3	analog input	⊞	orange	green	0 ..1.2 volt voltage against GND
7	2	CAN-H (2)		braun-weiß	brown-white	-
8	1	+8..28 V	⊞	braun	braun	electrical system +12VDC

1) From series 2021/2 available since June 2021

2) From series 2021/3 available since October 2021

Flap sensor

The hardware of the 2021 series has an analog input for various functions. The application of the WK sensor and its manufacture are described here.


Please note: The analog input can only be used in Bluetooth mode due to a limitation in the first series 2021. For applications that require WiFi mode, the hardware will be required from March 2021.

The flap sensor is mounted in a suitable position near the flap linkage, e.g. in a small box, and fixed to the fuselage wall with 5-minute epoxy, and attached to the flap linkage using a driver pressed onto the potentiometer plus an M3 ball joint rod. Under no circumstances should the linkage be drilled into.

The driver on the potentiometer must be long enough, the guide value is about the distance covered by the WK linkage. The linkage must not be blocked. Adhesive methods are also suitable for attachment to the linkage, or a clamp that encloses the linkage with a strip of GRP and an M2 screw for the ball head. The driver on the potentiometer can be made, for example, from a 2-3 mm thick epoxy plate or aluminum sheet which is pressed onto the 6 mm axis of the potentiometer and glued (epoxy resin). The ball joints and a secured screw are connected. Since these mechanics are highly dependent on the aircraft type, it is easiest to adjust these parts on site during installation, the parts are standard and can be obtained as follows. A suitable sensor is now also available in the shop.

For others

- 1x ABS-housing; voelkner.de: A403151 o.ä. (Hole 12mm and notch 20x18 mm attach)
- 2x Aluminum clevis with internal thread M3; voelkner.de: A59085
- 1x threaded rod 3mm; voelkner.de: A24701
- 1x GFK Platte 3mm; voelkner.de: A03670
- 1x connection cable [Flexible Network Cable Patch Cable](#); amazon.de (Measure length and order appropriately)

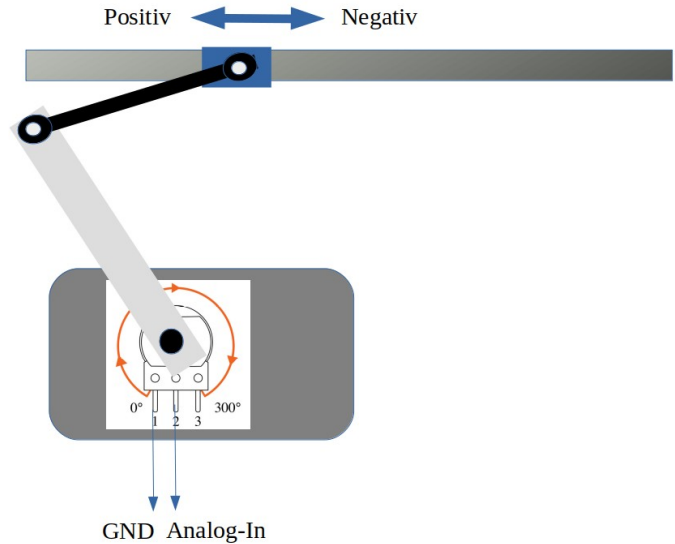

12.6.3. Stefly OpenVario

The Stefly OV can be connected to the XCVario directly at ttyS1 or ttyS2 with a 1:1 cable at S2 or with the FLARM of the standard cable at S1. The XCVario is fed directly via the OpenVario. Supplying the OpenVario with power from the XCVario is not recommended, because the OpenVario with its large display and higher power consumption is better suited as a supplier. In this case, the power supply (connection to the vehicle electrical system) of the XCVario at connector S1 remains unused. If you want to supply the two devices separately, which can make sense in order to switch them off individually in the event of a power shortage, or to protect each device with its own fuse, the +12V connection in the patch cable must be disconnected, and the XCVario supply must be disconnected from the power cables to be executed at S1.

Another option is to use the ttyS0 on the OV, in this case the RX and TX pins on the Sub-D connector of the OV, as well as ground, must be connected to the serial interface of the XCVario at S1 or S2.

The RX/TX pins on the variometer must be set to "Twisted" for this application in "Setup/System/RS232 Interface S[1|2]" under "Twist RX/TX Pins". The default here is "Normal". The baud rate must be set the same at both ends. All other serial interface settings remain unchanged.

The Flarm can be plugged directly into the OV, or it can be forwarded to the OV via the Vario. See also the settings for routing on the two serial interfaces. The pins shown in bold are the minimum necessary to display the data from FLARM on the OV.

Pin RJ45 FCC	Pin # RJ45 IGC	XCVario S1 FLARM or S2	Stefly OV ttyS1 (o. ttyS2)
1	8	GND	GND
2	7	NC	GND
3	6	RS232 TTL RX	OV TX
4	5	RS232 TTL TX	OV RX
5	4	-	-
6	3	-	-
7	2	-	+8..16 VDC
8	1	+8..16 V	+8..16 VDC

As a cable to the OV, XCVario recommends an RJ45 standard cable 8p8c, i.e. 8pin with 8 connections, with assignment 1:1, as is often used in network technology, search for the following term on google or amazon: [Flexible Network Cable Patch Cable](#).



As a rule, a length of 0.5 meters is sufficient between the two devices on the I board.

Caution: Wiring with an **XCVario-22** to the **OV** **always requires the S2 splitter**, as the OV also supplies +12V on pin 7 and the CAN bus can otherwise be damaged (no guarantee if an OV is connected directly to S2). The OV

is connected to the RS232 splitter port. If the **+12V supply** to the OV is to be completely **suppressed**, the Y-piece must be inserted and both **jumpers for pin 7 and 8 pulled** there in order to only establish the data connection between the two devices.

With two XCVarios and two OVs in a double-seater, the hoses only need to be connected to the front device, the data from the front device can be forwarded to the second device via the CAN bus.

To do this, the splitter is connected to S2 on the front device. The patch cable from the front device to the splitter should not exceed 50 cm in length, the shorter the better to rule out interference. The second device can then also be connected to the CAN port of the splitter via S2 with a patch cable of the appropriate length. In this case, the supply runs via the patch cable from the first device and therefore does not have to be wired explicitly for the second display.


The cables should be as flexible as possible so that no great forces are exerted on the plugs, and no longer than necessary for the connection.

Another flap sensor can be connected to the splitter, and with the help of an additional 1:1 RJ45 Y-piece on the CAN bus after the splitter, a CAN magnetic sensor is also possible.

12.6.4. KRT2 / ATR 833 Radio

The connection to a radio of the type KRT2, or another model if the navigation device (e.g. XCSoar) has a driver for it, can be established serially with a 21 or 22 model via S2. The baud rate should be set to **9600** baud. Everything else in the **S2 setup** remains on **default**. To do this, make the connection from S2 pin 3 and 4 to the corresponding serial RX/TX of the KRT2, it is best to solder it there to the existing KRT2 Sub-D connector, to pin 2 and 13, crossed, i.e. RX to TX and TX to RX as follows wire:

- XCV 3 (TX) <-> 13 KRT2 (RX)**
- XCV 4 (RX) <-> 2 KRT2 (TX Remote)**
- XCV 1 (GND) <-> 1 KRT2 (GND)**

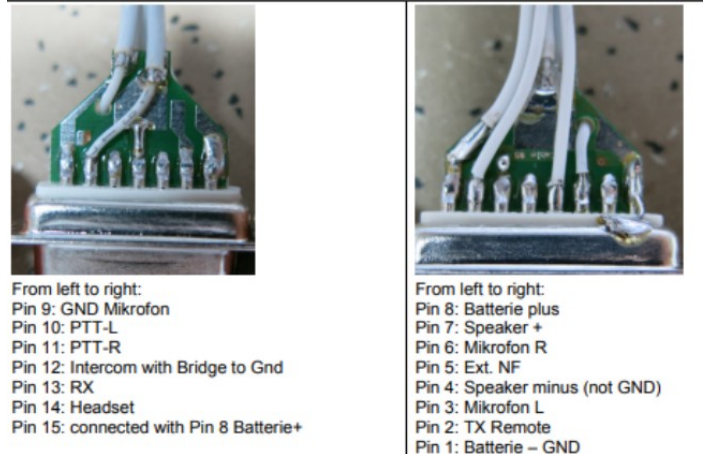


The setting for S2 routing must be set to wireless so that the data is routed there. The software connection with the XCVario is only possible in WiFi mode (which may have a few disadvantages, see the Wireless LAN manual), via the TCP client with port 8882. Configure the driver for the KRT2 in the navigation system there.

Unfortunately, a connection via Bluetooth is not possible aside of XCVario because XCSoar can only configure one driver for an interface and only one Bluetooth connection to a device is possible. Alternatively, to stay with Bluetooth, there is the option of connecting the KRT2 to the XCSoar as a separate BT device via an external Bluetooth bridge. BT bridges are available from many manufacturers, or here in the shop: <https://xcvario.com/product/serial-bluetooth-WiFi-adapter/>

The pin assignments and connections on the ATR833 are as follows:

- XCV 3 green/white (TX) <-> 9 ATR 833 (Data RX)**
- XCV 4 blue (RX) <-> 22 ATR 833 (Data TX)**
- XCV 1 orange/white (GND) <-> 25 ATR 833 (GND)**

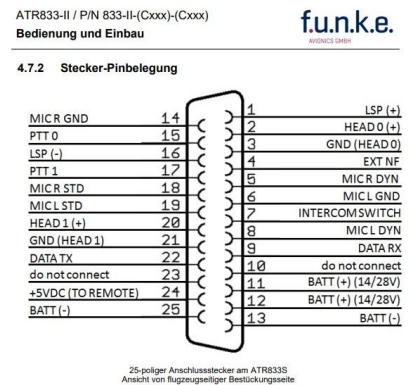

12.6.5. Temperature sensor

The temperature sensor is a ready-made Dallas DS1820B sensor with a waterproof casing and a 1 meter long cable. The sensor has three colored lines, which are usually coded with the colors red, yellow and black. If you use your own sensor, the manufacturer's instructions must be observed.



Ready-made cables with sensors are available in the shop and can be ordered as accessories. To measure the outside temperature, the sensor is placed in the front vent.



This can also be done in the ventilation pipe if available. In this case, a small slit is cut with a cutter knife, the temperature sensor is pushed in and sealed with aluminum adhesive tape or silicone, for example.

12.6.6. Power Supply

The power supply is connected to the vehicle electrical system. A single fuse for a variometer is not mandatory for gliders, but is recommended. The wiring can be done with copper strands from 0.14 mm², 0.25 mm² is recommended. Alternatively, the XCVario can be connected in parallel to another device that is fused with at least 0.5, better 1 ampere. The device must be protected because the plug and cable are not designed for higher currents. The device tolerates voltages in the range of 5-28 volts, a supply of 12 volts is ideal. If the device is operated without any protection plus an external short circuit, e.g. at S2, internal damage is to be expected which is not covered by the guarantee. It is therefore essential to also secure it on the laboratory bench for test purposes.



The XCVario is protected against polarity reversal and is internally protected against transient overvoltages such as ESD discharges and induction peaks when starting. In general, the avionics should be left switched off when starting, if it cannot be avoided, e.g. when starting during the flight, you have to rely on the overvoltage protection.

12.6.7. Vario / Speed to Fly Switch

The vario S2F switch can be attached to the stick or in the instrument panel. Its second pin must be connected to ground (negative pole supply). With ground contact at pin 4, the vario is in speed to fly mode, with an open switch in vario mode. The speed command display is constantly in operation, but the tone generator changes to speed command as input. A button can also be used instead of a switch. In this case, the switch type must be set accordingly in the setup.



The switch is not absolutely necessary, as it is possible to automatically switch over to S2F from a certain speed. This can be achieved in the Audio/AudioMode menu with the "Autospeed" setting. The "AutoSpeed" is the speed above which the variometer switches to the S2F mode.

12.6.8. RS232 Interface



The RS232 interface is used either to connect a device without wireless (Bluetooth or WiFi) support (OpenVario, older Kobo), or to connect a FLARM as shown above.

With a bidirectional cable (RX and TX direction connected), a flight task can also be declared in FLARM, the FLARM can be managed, or a flight download can be carried out. For the cable, see the description in the chapter on cable assembly. The FLARM application is preset, no settings need to be made on the serial interface in the setup.

In principle, only one device can be connected to a serial interface. This is a limitation of the RS232 protocol. Exceptions to this are the flap sensor, which has an additional pin connected to S2 (pin 6), ie can be connected via an RJ45 splitter 8P8C, as shown on the right, and a second device which is connected unidirectionally, ie the second device only reads, ie its TX line is not connected to the Vario. The same applies to the other end, e.g. only one device may be connected to a Flarm, unless the second device does not have a transmission direction (TX) to the Flarm. This requires special cables, which not all have connections.



In the case of an OpenVario on the serial interface, the "XCVario" data is needed on the serial interface, which can be set in the setup of the "RS232 Interface S1" under "TX Routing". More information in the setup description.

12.7. Comparison IGC- and FCC Standard

The RJ45 sockets are numbered in the document according to the international standard of the Federal Communications Commission (FCC). There is also the IGC standard for interfaces for reading out loggers. The XCVario's S2 interface follows the IGC standard exactly, but primarily uses the standard FCC numbering. For comparison, the IGC numberings are also mentioned in an extra column.

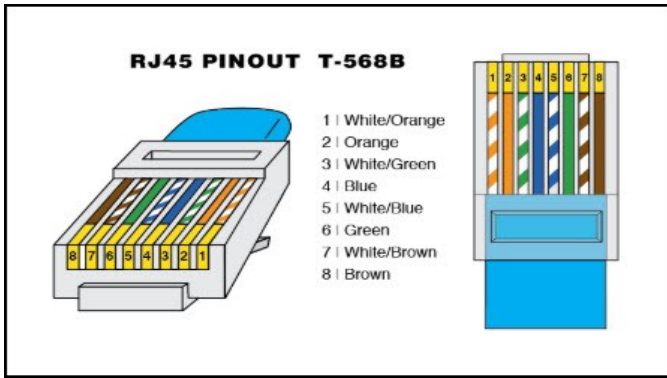


Abbildung 4: FCC-Standard

<u>RJ-45 Pins</u>	<u>Function</u>
1&2	Volts +
3&4	Spare, for future application with GFAC approval
5	Data out
6	Data in
7&8	Earth (Volts -ve)

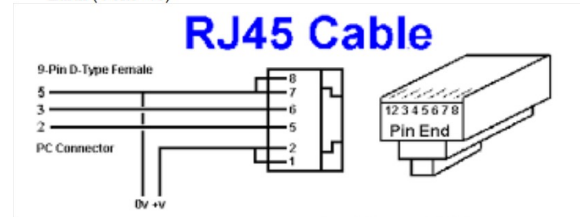


Abbildung 5: IGC-Standard (verkehrt)

Figure 4 on the left shows the FCC standard, which designates the first pin in the top view of the connector as pin 8. Next to it on the right in Figure 5 is the wrongly numbered IGC standard (source: TECHNICAL SPECIFICATION FOR IGC-APPROVED GNSS FLIGHT RECORDERS - Second Edition with Amendment 6 25 November 2020). There the numbering of the first pin on the connector on the left begins with pin 1.

In order to assess whether the pin assignment of a device fits, when reading a document it is therefore always necessary to check which standard the numbering follows, it is the IGC standard, the + 12V are numbered with pins 1 and 2 on the left in the top view of the plug, with the FCC By default, the +12V are of course also on the left, but are numbered with pins 7 and 8. Below is the table with a comparison of both numbering systems with a comparison.

The IGC's incorrect numbering, which differs from the FCC, causes confusion in many cases. Manufacturers all over the world number components, CAD symbols or cables according to the FCC standard, as do avionics equipment manufacturers again. You cannot estimate whether the assignment is correct with the pin number alone. A drawing of the plug must therefore always be taken into account.

Comparison of the pin numbers of the FCC and the (wrong) IGC standard:

Signal	RJ45 FCC Standard Pin#	RJ45 IGC Standard Pin#
Volts +	7+8	1+2
Data out (TX)	4	5
Data in (RX)	3	6
Earth (GND)	1+2	7+8

13. Technical specifications

Power supply	8-28V DC
Voltage recommended	10-18V DC
Current consumption at 12.5V typical	70 mA = 0.9 Watt 100 mA =1.2W (Wireless connected) 120 mA =1.5W (XCV-23, heating on) 250 mA = 2.5W (max Volume)
Bluetooth Standard	V4.2, EDF, classic Bluetooth
WiFi Standard	802.11 b/g/n <i>Wi-Fi</i> MAC Protokoll
Variometer range	+ - 1m/s bis +-30m/s
Baro and TE pressure sensor resolution	0,01 hPa (0,1 m)
Baro sensor relative accuracy	0,12 hPa (1 m)
Baro sensor absolute accuracy	1 hPa (8 m)
Barometer range	0-9.000 m calibrated bis 16.000 m uncalibrated
Dynamic pressure sensor accuracy at 100 km/h	1 km/h
Dynamic pressure sensor area	10 – 280 km/h
Temperature sensor area	-10..85 °C
Temperature sensor accuracy	+ -0.5 °C
Case dimensions (width x height x depth)	64x68x35 mm (5) 80x80x35 mm (8)
Section in the instrument panel	57 mm (5) 80 mm (8)
Electrical connection	2x RJ45 Main socket 8 pin
RJ45 / RS232 Interface S1	RS232 RX/TX (TTL level 3.3V)
RJ45 / RS232 Interface S2 (IGC Standard)	RS232 RX/TX, CAN Bus, Analog In 0..1V
RJ45/ OneWire Interface	OneWire bus interface for temperature sensor with 3.3V power supply (470 ohm series resistor for short-circuit protection)
CAN Interface (2)	250 kBit..1MBit CAN Bus
USB Interface	Micro USB-B
Audio output	2 watt power (3) 3.5 mm stereo jack switched, disables internal speaker
Pneumatic connections	Three 6 mm nipples for PVC hose 8x1.5 mm (5 mm inner diameter)

Weight	165 g (5) 235 g (8)
--------	------------------------

- 1) From 2021 series hardware
- 2) From series 2021/3 (October 21)
- 3) 2020 series with 1.2 W power
- 5) 57mm Modell
- 8) 80mm Modell

14. Maintenance

The variometer does not require any further maintenance, since a regular leak test of the instrumentation is normally required as part of the maintenance program (IHP/AMP) of the aircraft. This is usually to be carried out at least once a year. This also covers the test of the variometer. Of course, a test is carried out in the factory, but this does not include the instrument hoses on the aircraft, as well as their aging and the aging of O-rings in the variometer itself. If the test for leaks is missing in the program, a corresponding supplement should be made.

15. Warranty Policy

For the Vario, the manufacturer provides a guarantee of two years from the date of purchase with regard to the effort and material costs of the repair. Within this period, components that fail under normal operating conditions will be repaired or replaced free of charge, provided the device was sent to the manufacturer free of charge.

The warranty does not cover damage resulting from misuse, abuse, accidents, unauthorized modifications or repairs, lack of maintenance, proven incorrect or faulty wiring.

According to the German Civil Code, the return can be made within 14 days of the date of purchase. In this case, the device and its accessories must be returned by the buyer to the address from which it was delivered. The buyer bears the costs for this.

16. Permit

For each instrument, if the equipment is part of the minimum equipment list or requires approval, it may only be installed if the supplier or manufacturer provides a document on the proper check for compliance with the respective specification of the individual piece of equipment, area of EASA this is usually the EASA Form One.

For all other equipment, as well as for standard parts, a corresponding examination and documentation of the same is not required (e.g. variometer, final approach computer, flight data recording devices, navigation computer, additional antennas, batteries, cameras, additional pressure probes, mosquito cleaning systems, etc.). This is regulated in detail by EASA in AMC 21.A.303(c) 2, with the following wording:

AMC 21.A.303(c) Standard Parts

1. In this context a part is considered as a **‘standard part’** where it is designated as such by the design approval holder responsible for the product, part or appliance, in which the part is intended to be used. In order to be considered a ‘standard part’, all design, manufacturing, inspection data and marking requirements necessary to demonstrate conformity of that part should be in the public domain and published or established as part of officially recognized Standards, or
2. For sailplanes and powered sailplanes, where it is a **non-required instrument** and/or equipment certified under the provision of CS 22.1301(b), if that instrument or equipment, when installed, functioning, functioning improperly or not functioning at all, does not in itself, or by its effect upon the sailplane and its operation, constitute a safety hazard.

‘Required’ in the term ‘non-required’ as used above means required by the applicable certification specifications (CS 22.1303, 22.1305 and 22.1307) or required by the relevant operating regulations and the applicable Rules of the Air or as required by Air Traffic Management (e.g. a transponder in certain controlled airspace).

Examples of equipment which can be considered **standard parts are electrical variometers**, bank/slip indicators ball type, total energy probes, capacity bottles (for variometers), final glide calculators, navigation computers, data logger / barograph / turnpoint camera, bug-wipers and anti-collision systems. Equipment which must be approved in accordance to the certification specifications shall comply with the applicable ETSO or equivalent and is not considered a standard part (e.g. oxygen equipment).

This means that no EASA Form One is required for the vario, and it can be installed.

After installation, the system must be checked for leaks, the equipment list of the aircraft must be adjusted, and if a relevant change in center of gravity can be determined due to the mass of 0.17 kg more in the I-board, a weighing must be carried out and the change approved.

17. Limitation of Liability

With the purchase of the device, the customer agrees that no liability for any direct or indirect damage, claims for damages or consequential damages of any kind and on any legal basis arising from the use of the device.

The device is a purely cross-country flight tactical device, so it is not part of the required instrumentation for gliders, and in case of doubt it must not be used as the primary source for controlling the aircraft, especially in critical flight phases. The target instrumentation is to be used for this. The device therefore does not require any FAA or EASA approval.

18. CE Declaration of Conformity



DECLARATION OF CONFORMITY

XCVario, owner Dipl. Ing (FH) Eckhard Völlm, Panoramastr. 86/1, D-71665 Vaihingen/Enz, explains that in the normal configuration the variometer hardware meets the requirements of the CE, see also the certificate of the ESP32 WROOM-32 module:

<https://www.espressif.com/sites/default/files/Espressif%20Systems%20ESP32-WROOM-32E%20CE%20B2004079%20RED%20Final.pdf>

The EMC compatibility corresponds to EN 301 489-3:2002-08 for a Class 3 SRD device (equipment type I).

19. Appendix

19.1. Sink rate depending on the load factor

Attached is the derivation of the equations for the calculation of the accelerated polar in the XCVario.

A glider loses energy due to its drag at a rate equal to the work of the current drag.

$$\frac{dE}{dt} = D V$$

E = Total energy of glider

D = Drag

V = True Airspeed

Glider total energy variation is equal to the variation of energy per unit of weight:

$$\frac{1}{mg} \frac{dE}{dt} = \frac{dH}{dt} + \frac{V}{g} \frac{dV}{dt} = Sink(V)$$

H = Height

$Sink(V)$ = glider sink rate at speed V

m = mass

g = gravitational acceleration (9,81 m/s²)

Therefore, $Sink(V) = \frac{D V}{mg}$

For a glider flying at constant speed V and mass m the only variable is the drag, therefore we can generalize:

$$Sink_n(V) = \frac{D_n V}{mg}$$

$Sink_n(V)$ = sink rate at mass m , speed V and load factor n

n = load factor

D_n = drag at mass m , speed V and load factor n

$n mg = L_n$, apparent weight = Lift under g load

$$Sink_n(V) = n \frac{D_n V}{L_n} = n V \frac{Cd_n}{Cl_n} \quad (1)$$

Cd_n = coefficient of drag at mass m , speed V and load factor n

Cl_n = coefficient of lift at mass m , speed V and load factor n

The following demonstration only considers the primary effects from static conditions and ignores the secondary dynamic effects, which occur during glider incidence variations.

If a glider of mass m , flying at speed V , increases the load factor from 1 to n , it must increase the lift coefficient from Cl to $Cl_n = n Cl$ to maintain required lift.

If we use the equation of lift:

$$nmg = \frac{1}{2} \rho S V^2 Cl_n \quad (2) \quad (\text{https://www.flight-training-made-simple.com/post/the-lift-formula})$$

Cl_n corresponds to the speed polar point for the glider flying at mass m , load factor n and speed V

Rearranging the equation (2)

$$mg = \frac{1}{2} \rho S \left(\frac{V}{\sqrt{n}} \right)^2 Cl_n$$

ρ = air density constant, equals to 1,2041 kg/m³ at 20 °C

S = wing area

Cl_n also corresponds to the same speed polar point for the glider flying at mass m, load factor 1 and speed $\frac{V}{\sqrt{n}}$

Speed polars, usually available from glider manufacturers at load factor n =1, deliver the gliders unaccelerated sink speed $Sink(V)$, as source for our calculations.

Using equation (1) and expanding the it by \sqrt{n} we get:

$$Sink_n(V) = n V \frac{Cd_n}{Cl_n} = n \sqrt{n} \left(\frac{V}{\sqrt{n}} \frac{Cd_n}{Cl_n} \right)$$

We can change expression $\frac{V}{\sqrt{n}} \frac{Cd_n}{Cl_n} = \frac{V}{\sqrt{n}} / \frac{Cl_n}{Cd_n}$ and plus the simplification $n \sqrt{n} = \sqrt{n}^3$ we get:

$$Sink_n(V) = \sqrt{n}^3 \frac{V}{\sqrt{n}} / \frac{Cl_n}{Cd_n} \quad (3)$$

Taking $\frac{Cl_n}{Cd_n}$ as needed for accelerated speed at point $\frac{V}{\sqrt{n}}$ from the polar, using again eq (1) we can also write:

$$Sink\left(\frac{V}{\sqrt{n}}\right) = \frac{V}{\sqrt{n}} / \frac{Cl_n}{Cd_n} \quad (4)$$

therefore with (3) equals (4) we get:

$$Sink_n(V) = \sqrt{n}^3 Sink\left(\frac{V}{\sqrt{n}}\right)$$

We can conclude that the sink rate of a glider at speed V under load factor n is:

$$Sink_n(V) = \sqrt{n}^3 Sink\left(\frac{V}{\sqrt{n}}\right) \quad (5)$$

Expressing sink rate by the second order approximation:

$$Sink(V) = a_0 + a_1 V + a_2 V^2 \quad (6)$$

And with (5) in equation (6) we get:

$$Sink_n(V) = \sqrt{n}^3 \left(a_0 + a_1 \frac{V}{\sqrt{n}} + a_2 \left(\frac{V}{\sqrt{n}} \right)^2 \right) \quad (7)$$

finally equation (7) simplified to be ready to get crunched:

$$Sink_n = a_0 \sqrt{n}^3 + a_1 n V + a_2 \sqrt{n} V^2$$

The following graph shows the effect of acceleration to the polar:

